



# **Maintenance and Service Guide**

HP Compaq nc4200 Notebook PC

Document Part Number: 383207-001

March 2005

This guide is a troubleshooting reference used for maintaining and servicing the notebook. It provides comprehensive information on identifying notebook features, components, and spare parts; troubleshooting notebook problems; and performing notebook disassembly procedures.

© Copyright 2005 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Intel, Pentium, and Celeron are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Maintenance and Service Guide  
HP Compaq nc4200 Notebook PC  
First Edition March 2005  
Document Part Number: 383207-001

---

# Contents

## **1 Product Description**

1.1 Features . . . . .	1-2
1.2 Resetting the Notebook . . . . .	1-4
1.3 Power Management . . . . .	1-5
1.4 External Components . . . . .	1-6
1.5 Design Overview . . . . .	1-20

## **2 Troubleshooting**

2.1 Computer Setup . . . . .	2-1
2.2 Troubleshooting Flowcharts . . . . .	2-7

## **3 Software Update and Recovery**

## **4 Illustrated Parts Catalog**

4.1 Serial Number Location . . . . .	4-1
4.2 Notebook Major Components . . . . .	4-2
4.3 Miscellaneous Plastics/Hardware Kit . . . . .	4-10
4.4 Miscellaneous Cable Kit . . . . .	4-11
4.5 Miscellaneous (Not Illustrated) . . . . .	4-12
4.6 Sequential Part Number Listing . . . . .	4-13

## **5 Removal and Replacement Preliminaries**

5.1 Tools Required . . . . .	5-1
5.2 Service Considerations . . . . .	5-2
5.3 Preventing Damage to Removable Drives . . . . .	5-3
5.4 Preventing Electrostatic Damage . . . . .	5-4
5.5 Packaging and Transporting Precautions . . . . .	5-5
5.6 Workstation Precautions . . . . .	5-6

5.7 Grounding Equipment and Methods . . . . .	5–7
---	-----

## **6 Removal and Replacement Procedures**

6.1 Serial Number . . . . .	6–1
6.2 Disassembly Sequence Chart . . . . .	6–2
6.3 Preparing the Notebook for Disassembly . . . . .	6–4
6.4 Hard Drive . . . . .	6–6
6.5 Notebook Feet . . . . .	6–9
6.6 Bluetooth Module . . . . .	6–10
6.7 External Memory Module . . . . .	6–12
6.8 TPM Security Card . . . . .	6–15
6.9 Keyboard Cover . . . . .	6–16
6.10 Keyboard . . . . .	6–19
6.11 Fan . . . . .	6–23
6.12 Heat Sink . . . . .	6–24
6.13 Processor . . . . .	6–28
6.14 Internal Memory Module . . . . .	6–30
6.15 Mini PCI Communications Card . . . . .	6–32
6.16 Display Assembly . . . . .	6–34
6.17 Button Board . . . . .	6–41
6.18 Top Cover . . . . .	6–45
6.19 TouchPad . . . . .	6–49
6.20 Speaker . . . . .	6–53
6.21 Infrared Board . . . . .	6–55
6.22 System Board . . . . .	6–57
6.23 Modem Board . . . . .	6–61
6.24 RTC Battery . . . . .	6–63

## **7 Specifications**

### **A Connector Pin Assignments**

### **B Power Cord Set Requirements**

### **C Screw Listing**

### **Index**

---

## Product Description

The HP Compaq nc4200 Notebook PC offers advanced modularity, Intel® Pentium® M and Celeron® M processors, and extensive multimedia support.



*HP Compaq nc4200 Notebook PC*

## 1.1 Features

- Intel Pentium M 2.13-, 2.00-, 1.86-, 1.73-, or 1.60-GHz processors, or Intel Celeron M 1.50-GHz processor, varying by notebook model
- 12.1-inch, XGA, TFT (1024 × 768) display with over 16.8 million colors
- 80-, 60-, or 40-GB high-capacity hard drive, varying by notebook model
- 256-MB DDR2 synchronous DRAM (SDRAM) at 400 MHz and 533MHz, expandable to 2.0 GB
- Microsoft® Windows® XP Home Edition or Windows XP Professional, varying by notebook model
- Full-size Windows keyboard with embedded numeric keypad
- TouchPad and pointing stick pointing devices, including a dedicated vertical scroll region
- Integrated 10Base-T/100Base-T/1000Base-T Ethernet local area network (LAN) network interface card (NIC) with RJ-45 jack
- Integrated high-speed 56K modem with RJ-11 jack
- Integrated wireless support for Mini PCI IEEE 802.11b/g and 802.11a/b/g WLAN device
- Support for one Type I or Type II PC Card slot, with support for both 32-bit (CardBus) and 16-bit PC Cards

- External 65-watt AC adapter with 3-wire power cord
- 6-cell Li-Ion battery pack, varying by notebook model
- Audio speaker
- Volume up, volume mute, and volume down buttons
- Connectors:
  - ❑ Infrared
  - ❑ Audio-out (headphone)
  - ❑ Audio-in (microphone)
  - ❑ Universal Serial Bus (USB) v. 2.0 (3 ports, 1 powered)
  - ❑ Power
  - ❑ External monitor
  - ❑ RJ-45 (network)
  - ❑ RJ-11 (modem)
  - ❑ S-Video-out
  - ❑ PC Card
  - ❑ SD Card
  - ❑ Primary battery
  - ❑ Travel battery
  - ❑ Docking connector

## 1.2 Resetting the Notebook

If the notebook you are servicing has an unknown password, follow these steps to clear the password. These steps also clear CMOS:

1. Prepare the notebook for disassembly (refer to [Section 4.3, “Miscellaneous Plastics/ Hardware Kit,”](#) for more information).
2. Remove the real-time clock (RTC) battery (refer to [Section 6.24, “RTC Battery,”](#) for more information on removing and replacing the RTC battery).
3. Wait approximately 5 minutes.
4. Replace the RTC battery and reassemble the notebook.
5. Connect AC power to the notebook. Do not reinsert any battery packs at this time.
6. Turn on the notebook.

All passwords and all CMOS settings have been cleared.




## **1.3 Power Management**

The notebook comes with power management features that extend battery operating time and conserve power. The notebook supports the following power management features:

- Standby
- Hibernation
- Setting customization by the user
- Hotkeys for setting the level of performance
- Battery calibration
- Lid switch standby/resume
- Power/standby button
- Advanced Configuration and Power Management (ACPM) compliance

# 1.4 External Components

The external components on the front of the notebook are shown below and described in Table 1-1.

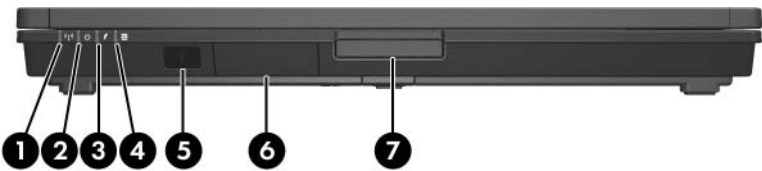

Front Components


Table 1-1  
Front Components

Item	Component	Function
1	Wireless light	On: One or more optional internal wireless devices, such as a WLAN device and/or Bluetooth® device, are turned on.
2	Power/standby light	■ Green: The notebook is on. ■ Blinking green: The notebook is in standby mode.

**Table 1-1**  
**Front Components (*Continued*)**

Item	Component	Function
3	Battery light	<ul style="list-style-type: none"> <li>■ Amber: A battery pack is charging.</li> <li>■ Green: A battery pack is close to full charge capacity.</li> <li>■ Blinking amber: A battery pack that is the only available power source has reached a low-battery condition. When the battery reaches a critical low-battery condition, the battery light begins blinking more quickly.</li> <li>■ Off: If the notebook is connected to an external power source, the light is turned off when all batteries in the notebook are fully charged. If the notebook is not connected to an external power source, the light is turned off until the battery reaches a low-battery condition, when the light begins blinking amber.</li> </ul>
4	Integrated Drive Electronics (IDE) drive light	On: A drive in the hard drive bay is being accessed.
5	Fast IrDA (select models only)	Links the notebook to an optional remote control.
6	Bluetooth module	Sends and receives Bluetooth device signals.
7	Display release button	Opens the notebook.

The external components on the right side of the notebook are shown below and described in Table 1-2.

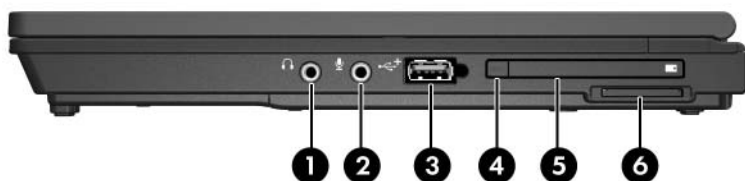

*Right-Side Components*

---


**Table 1-2**  
**Right-Side Components**

---

<b>Item</b>	<b>Component</b>	<b>Function</b>
1	Audio-out (headphone) jack	Connects an optional headphone or powered stereo speakers. Also connects the audio function of an audio/video device, such as a television or VCR.
2	Audio-in (microphone) jack	Connects an optional monaural (single sound channel) or stereo (dual sound channel) microphone.
3	Powered USB port	Connects USB 1.1- or 2.0-compliant devices to the notebook using a standard USB cable, or connects an optional external MultiBay or external MultiBay II to the notebook. This USB port is a powered port that can be used without external power.
4	PC Card slot eject button	Ejects PC Cards from the PC Card slot.
5	PC Card slot	Supports optional Type I, Type II, 32-bit (CardBus), or 16-bit PC Cards.
6	SD Card slot	Accepts SD (Secure Digital) Memory Cards or MultiMediaCards.



---

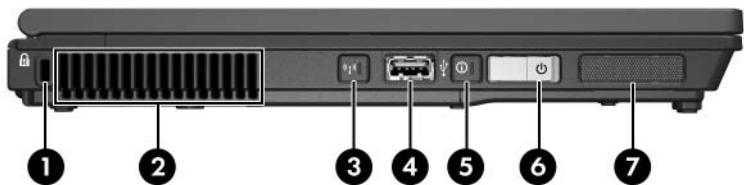The external components on the left side of the notebook are shown below and described in Table 1-3.




Left-Side Components

**Table 1-3**  
**Left-Side Components**

Item	Component	Function
1	Security cable slot	Attaches an optional security cable to the notebook.   The purpose of security solutions is to act as deterrents. These deterrents may not prevent a product from being mishandled or stolen.
2	Vent	Enables airflow to cool internal components.   To prevent overheating, do not obstruct vents. Using the notebook on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.

**Table 1-3**  
**Left-Side Components (Continued)**

Item	Component	Function
3	Wireless button (select models only)	<p>Turns the wireless functionality of the WLAN or Bluetooth device on or off, but does not establish a connection.</p> <p> To establish a wireless connection, a wireless network must already be set up.</p>
4	USB port	Connects a USB 1.1- and 2.0-compliant device to the notebook using a standard USB cable.
5	Info Center button	Enables you to view a list of commonly used software solutions.
6	Power switch	<p>When the notebook is</p> <ul style="list-style-type: none"> <li>■ Off, slide toward the front of the notebook and release to turn on the notebook.</li> <li>■ In standby, slide toward the front of the notebook and release to exit standby.</li> <li>■ In hibernation, slide toward the front of the notebook and release to exit hibernation.</li> </ul> <p>If the notebook has stopped responding and Microsoft Windows shutdown procedures cannot be used, slide toward the front of the notebook and hold for 4 seconds to turn off the notebook.</p>
7	Speaker	Enables you to listen to music and hear audio alerts and signals from programs.

The external components on the rear panel of the notebook are shown below and described in Table 1-4.



*Rear Panel Components*



---


**Table 1-4**  
**Rear Panel Components**

---

<b>Item</b>	<b>Component</b>	<b>Function</b>
1	USB port	Connects USB 1.1- and 2.0-compliant devices to the notebook using a standard USB cable.
2	RJ-11 (modem) jack	Connects a modem cable. Enabled with 56K connectivity.
3	RJ-45 (network) jack	Connects a network cable. Enabled with 10/100/1000BaseT connectivity.
4	Power connector	Connects an AC adapter, an optional AC adapter, or an optional power cable.
5	External monitor port	Connects an optional VGA external monitor or projector.
6	S-Video-out jack	<p>Is a 7-pin, dual-purpose jack.</p> <p>It connects an optional S-Video device, such as a television, VCR, camcorder, overhead projector, or video capture card, with an optional, standard (4-pin) S-Video cable.</p> <p>The extra 3 pins also enable an optional S-Video-to-composite adapter to be used with the notebook.</p>

---

The standard keyboard components of the notebook are shown below and described in Table 1-5.

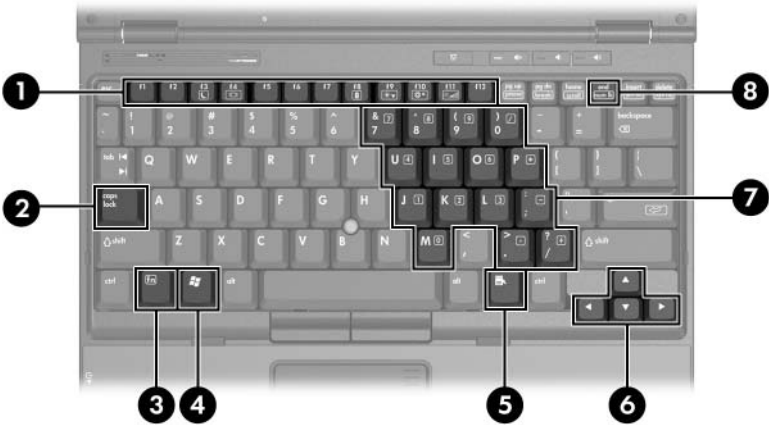

*Standard Keyboard Components*

**Table 1-5**  
**Standard Keyboard Components**


<b>Item</b>	<b>Component</b>	<b>Function</b>
1	Function keys (12)	Perform system and application tasks. When combined with the <b>fn</b> key, the function keys <b>f3</b> , <b>f4</b> , and <b>f8</b> through <b>f11</b> perform additional tasks as hotkeys.
2	<b>caps lock</b> key	Enables caps lock and turns on the caps lock light.
3	<b>fn</b> key	Executes frequently used system functions when pressed in combination with a function key or the <b>esc</b> key.
4	Windows logo key	Displays the Microsoft Windows Start menu.
5	Windows applications key	Displays a shortcut menu for items beneath the pointer.
6	Arrow keys	Moves the cursor around the screen.
7	Embedded numeric keypad	Can be used like an external numeric keypad.
8	<b>num lock</b> key	Enables numeric lock, turns on the embedded numeric keypad, and turns on the num lock light.

The notebook top components are shown below and described in Table 1-6.




*Top Components*

**Table 1-6**  
**Top Components**


Item	Component	Function
1	Left and right TouchPad buttons (2)	Function like the left and right buttons on an external mouse.
2	TouchPad	Moves the pointer. Can be set to perform other mouse functions, such as scrolling, selecting, and double-clicking.
3	Left and right pointing stick buttons (2)	Function like the left and right buttons on an external mouse.
4	Pointing stick	Moves the pointer.
5	Vent	<p>Enables airflow to cool internal components.</p> <p> To prevent overheating, do not obstruct vents. Using the notebook on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.</p>
6	Presentation Mode button	Turns on Presentation mode.
7	Volume mute button	Mutes or restores volume.
8	Volume down button	Decreases notebook sound.
9	Volume up button	Increases notebook sound.
10	TouchPad scroll zone	Scrolls upward or downward.

The external components on the bottom of the notebook are shown below and described in Table 1-7.

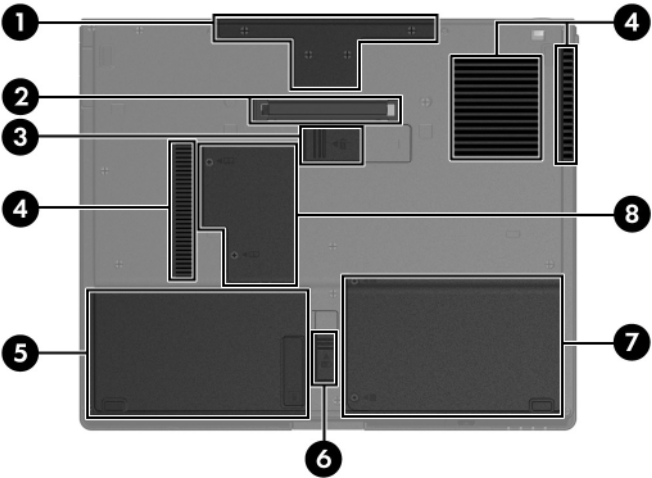

*Bottom Components*

**Table 1-7**  
**Bottom Components**

<b>Item</b>	<b>Component</b>	<b>Function</b>
1	Base enclosure cover	Covers the display cable and connector.
2	Docking connector	Connects the notebook to an optional docking device.
3	Travel battery connector	Connects an optional travel battery.
4	Vents (3)	<p>Enable airflow to cool internal components.</p> <p> To prevent overheating, do not obstruct vents. Using the notebook on a soft surface, such as a pillow, blanket, rug, or thick clothing, may block airflow.</p>
5	Primary battery bay	Holds the primary battery pack.
6	Primary battery release latch	Releases the primary battery pack from the battery bay.
7	Hard drive cover	Holds the primary hard drive.
8	Expansion memory module compartment	Contains one expansion memory module slot.

## 1.5 Design Overview

This section presents a design overview of key parts and features of the notebook. Refer to [Chapter 4, “Illustrated Parts Catalog,”](#) to identify replacement parts, and [Chapter 6, “Removal and Replacement Procedures,”](#) for disassembly steps.

The system board provides the following device connections:

- Audio
- Display
- Hard drive
- Intel Pentium M and Celeron M processors
- Keyboard
- Memory module
- Mini PCI communications devices
- PC Card
- Pointing stick
- TouchPad
- Trusted platform module (TPM) security module



**CAUTION:** To properly ventilate the notebook, allow at least a 7.6-cm (3-inch) clearance on the left and right sides of the notebook.

---

The notebook uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to be turned on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software applications. Exhaust air is displaced through the ventilation grill located on the left side of the notebook.



---

# Troubleshooting



**WARNING:** Only authorized technicians trained by HP should repair this equipment. All troubleshooting and repair procedures are detailed to allow only subassembly-/module-level repair. Because of the complexity of the individual boards and subassemblies, do not attempt to make repairs at the component level or modifications to any printed wiring board. Improper repairs can create a safety hazard. Any indication of component replacement or printed wiring board modification may void any warranty or exchange allowances.

---

## 2.1 Computer Setup

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load. If the operating system is working, the notebook restarts the operating system after you exit Computer Setup.



Pointing devices are not supported in Computer Setup; you must use the keyboard to navigate and make selections.

---

The menu tables later in this chapter provide an overview of Computer Setup options.

## Accessing Computer Setup

The information and settings in Computer Setup are accessed from the **File**, **Security**, **Tools**, and **Advanced** menus.

1. Open Computer Setup by turning on or restarting the notebook. Press **f10** while the F10 = Based Setup message is displayed in the lower-left corner of the screen.
  - ❑ To change the language, press **f2**.
  - ❑ To view navigation information, press **f1**.
  - ❑ To return to the Computer Setup menu, press **esc**.
2. Select the **File**, **Security**, **Tools**, or **Advanced** menu.
3. To exit Computer Setup, choose one of the following:
  - ❑ To exit without saving any changes, use the arrow keys to select **File > Ignore changes and exit**, and then follow the instructions on the screen.
  - ❑ To exit and save all the settings you have entered, use the arrow keys to select **File > Save changes and exit**, and then follow the instructions on the screen.

Your preferences are set when you exit Computer Setup and take effect when the notebook restarts.

## Computer Setup Defaults

To return all settings in Computer Setup to the values that were set at the factory:

1. Open Computer Setup by turning on or restarting the notebook. Press **f10** while the F10 = Based Setup message is displayed in the lower-left corner of the screen.
  - ❑ To change the language, press **f2**.
  - ❑ To view navigation information, press **f1**.
2. Use the arrow keys to select **File > Restore defaults**.
3. Select the **Restore Defaults** check box.

4. To confirm the restoration, press **f10**.
5. Select **File > Save changes and exit**, and then follow the instructions on the screen.

When the computer restarts, the factory settings are restored, and any identification information you have entered is saved.




## Selecting from the File Menu

**Table 2-1**  
**File Menu**

Select	To Do This
System Information	<ul style="list-style-type: none"> <li>■ View identification information about the notebook and any battery packs in the system.</li> <li>■ View specification information about the processor, memory and cache size, video revision, keyboard controller version, and system ROM.</li> </ul>
Save to floppy	Save system configuration settings to a diskette.
Restore from floppy	Restore system configuration settings from a diskette.
Restore defaults	Replace configuration settings in Computer Setup with factory default settings. (Identification information is retained.)
Ignore changes and exit	Cancel changes entered during the current session. Then exit and restart the notebook.
Save changes and exit	Save changes entered during the current session. Then exit and restart the notebook. The changes you save are in effect when the notebook restarts.

# Selecting from the Security Menu

**Table 2-2**  
**Security Menu**

Select	To Do This
Administrator password	Enter, change, or delete an HP Administrator password.
Power-on password	Enter, change, or delete a power-on password.
Password options	<ul style="list-style-type: none"> <li>■ Enable/Disable stringent security.</li> <li>■ Enable/Disable required password on restart.</li> </ul>
DriveLock passwords	<p>Enable/disable DriveLock; change a DriveLock user or master password.</p> <p> DriveLock Settings are accessible only when you enter Computer Setup by turning on (not restarting) the notebook.</p>
Smart Card Security	<p>Enable/disable power-on support for smart cards.</p> <p> This feature is supported by select smart card readers only.</p>
Embedded Security	<ul style="list-style-type: none"> <li>■ Enable/Disable the embedded security chip.</li> <li>■ Restore embedded security chip to factory settings.</li> <li>■ Enable/Disable power-on authentication support.</li> <li>■ Enable/Disable automatic DriveLock.</li> <li>■ Reset power-on authentication credential</li> </ul> <p> Embedded Security settings are accessible only if the notebook is equipped with an embedded security chip.</p>
Device security	<p>Enable/Disable devices in the system.</p> <p>Enable NIC for inclusion in MultiBoot.</p>
System IDs	Enter user-defined identification values.

## Selecting from the Tools Menu

**Table 2-3**  
**Tools Menu**

Select	To Do This
HDD Self Test options	Run a quick or comprehensive self-test on any hard drive in the system.
Battery Information	View information about any battery packs in the notebook.
Memory Check	<ul style="list-style-type: none"> <li>■ Run a self-test on memory modules in the notebook.</li> <li>■ View information about memory modules installed in the notebook.</li> </ul>

# Selecting from the Advanced Menu

**Table 2-4**  
**Advanced Menu**

Select	To Do This
Language (or press <b>f2</b> )	Change the Computer Setup language.
Boot options	<ul style="list-style-type: none"> <li>■ Enable/Disable MultiBoot, which sets a startup sequence that can include most bootable devices and media in the system.</li> <li>■ Set the boot order.</li> </ul>
Device options	<ul style="list-style-type: none"> <li>■ Swap the functions of the <b>fn</b> key and left <b>ctrl</b> key.</li> <li>■ Enable/Disable multiple pointing devices at startup. (To set the notebook to support only a single, usually nonstandard, pointing device at startup, select <b>Disable</b>.)</li> <li>■ Enable/Disable USB legacy support for a USB keyboard, mouse, and hub. When USB legacy support is enabled <ul style="list-style-type: none"> <li><input type="checkbox"/> A USB keyboard, mouse, and hub work even when a Windows operating system is not loaded.</li> <li><input type="checkbox"/> The notebook starts from a bootable hard drive, diskette drive diskette, or CD, CD-RW, or DVD inserted into a drive connected by a USB connector to the notebook or to an optional docking device.</li> </ul> </li> <li>■ Select a parallel port mode: EPP (Enhanced Parallel Port), standard, bidirectional, or ECP (Enhanced Capabilities Port).</li> <li>■ Enable/Disable all settings in the <b>SpeedStep</b> window. (When Disable is selected, the notebook runs in Battery Optimized mode.)</li> </ul>

## 2.2 Troubleshooting Flowcharts

**Table 2-5**  
**Troubleshooting Flowcharts Overview**

Flowchart	Description
2.1	"Flowchart 2.1—Initial Troubleshooting"
2.2	"Flowchart 2.2—No Power, Part 1"
2.3	"Flowchart 2.3—No Power, Part 2"
2.4	"Flowchart 2.4—No Power, Part 3"
2.5	"Flowchart 2.5—No Power, Part 4"
2.6	"Flowchart 2.6—No Video, Part 1"
2.7	"Flowchart 2.7—No Video, Part 2"
2.8	"Flowchart 2.8—Nonfunctioning Docking Device (if applicable)"
2.9	"Flowchart 2.9—No Operating System (OS) Loading"
2.10	"Flowchart 2.10—No OS Loading, Hard Drive, Part 1"
2.11	"Flowchart 2.11—No OS Loading, Hard Drive, Part 2"
2.12	"Flowchart 2.12—No OS Loading, Hard Drive, Part 3"
2.13	"Flowchart 2.13—No OS Loading, Diskette Drive"

---


**Table 2-5**  
**Troubleshooting Flowcharts Overview (*Continued*)**

Flowchart	Description
2.14	"Flowchart 2.14—No OS Loading, Optical Drive"
2.15	"Flowchart 2.15—No Audio, Part 1"
2.16	"Flowchart 2.16—No Audio, Part 2"
2.17	"Flowchart 2.17—Nonfunctioning Device"
2.18	"Flowchart 2.18—Nonfunctioning Keyboard"
2.19	"Flowchart 2.19—Nonfunctioning Pointing Device"
2.20	"Flowchart 2.20—No Network/Modem Connection"


---




## Flowchart 2.1—Initial Troubleshooting

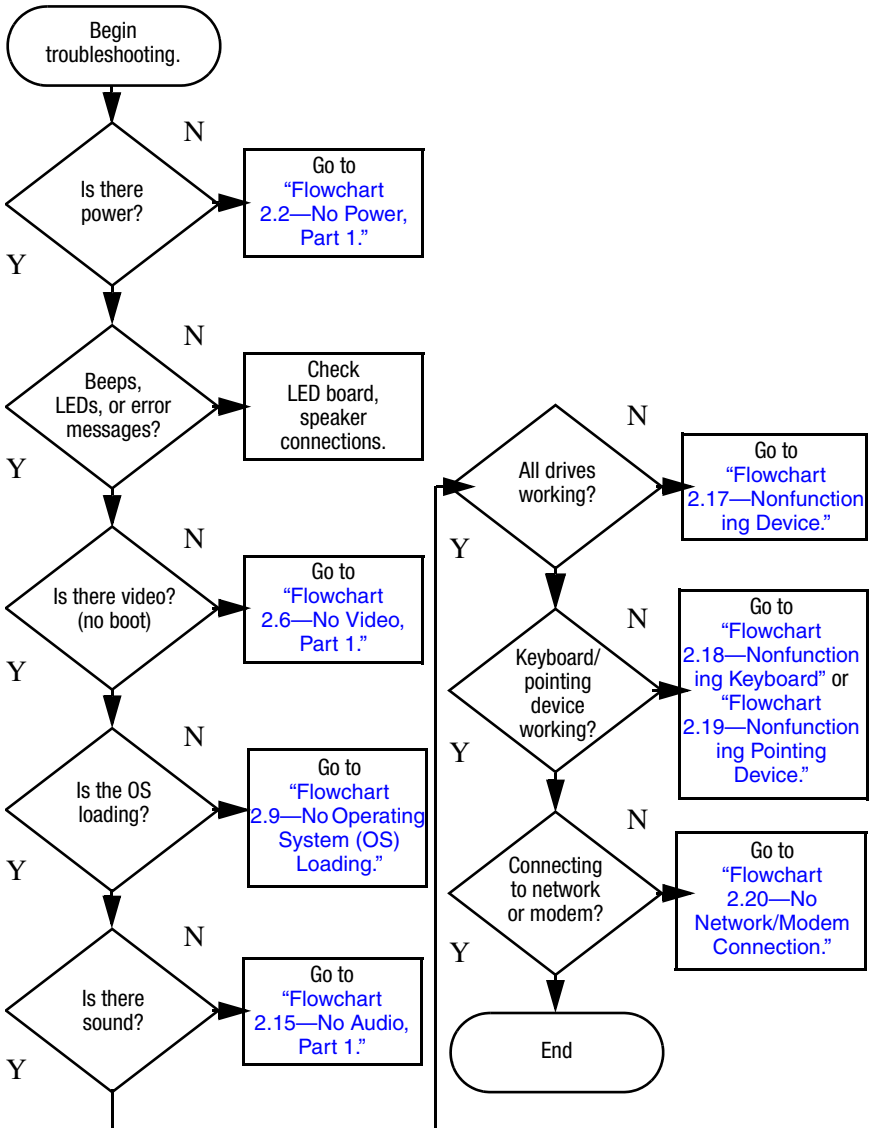


## Flowchart 2.2—No Power, Part 1

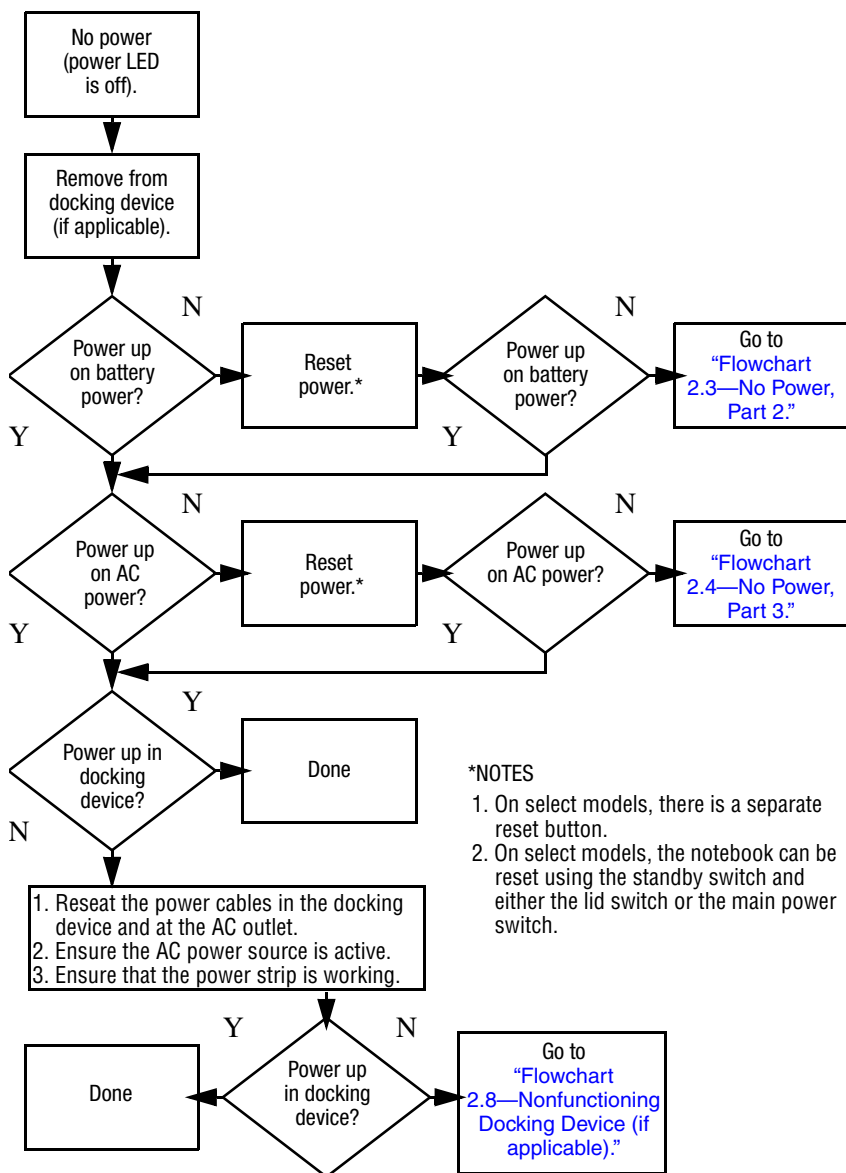


## Flowchart 2.3—No Power, Part 2

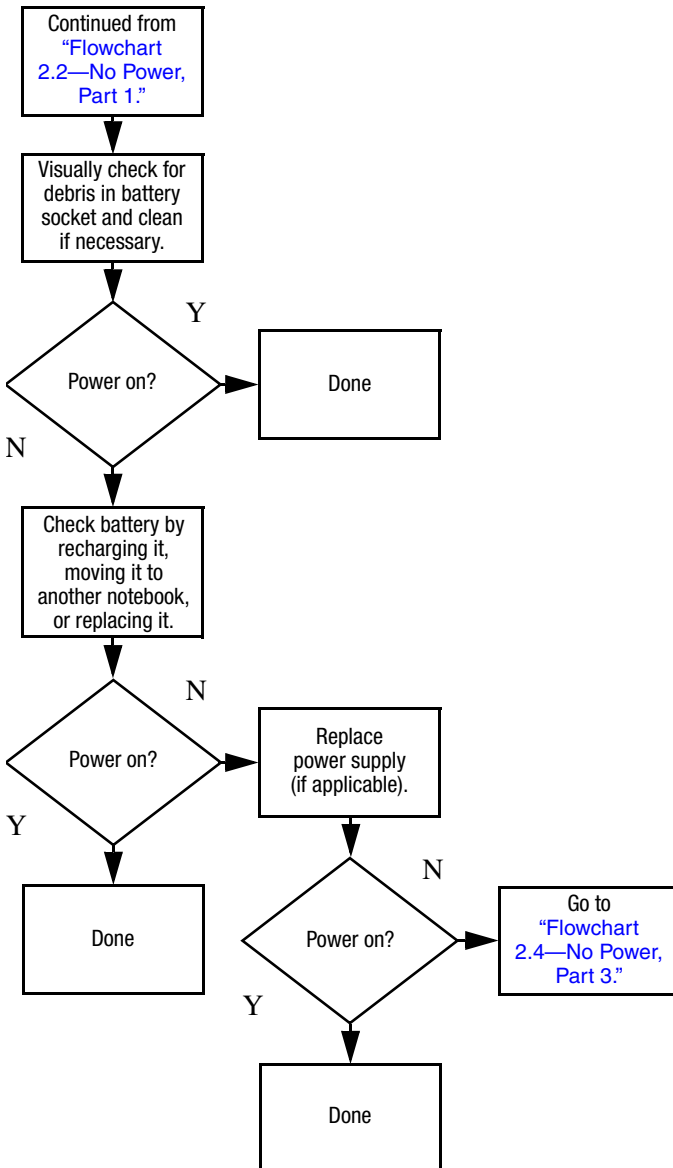


## Flowchart 2.4—No Power, Part 3

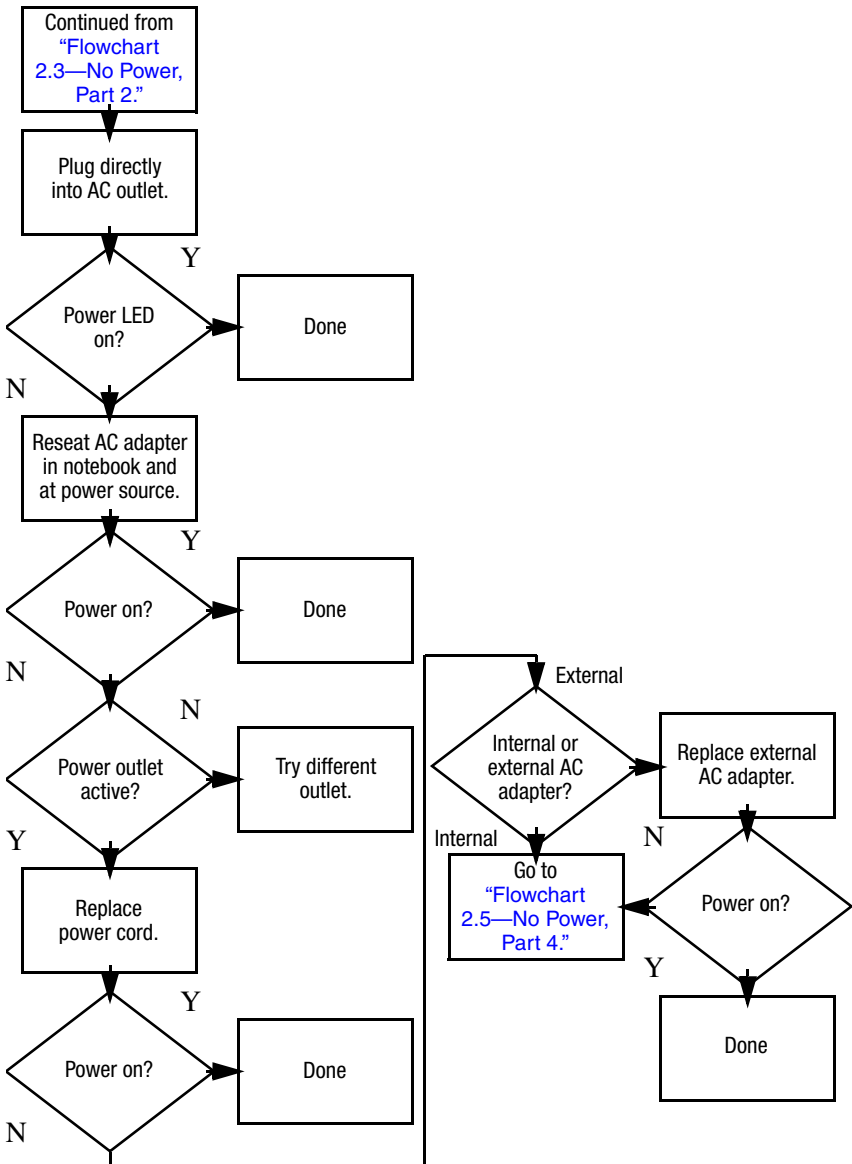


## Flowchart 2.5—No Power, Part 4

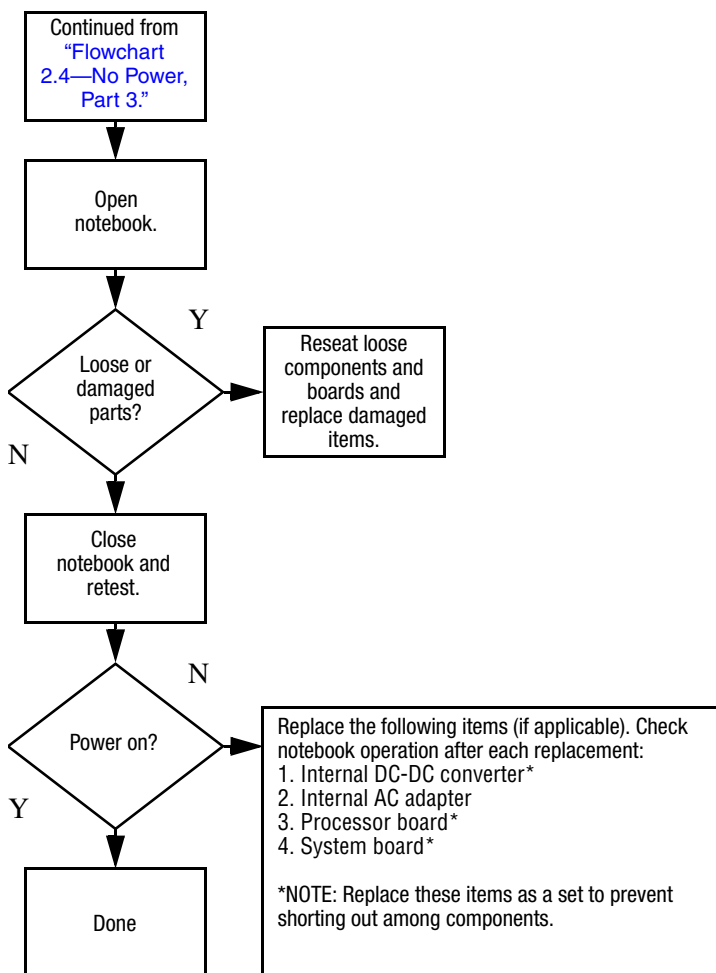


## Flowchart 2.6—No Video, Part 1

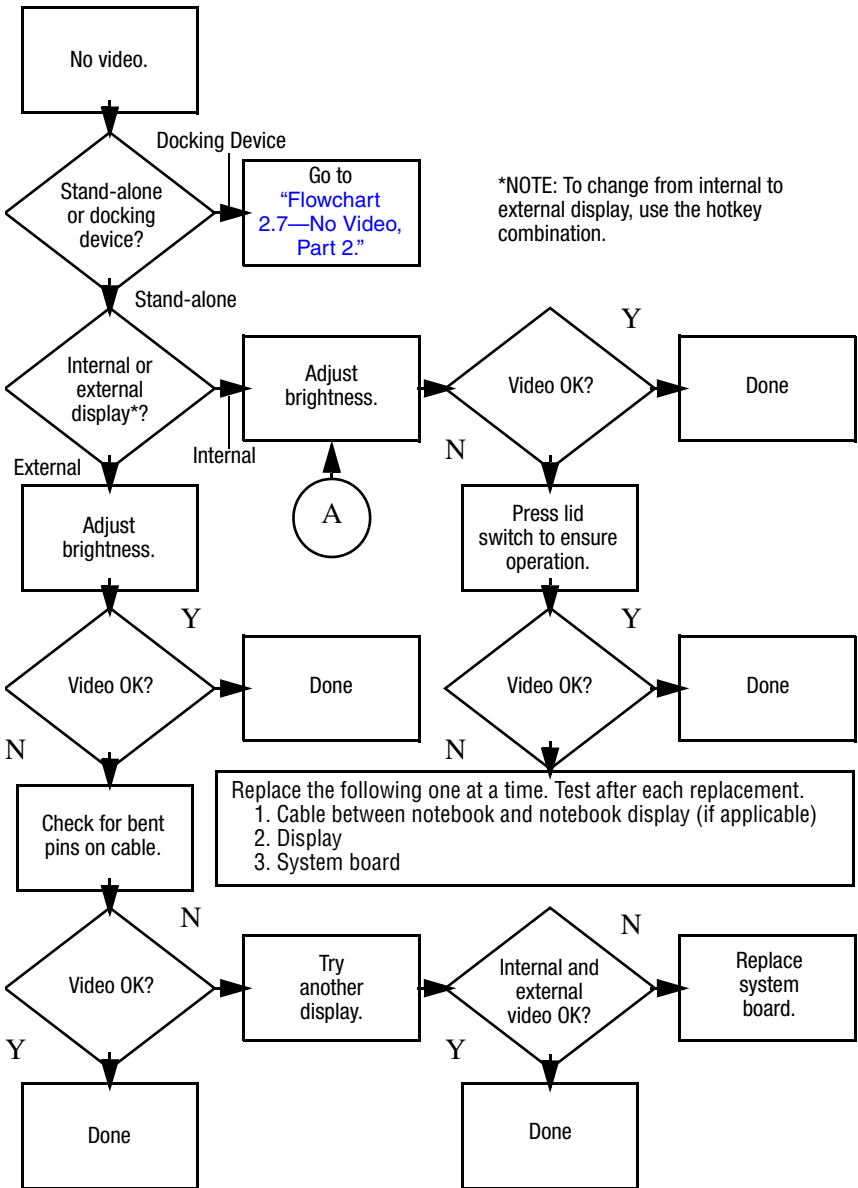

## Flowchart 2.7—No Video, Part 2

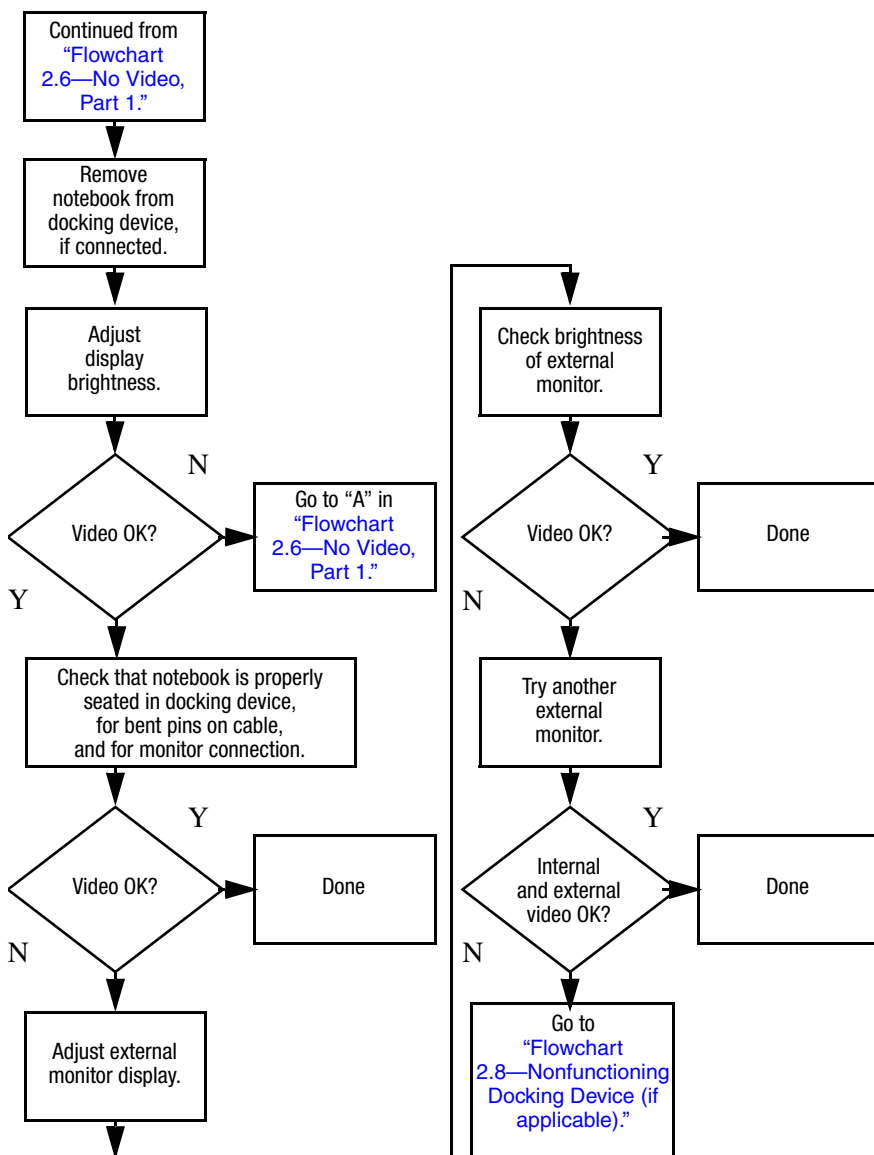


## Flowchart 2.8—Nonfunctioning Docking Device (if applicable)

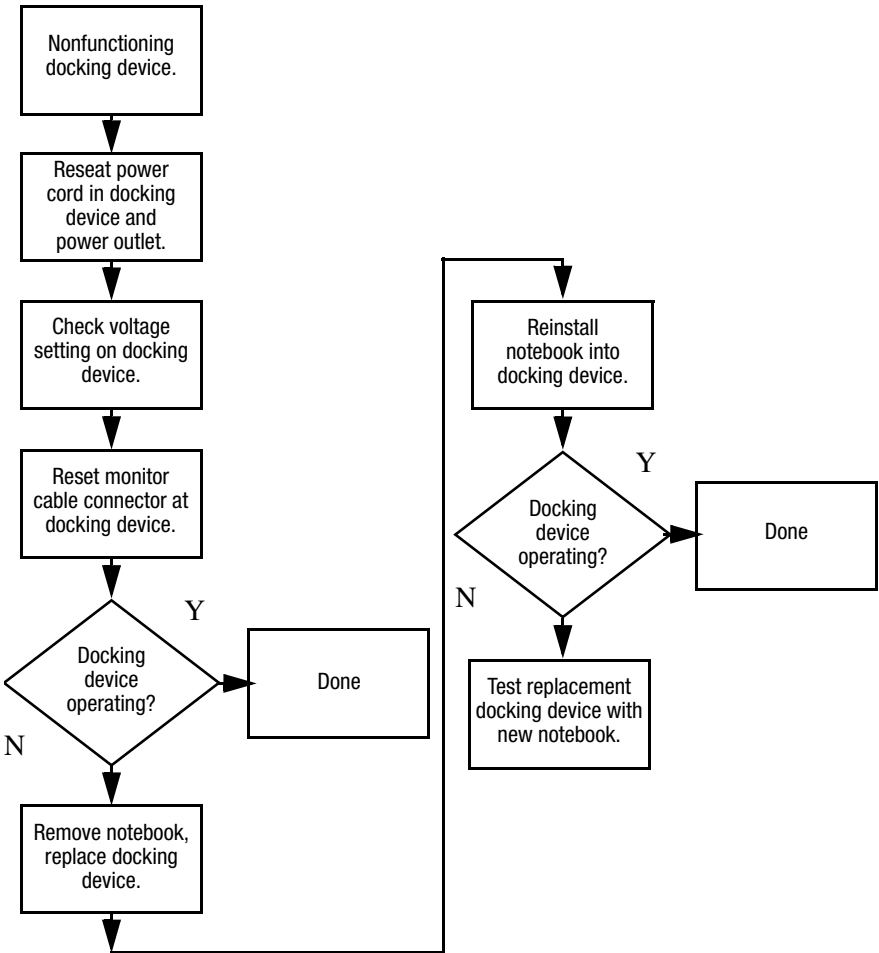




## Flowchart 2.9—No Operating System (OS) Loading

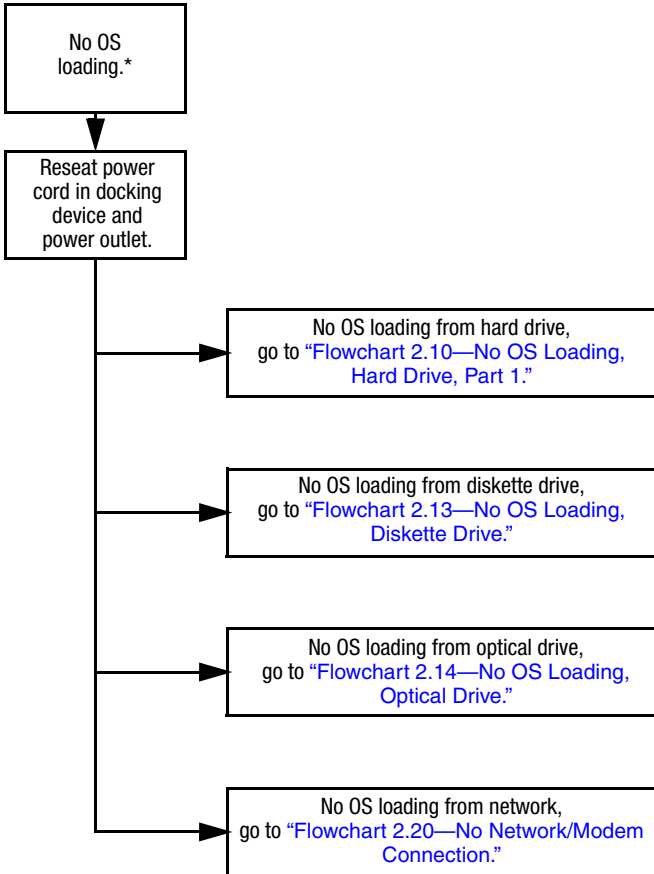


\*NOTE: Before beginning troubleshooting, always check cable connections, cable ends, and drives for bent or damaged pins.


## Flowchart 2.10—No OS Loading, Hard Drive, Part 1

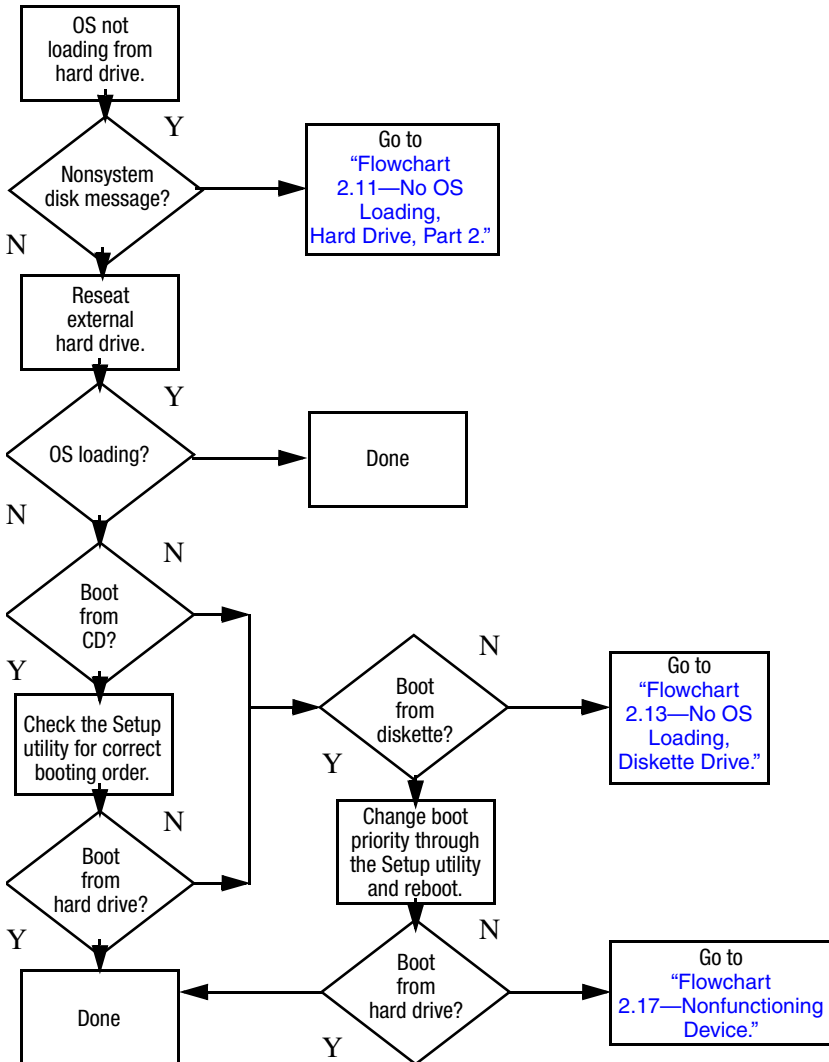


## Flowchart 2.11 —No OS Loading, Hard Drive, Part 2

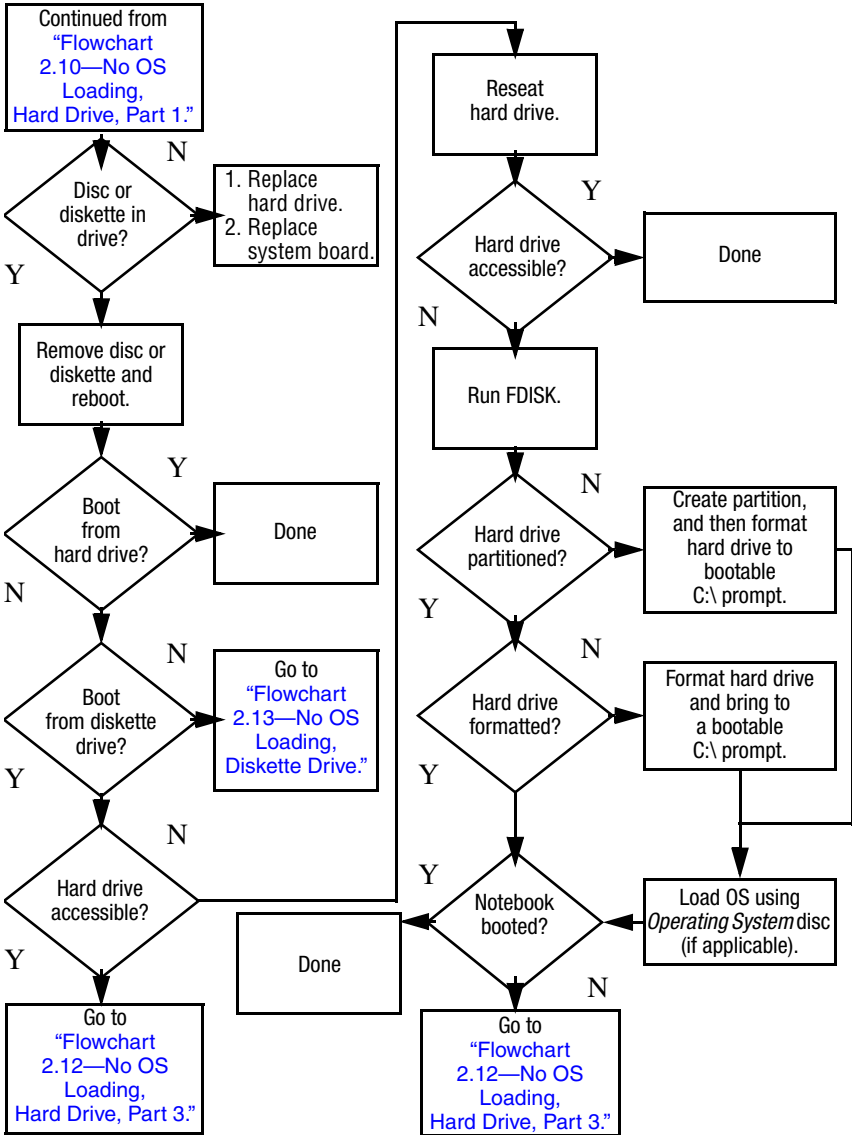


## Flowchart 2.12—No OS Loading, Hard Drive, Part 3

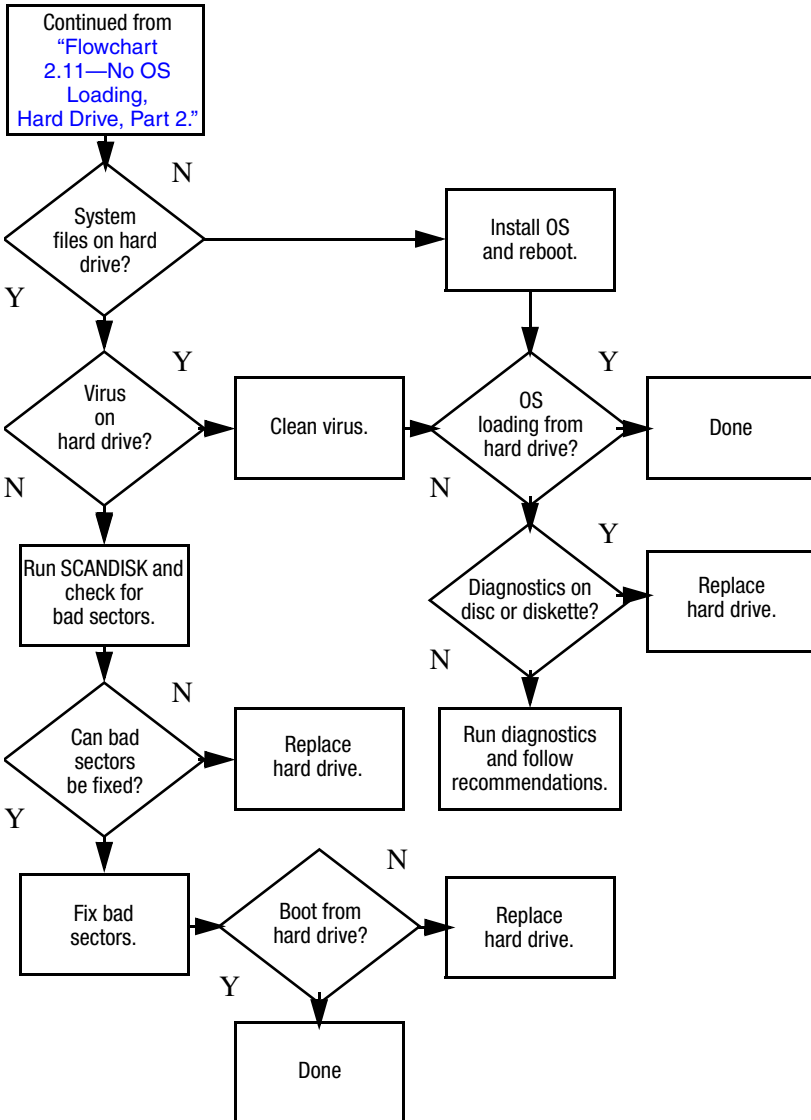


## Flowchart 2.13—No OS Loading, Diskette Drive

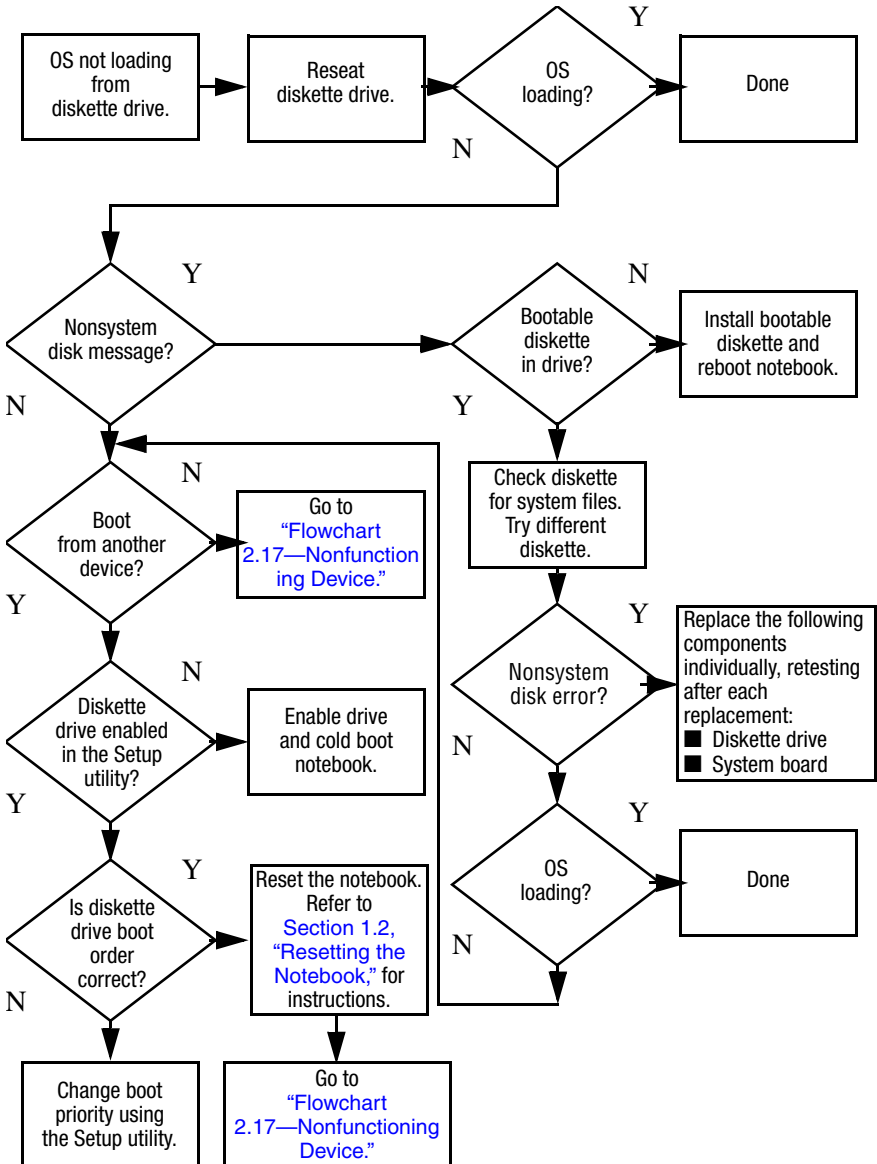


## Flowchart 2.14—No OS Loading, Optical Drive

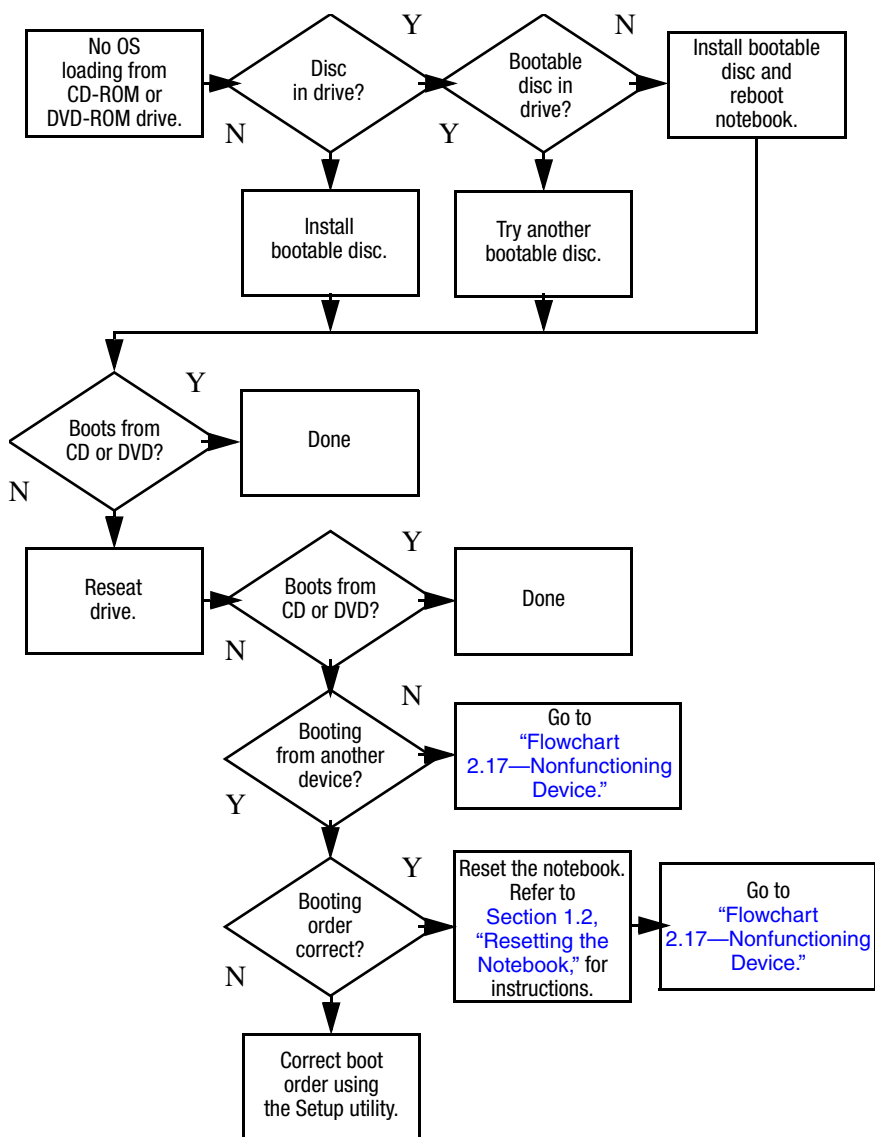

## Flowchart 2.15—No Audio, Part 1

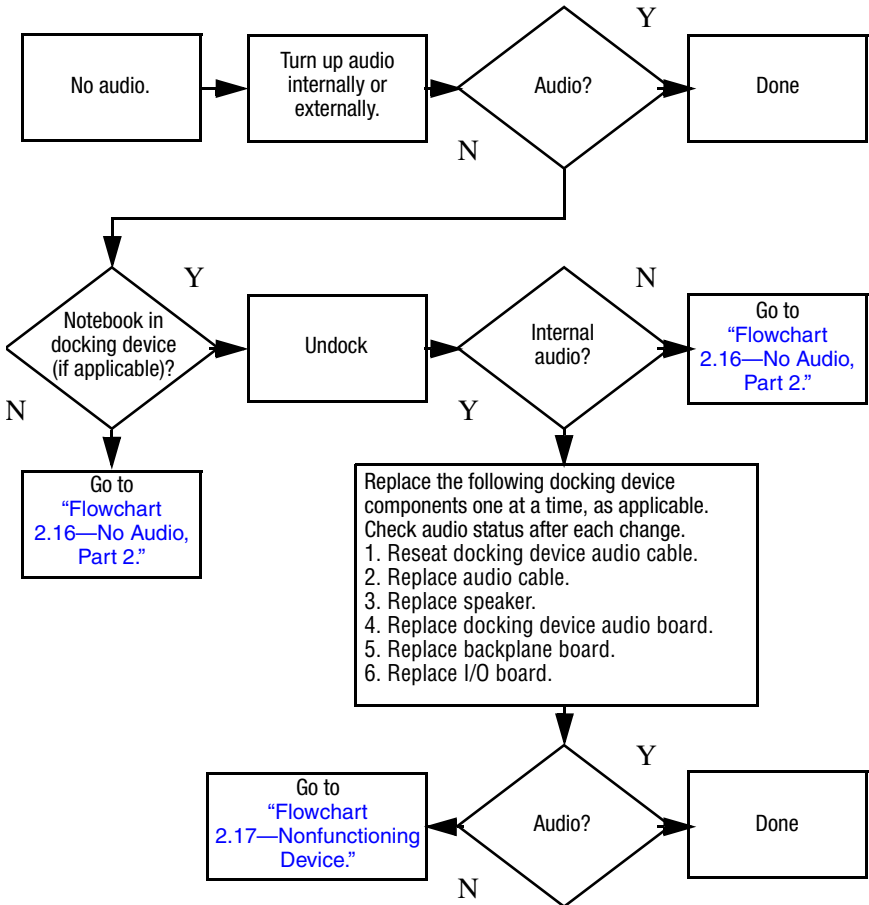


## Flowchart 2.16—No Audio, Part 2

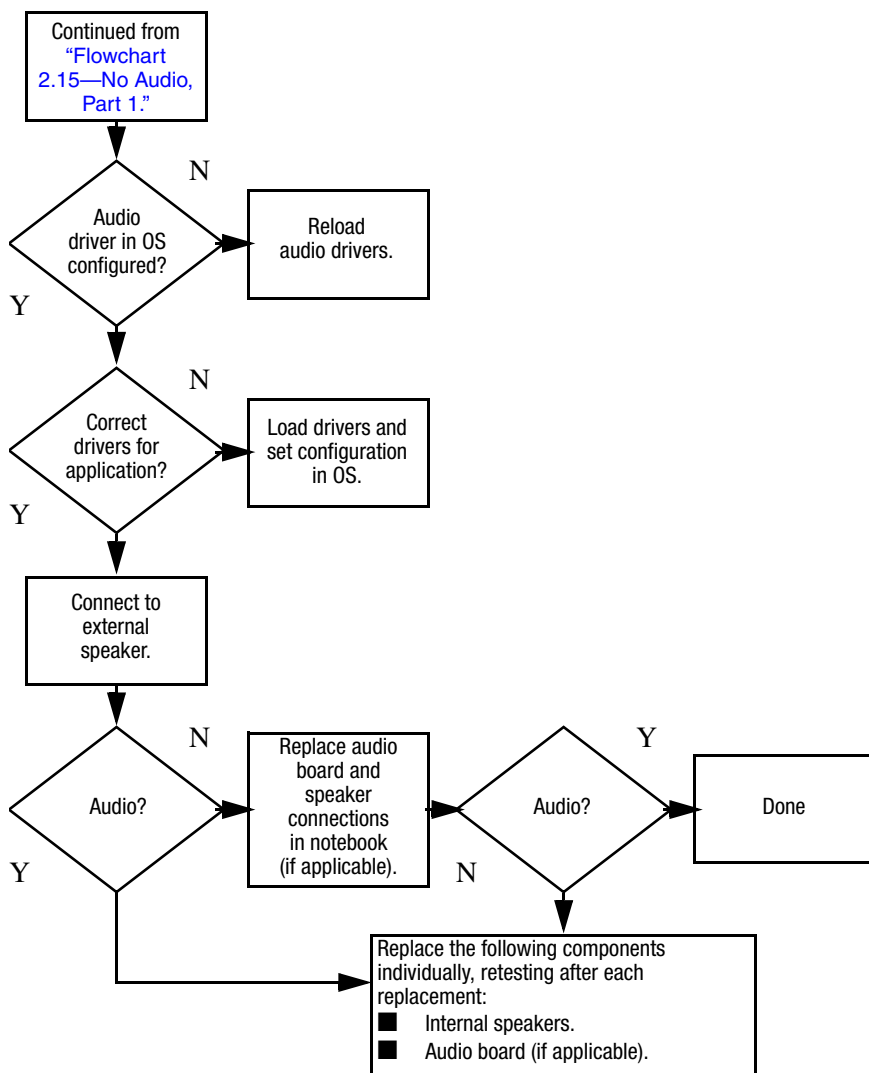





## Flowchart 2.17—Nonfunctioning Device

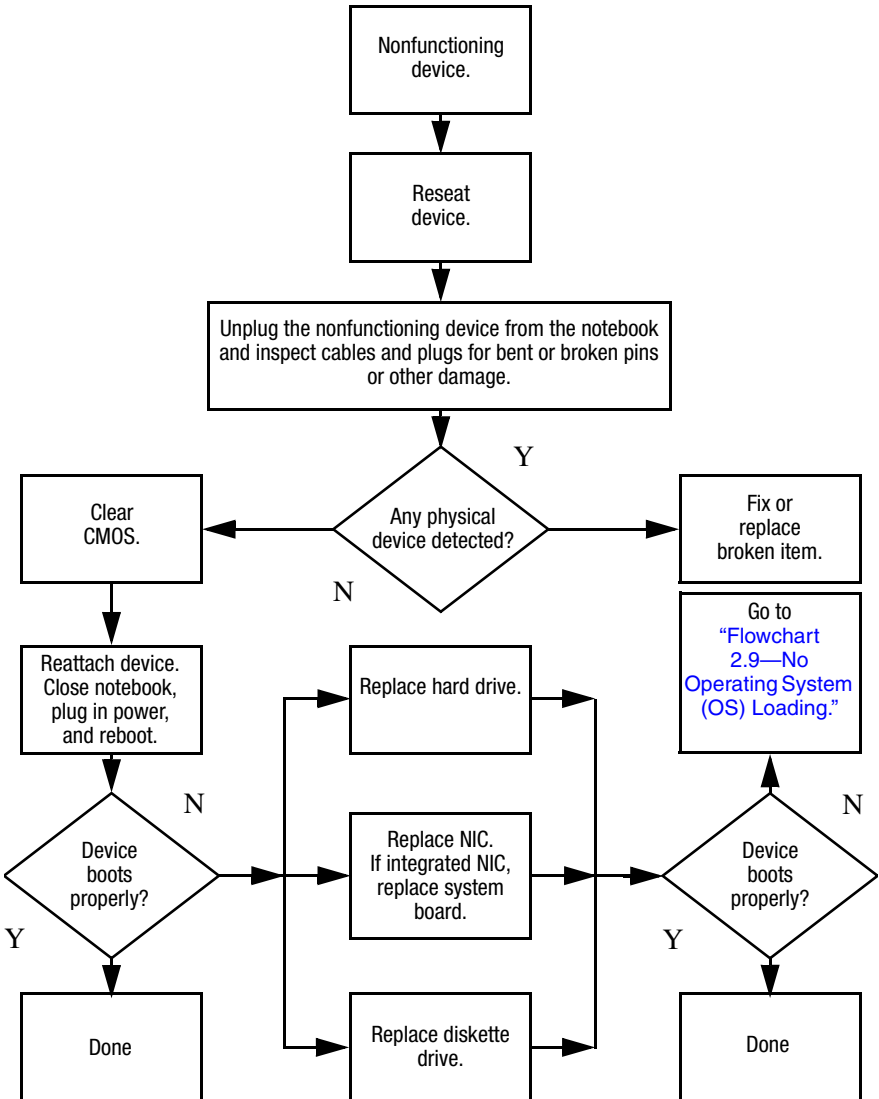


## Flowchart 2.18—Nonfunctioning Keyboard

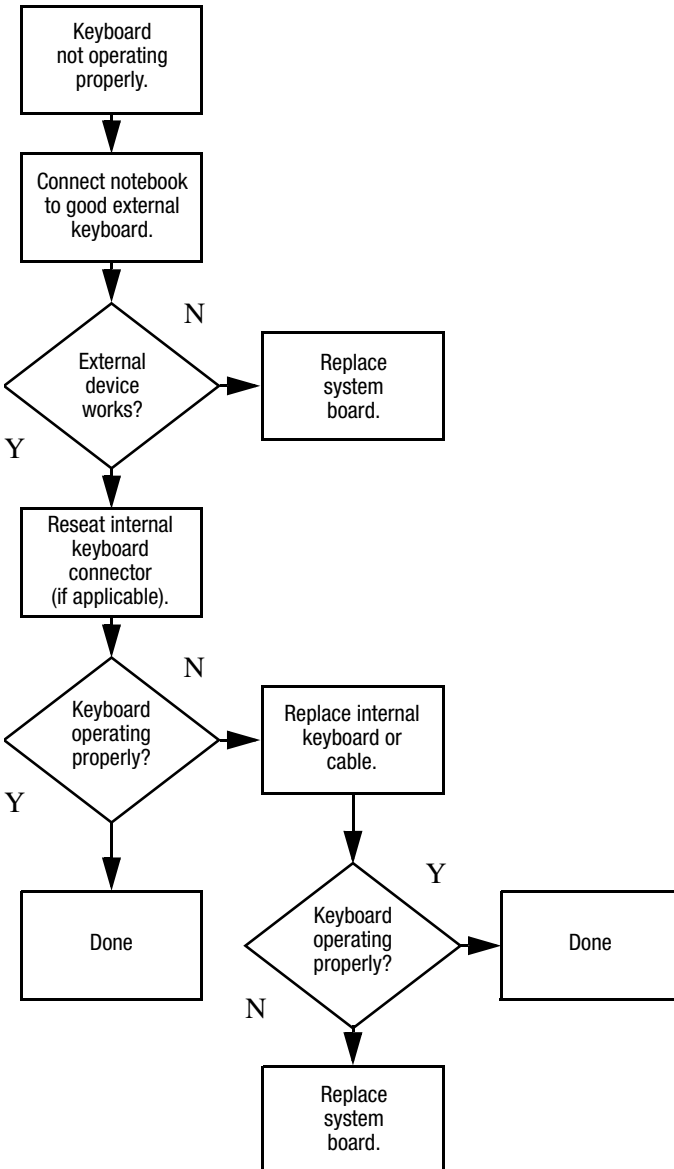

## Flowchart 2.19—Nonfunctioning Pointing Device

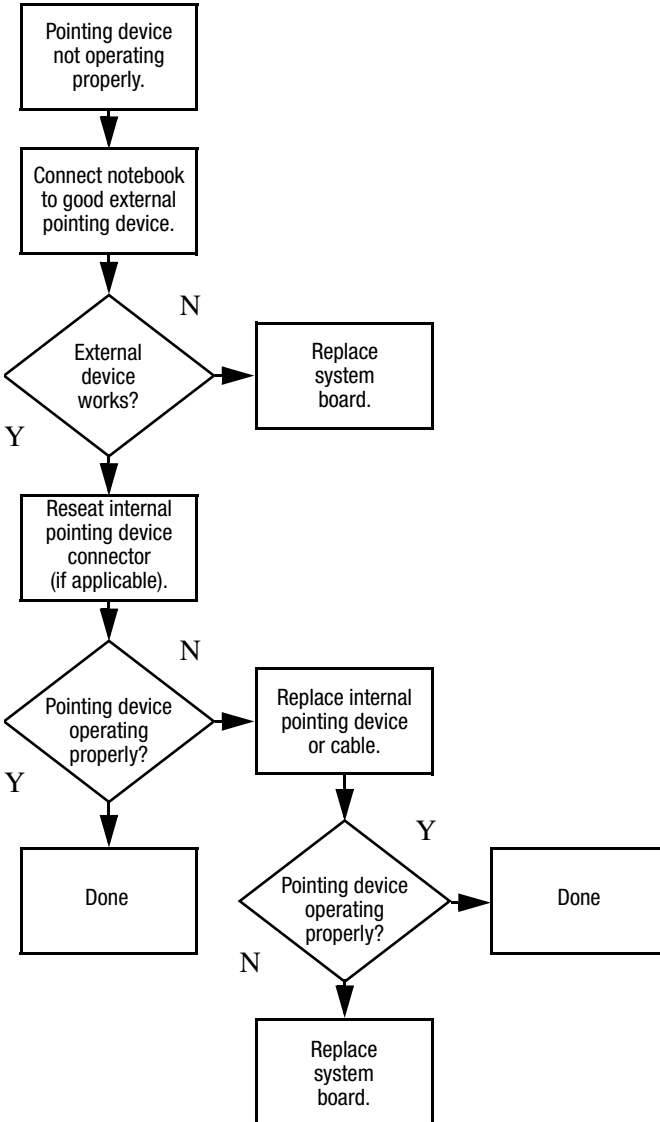

## Flowchart 2.20—No Network/Modem Connection

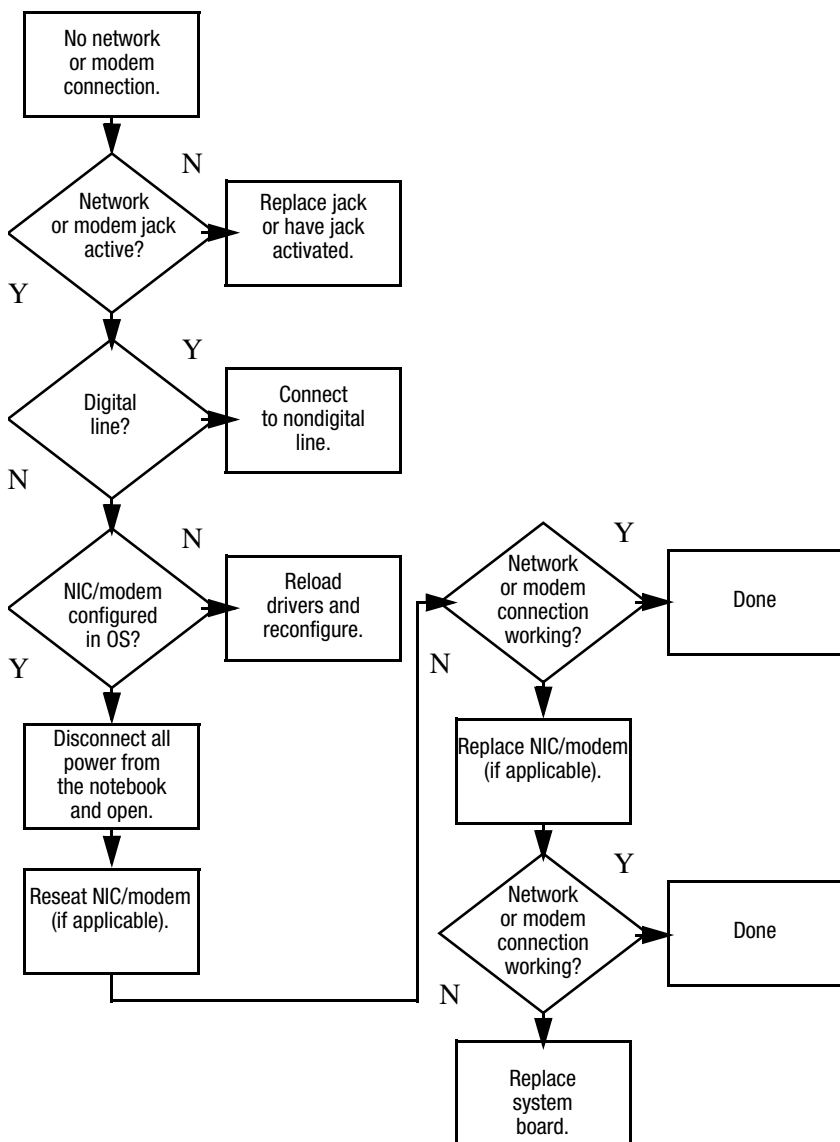

---

# Software Update and Recovery

## Software Updates

To stay current with the newest technology and maintain optimal performance, install the latest versions of HP software on your computer as they become available.

To update HP software:

1. Identify your computer model, product category, and series or family. Prepare for a system BIOS update by identifying the BIOS version currently installed on the computer.



**CAUTION:** If your computer is connected to a network, it is recommended that you consult with your network administrator before installing any software updates, especially system BIOS updates.



The computer system BIOS is stored on the system ROM. The BIOS initializes the operating system, determines how the computer will interact with the hardware devices, and provides for data transfer among hardware devices, including the time and date.

2. Access the updates through the HP Web site (<http://www.hp.com>) or the *Support Software* disc (purchased separately).
3. Install the updates.

## Accessing Computer Information

Before you access the updates for your computer, collect the following information:

- The product *category* is Notebook.
- The product *family* name and *series* number are printed on the display bezel.
- *Model* information is provided on the serial number label on the bottom of the computer.

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as ROM date and System BIOS) can be displayed by pressing **fn+esc** (if you are already in Microsoft Windows) or by opening Computer Setup.

To use Computer Setup for displaying BIOS information:

1. Open Computer Setup by turning on or restarting the computer, and then pressing **f10** while the “F10 = ROM Based Setup” message is displayed in the lower-left corner of the screen.
2. Use the arrow keys to select **File > System Information**, and then press **enter**.

BIOS date information is displayed.

3. To exit Computer Setup, use the arrow keys to select **File > Ignore changes and exit**. Then follow the instructions on the screen.

## Obtaining the Support Software Disc

The *Support Software* disc provides HP software updates and installation instructions. The disc includes device drivers, BIOS updates, and utilities.

To purchase the current *Support Software* disc or a subscription that provides both the current version and future versions of the disc, visit the HP Web site at <http://www.hp.com>.

## Software Updates and the HP Web Site

Most software on the HP Web site is packaged in a compressed file called a *SoftPaq*. Some BIOS updates may be packaged in a compressed file called a *ROMPaq*.

Most download packages contain a file named *Readme.txt*. A *Readme.txt* file contains information regarding installing and troubleshooting the file. The *Readme.txt* files included with *ROMPaqs* are provided in English only.

## Downloading a BIOS Update



**CAUTION:** To prevent damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation:

- Do not disconnect power from the computer by unplugging the power cord from the AC outlet.
- Do not shut down the computer or initiate standby or hibernation.
- Do not insert, remove, connect, or disconnect any device, cable, or cord.

To download a BIOS update:

1. Access the page on the HP Web site that provides software for your computer:
  - ☐ Select **Start > Help and Support**, and then click a software update link.
  - or –
  - ☐ Visit the HP Web site at <http://www.hp.com/support>.
2. Follow the instructions on the screen to identify your computer and access the BIOS update you want to download.
3. At the download area:
  - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the instructions on the screen to download your selection to the hard drive.



---

Make a note of the path to the location on your hard drive where the BIOS update will be downloaded. You will need to access this path when you are ready to install the update.

---

## Installing a BIOS Update

---



**CAUTION:** If your computer is connected to a network, it is recommended that you consult with your network administrator before installing any software updates, especially system BIOS updates.

---

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed:

1. Open Windows Explorer by selecting **Start > All Programs > Accessories > Windows Explorer**.



2. In the left pane of the Windows Explorer window:
  - a. Click **My Computer** and then your hard drive designation. The hard drive designation is typically Local Disk (C:).
  - b. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
3. Double-click the file with an .exe extension (for example, filename.exe).

The BIOS installation begins.
4. Complete the installation by following the instructions on the screen.



---

After a message on the screen reports a successful installation, you may delete the downloaded file from your hard drive.

---

## Recovering the BIOS



---

The BIOS recovery procedure requires a USB diskette drive and a formatted diskette.

---

The BIOS can be recovered if the flash memory is corrupted. Flash memory corruption can occur if the notebook powers down while the BIOS is being updated.

When the notebook is turned on, the boot block portion of the flash memory performs an integrity check on the rest of the BIOS image and enters recovery mode if the image is corrupt.

BIOS recovery can be forced on a non-functioning notebook by turning on the notebook while pressing and holding the Windows logo key + **B** on the nonfunctioning notebook keyboard until the caps lock light blinks.

To recover the BIOS:

1. If the nonfunctioning notebook is docked in an optional docking device, undock the notebook.
2. Attach the USB diskette drive directly to a USB port on the nonfunctioning notebook. (USB hubs are not supported for BIOS recovery).
3. Insert the correct ROMPaq diskette for the product being updated. The BIOS image file must be located in the root directory of the diskette and must be in contiguous sectors. The easiest way to ensure this is to visit <http://www.hp.com>, download the Softpaq, and let the Softpaq create the ROMPaq diskette.
4. Press and hold the Windows logo key + **B** on the notebook keyboard (do not use an external keyboard) and turn on the notebook and wait for the caps lock light to start blinking.
5. Release the Windows logo key + **B**.

The BIOS recovery procedure takes approximately one minute to read the image from the diskette, and then an additional 15 seconds to program the image into flash memory. The notebook restarts when the BIOS recovery procedure is complete. Do not attempt to turn off the notebook after starting a recovery.

If the BIOS recovery procedure stalls, the caps lock light will begin blinking. This situation can arise if the diskette is corrupt or the incorrect ROMPaq is used. If the notebook does not restart after approximately 3 minutes, press and hold the power button, or slide and hold the power switch, for at least 5 seconds to force the notebook to turn itself off. Then repeat the BIOS recovery procedure.


---

# Illustrated Parts Catalog

This chapter provides an illustrated parts breakdown and a reference for spare part numbers.


## 4.1 Serial Number Location

When ordering parts or requesting information, provide the notebook serial number and model number located on the bottom of the notebook.

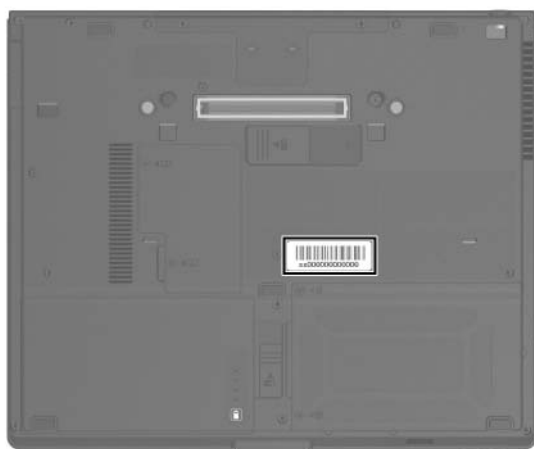

*Serial Number Location*


## 4.2 Notebook Major Components

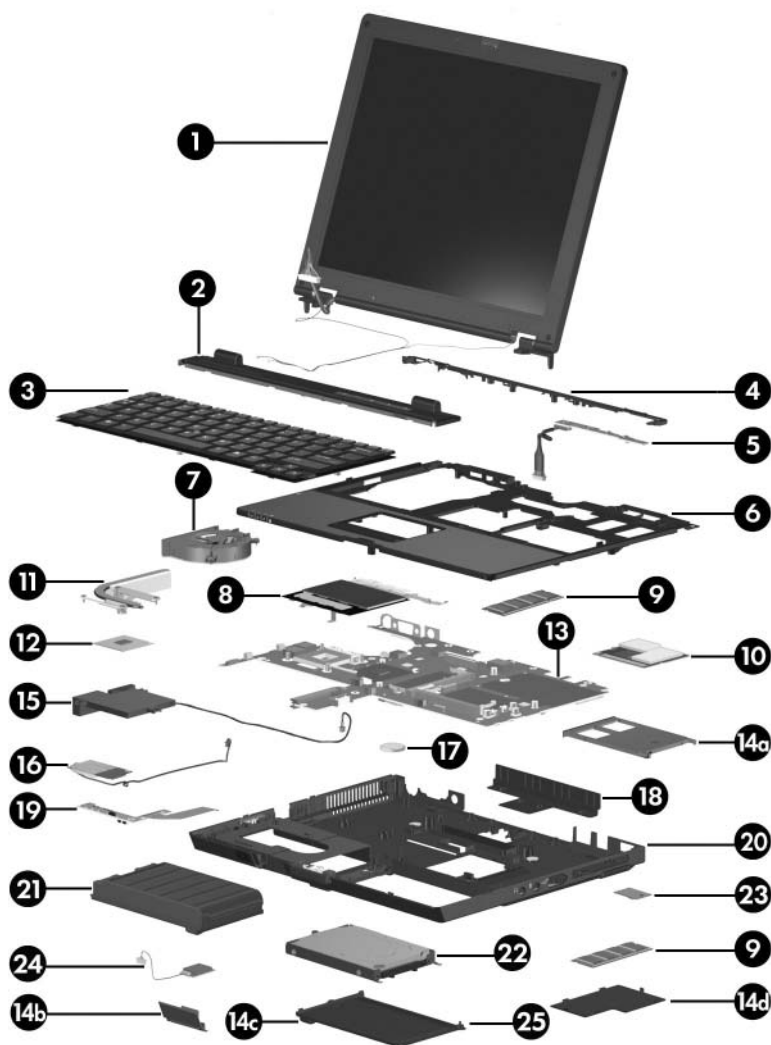

*Notebook Major Components*

**Table 4-1**  
**Spare Parts: Notebook Major Components**


<b>Item</b>	<b>Description</b>	<b>Spare Part Number</b>
1	<b>12.1-inch, XGA, TFT display assembly</b> (includes wireless antenna boards and cables)	383547-001
	<b>Display Hinge Kit</b> (not illustrated)	383530-001
2	<b>Keyboard cover</b>	383519-001
3	<b>Keyboards</b> , with pointing stick	
	Asia Pacific	383458-371
	Australia	383458-011
	Belgium	383458-181
	Czech Republic	383458-221
	Denmark	383458-081
	Europe	383458-021
	France	383458-051
	French Canada	383458-121
	Germany	383458-041
	Hong Kong	383458-AC1
	Hungary	383458-211
	Iceland	383458-DD1
	Israel	383458-BB1
	Italy	383458-061
	Japan	383458-291
	Korea	383458-AD1
	Latin America	383458-161
	The Netherlands	383458-331
	Norway	383458-091
	People's Republic of China	383458-AA1
	Poland	383458-241
	Portugal	383458-131
	Russia	383458-251
	Saudi Arabia	383458-171
	Spain	383458-071
	Slovakia	383458-231
	Sweden	383458-101
	Switzerland	383458-111
	Taiwan	383458-AB1
	Thailand	383458-281
	Turkey	383458-141
	United Kingdom	383458-031
	United States	383458-001

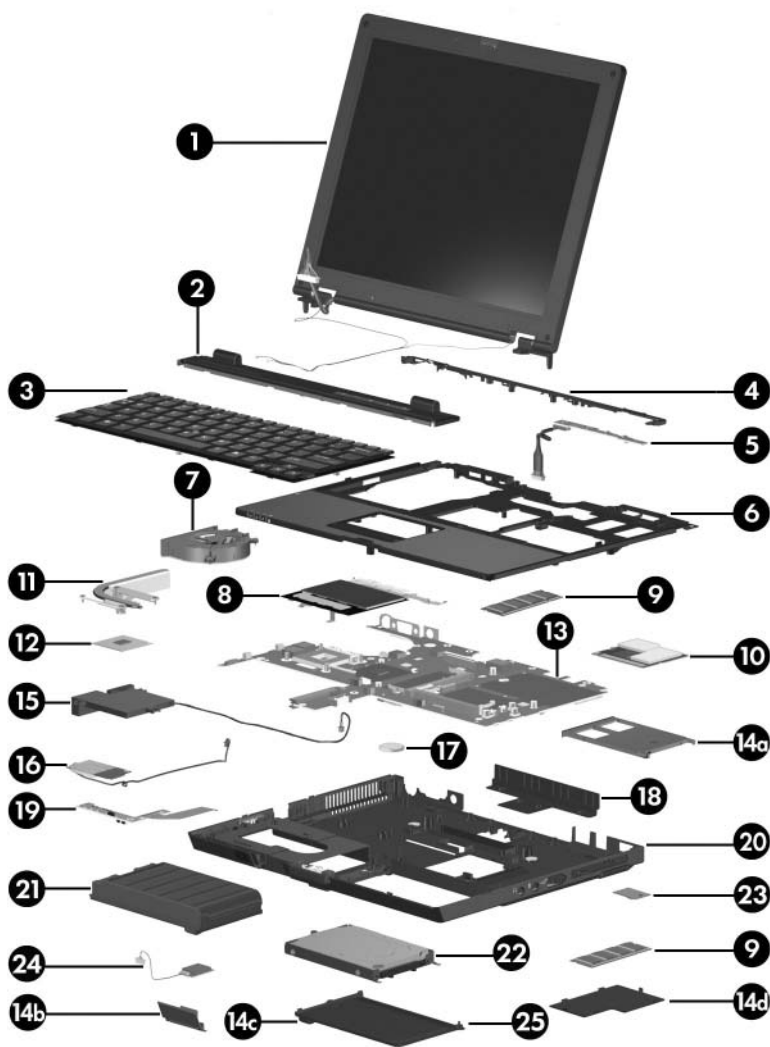

*Notebook Major Components*

**Table 4-1****Spare Parts: Notebook Major Components (Continued)**

<b>Item</b>	<b>Description</b>	<b>Spare Part Number</b>
4	<b>Rear keyboard cover</b>	383522-001
5	<b>Button board</b> (includes button board cable)	383511-001
6	<b>Top cover</b>	383560-001
7	<b>Fan</b>	383528-001
8	<b>TouchPad</b> (includes cable and bracket)	383562-001
9	<b>Memory modules</b>	
	PC24200	
	1024 MB	383536-001
	512 MB	383542-001
	256 MB	383538-001
	PC23200	
	1024 MB	383535-001
	512 MB	383541-001
	256 MB	383537-001
10	<b>Mini PCI communications cards</b>	
	802.11b/g Silverton wireless local access network (WLAN) card, for use in most of the world	359106-001
	802.11b/g Silverton WLAN card, for use in the rest of the world	359107-001
	802.11a/b/g FRLN WLAN card, for use in Europe	377792-001
	802.11a/b/g FRLN WLAN card, for use in Japan	373888-291
	802.11a/b/g FRLN WLAN card, for use in most of the world	373888-001
	802.11a/b/g FRLN WLAN card, for use in ROW	373889-001

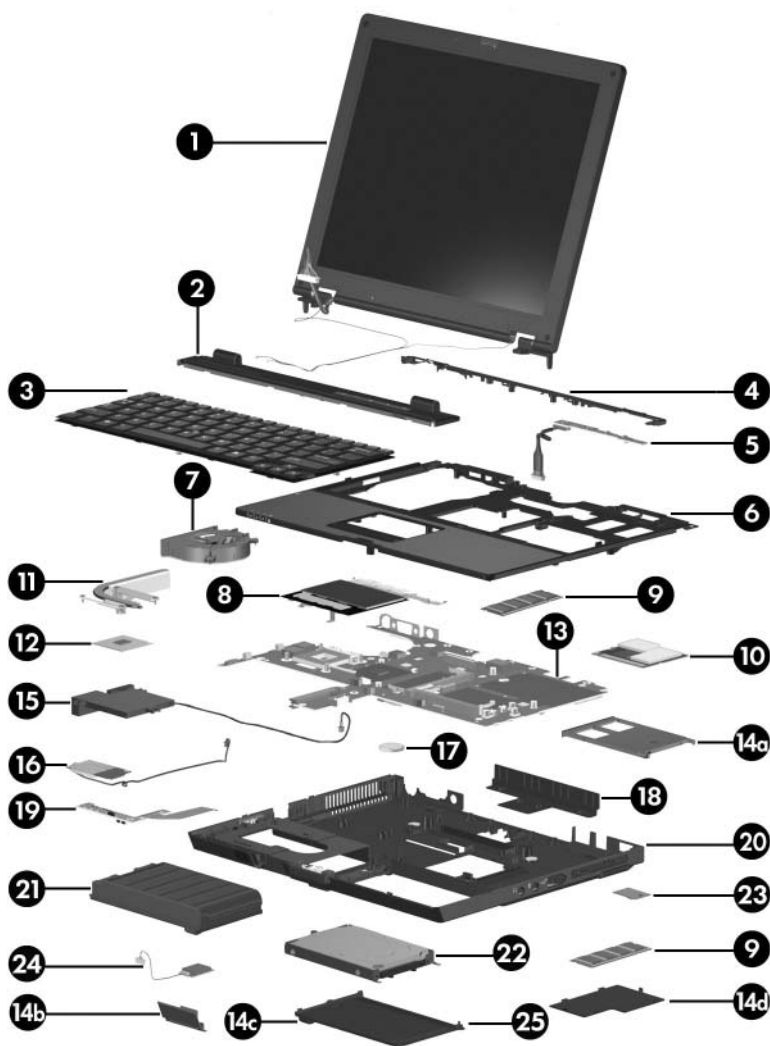


*Notebook Major Components*



Table 4-1

**Spare Parts: Notebook Major Components (Continued)**

<b>Item</b>	<b>Description</b>	<b>Spare Part Number</b>
10	<b>Mini PCI communications cards</b> (Continued)	
	802.11a/b/g DynaStar WLAN card, for use in Japan	337407-291
	802.11a/b/g DynaStar WLAN card, for use in most of the world	337407-001 337407-002
	802.11a/b/g DynaStar WLAN card, for use in the rest of the world	
	802.11a/b/g ATMC WLAN card, for use in Japan	377408-291
	802.11a/b/g ATMC WLAN card, for use in MOW	377408-001
	802.11a/b/g ATMC WLAN card, for use in the rest of the world	377408-002
11	<b>Heat sink</b> (includes thermal paste)	383559-001
12	<b>Processors</b> (include thermal paste)	
	Intel Pentium M 2.13-GHz	383555-001
	Intel Pentium M 2.00-GHz	383554-001
	Intel Pentium M 1.86-GHz	383553-001
	Intel Pentium M 1.73-GHz	383552-001
	Intel Pentium M 1.60-GHz	383551-001
	Intel Celeron M 1.50-GHz	384144-001
13	<b>System board</b>	383515-001

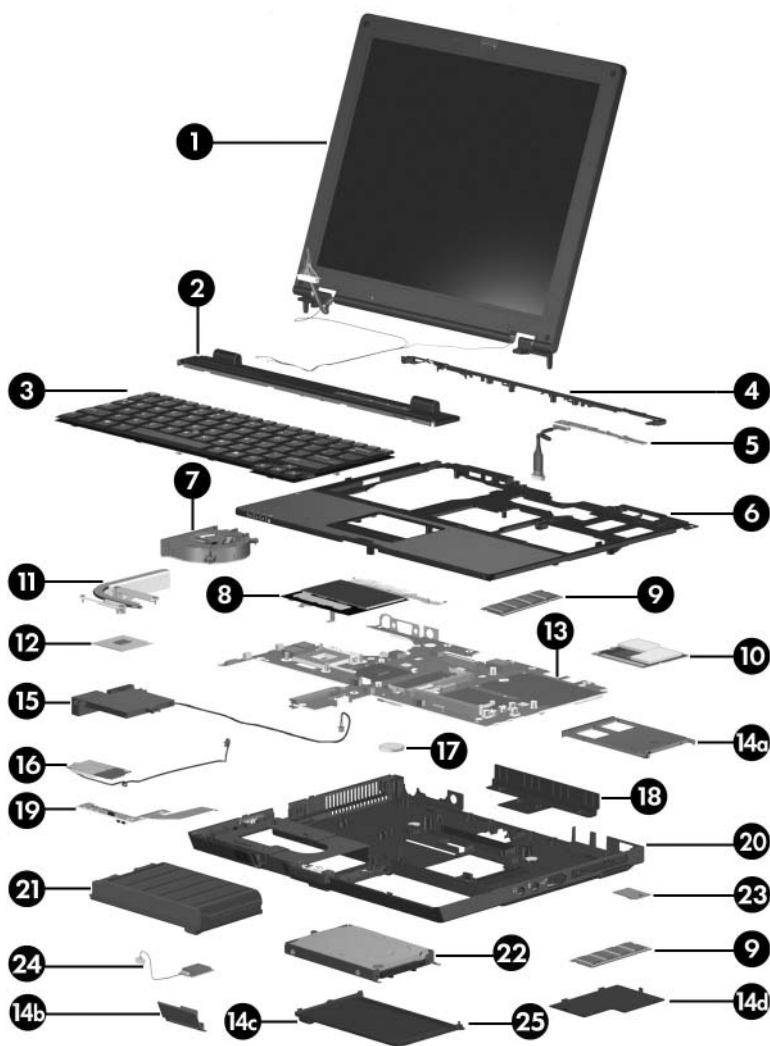


*Notebook Major Components*

**Table 4-1****Spare Parts: Notebook Major Components (Continued)**

<b>Item</b>	<b>Description</b>	<b>Spare Part Number</b>
	<b>Miscellaneous Plastics/Hardware Kit</b> , includes:	383549-001
14a	PC Card slot spacer	
14b	Bluetooth board cover	
14c	Hard drive cover	
14d	Memory module compartment cover	
	Not illustrated: Notebook feet	
15	<b>Speaker</b>	383557-001
16	<b>Modem board</b> (high-speed 56K, includes modem cable)	383534-001
17	<b>RTC battery</b>	383625-001
18	<b>Base enclosure cover</b>	383520-001
19	<b>Infrared board</b> (includes cable)	383512-001
20	<b>Base enclosure</b>	383509-001
21	<b>6-cell battery pack</b>	383510-001
22	<b>Hard drives</b> (all 5400 rpm; include cover, frame, and connector)	
	80-GB	383527-001
	60-GB	383526-001
	40-GB	383525-001
23	<b>TPM security module</b>	383545-001
24	<b>Bluetooth wireless module</b> (includes Bluetooth module cable)	370429-001
25	<b>Hard drive cover</b>	383529-001

## 4.3 Miscellaneous Plastics/ Hardware Kit

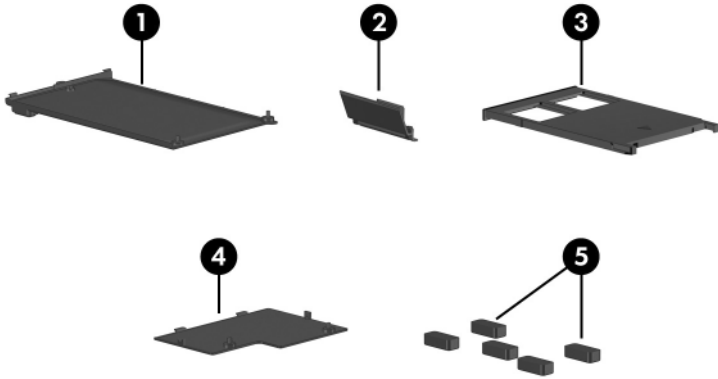


---

**Table 4-2**  
**Spare Part Number 383549-001**

Item	Description
1	Hard drive cover
2	Bluetooth cover
3	PC Card slot space saver
4	Memory module compartment cover (includes 2 captive screws)
5	Notebook feet (5)

---

## 4.4 Miscellaneous Cable Kit

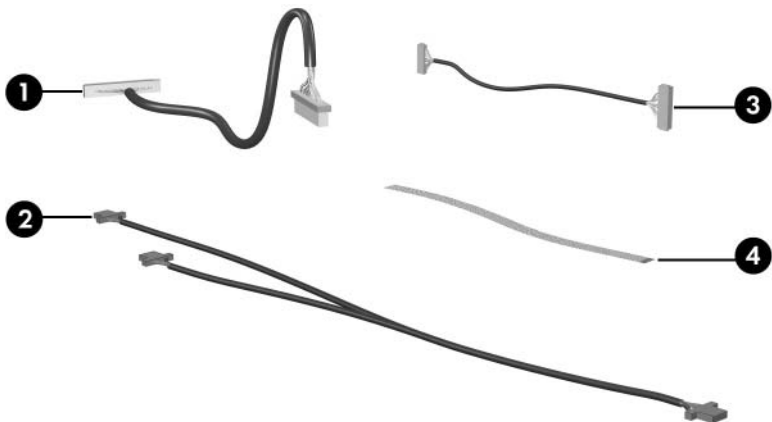

**Table 4-3**

**Spare Part Number 383516-001**

Item	Description
1	LED board cable
2	RJ-11 cable
3	TouchPad cable
4	Bluetooth cable

## 4.5 Miscellaneous (Not Illustrated)

---

**Table 4-4**  
**Miscellaneous Spare Part Information**

<b>Description</b>	<b>Spare Part Number</b>
<b>Label Kit</b>	383533-001
<b>Adjustable notebook stand</b>	372420-001
<b>Advanced Docking Station</b>	374804-001
<b>Docking Station</b>	374803-001
<b>Docking Station Miscellaneous Plastics Kit</b>	380045-001
<b>Power supply, 65 watt</b>	338136-001
<b>Power cords</b>	
For use in:	
Australia and New Zealand	350188-011
Belgium, Europe, Greece, Norway, and Portugal	350188-021
Canada, French Canada, Latin America, Taiwan, Thailand, and the United States	350188-001
Denmark	350188-081
France	350188-051
Germany	350188-041
Hong Kong and the United Kingdom	350188-031
Israel	350188-BB1
Italy	350188-061
Japan	350188-291
The Netherlands	350188-331
People's Republic of China	350188-AA1

---

**Table 4-4****Miscellaneous Spare Part Information (*Continued*)**

<b>Description</b>	<b>Spare Part Number</b>
Saudi Arabia	350188-171
Spain	350188-071
Sweden/Finland	350188-B71
<b>Screw Kit</b> (includes the following screws; refer to <a href="#">Appendix C, "Screw Listing,"</a> for more information on specifications and usage)	383556-001
<ul style="list-style-type: none"> <li>■ Phillips PM2.5×13.0 spring-loaded screw</li> <li>■ Phillips PM3.0×4.0 screw</li> <li>■ Phillips PM2.5×7.0 screw</li> <li>■ Phillips PM2.0×5.0 screw</li> <li>■ Phillips PM2.0×4.0 screw</li> </ul>	<ul style="list-style-type: none"> <li>■ Phillips PM1.5×3.5 screw</li> <li>■ Torx 8 M2.0×18.0 screw</li> <li>■ Torx 8 M2.0×9.0 screw</li> <li>■ Torx 8 M2.0×7.5 screw</li> <li>■ Torx 8 M2.0×5.0 screw</li> </ul>

## 4.6 Sequential Part Number Listing

**Table 4-5****Sequential Part Number Listing**

<b>Spare Part Number</b>	<b>Description</b>
337407-001	802.11a/b/g DynaStar WLAN Mini PCI communications card, for use in most of the world
337407-002	802.11a/b/g DynaStar WLAN Mini PCI communications card, for use in the rest of the world
337407-291	802.11a/b/g DynaStar WLAN Mini PCI communications card, for use in Japan
338136-001	65-watt power supply

---

**Table 4-5**  
**Sequential Part Number Listing (*Continued*)**

---

<b>Spare Part Number</b>	<b>Description</b>
350188-001	Power cord for use in Canada, French Canada, Latin America, Taiwan, Thailand, and the United States
350188-011	Power cord for use in Australia and New Zealand
350188-021	Power cord for use in Belgium, Europe, Greece, Norway, and Portugal
350188-031	Power cord for use in Hong Kong and the United Kingdom
350188-041	Power cord for use in Germany
350188-051	Power cord for use in France
350188-061	Power cord for use in Italy
350188-071	Power cord for use in Spain
350188-081	Power cord for use in Denmark
350188-171	Power cord for use in Saudi Arabia
350188-291	Power cord for use in Japan
350188-331	Power cord for use in the Netherlands
350188-AA1	Power cord for use in People's Republic of China
350188-B71	Power cord for use in Sweden/Finland
350188-BB1	Power cord for use in Israel
359106-001	802.11b/g Silverton WLAN Mini PCI communications card, for use in most of the world
359107-001	802.11b/g Silverton WLAN card Mini PCI communications card, for use in the rest of the world
370429-001	Bluetooth wireless module (includes Bluetooth module cable)
373888-001	802.11a/b/g FRLN WLAN Mini PCI communications card, for use in most of the world

---



**Table 4-5**  
**Sequential Part Number Listing (*Continued*)**

<b>Spare Part Number</b>	<b>Description</b>
373888-291	802.11a/b/g FRLN WLAN Mini PCI communications card, for use in Japan
373889-001	802.11a/b/g FRLN WLAN Mini PCI communications card, for use in the rest of the world
372420-001	Adjustable notebook stand
374803-001	Docking Station
374804-001	Advanced Docking Station
377408-001	802.11a/b/g ATMC WLAN Mini PCI communications card, for use in most of the world
377408-002	802.11a/b/g ATMC WLAN Mini PCI communications card, for use in the rest of the world
377408-291	802.11a/b/g ATMC WLAN Mini PCI communications card, for use in Japan
377792-001	802.11a/b/g FRLN WLAN Mini PCI communications card, for use in Europe
380045-001	Docking Station Miscellaneous Plastics Kit
383458-001	Keyboard with pointing stick for use in the United States
383458-011	Keyboard with pointing stick for use in Australia
383458-021	Keyboard with pointing stick for use in Europe
383458-031	Keyboard with pointing stick for use in the United Kingdom
383458-041	Keyboard with pointing stick for use in Germany
383458-051	Keyboard with pointing stick for use in France
383458-061	Keyboard with pointing stick for use in Italy
383458-071	Keyboard with pointing stick for use in Spain
383458-081	Keyboard with pointing stick for use in Denmark

---

**Table 4-5**  
**Sequential Part Number Listing (*Continued*)**

<b>Spare Part Number</b>	<b>Description</b>
383458-091	Keyboard with pointing stick for use in Norway
383458-101	Keyboard with pointing stick for use in Sweden
383458-111	Keyboard with pointing stick for use in Switzerland
383458-121	Keyboard with pointing stick for use in French Canada
383458-131	Keyboard with pointing stick for use in Portugal
383458-141	Keyboard with pointing stick for use in Turkey
383458-171	Keyboard with pointing stick for use in Saudi Arabia
383458-181	Keyboard with pointing stick for use in Belgium
383458-211	Keyboard with pointing stick for use in Hungary
383458-221	Keyboard with pointing stick for use in Czech Republic
383458-231	Keyboard with pointing stick for use in Slovakia
383458-241	Keyboard with pointing stick for use in Poland
383458-251	Keyboard with pointing stick for use in Russia
383458-281	Keyboard with pointing stick for use in Thailand
383458-291	Keyboard with pointing stick for use in Japan
383458-371	Keyboard with pointing stick for use in Asia Pacific
383458-AA1	Keyboard with pointing stick for use in People's Republic of China
383458-AB1	Keyboard with pointing stick for use in Taiwan
383458-AC1	Keyboard with pointing stick for use in Hong Kong
383458-AD1	Keyboard with pointing stick for use in Korea
383458-BB1	Keyboard with pointing stick for use in Israel
383458-DD1	Keyboard with pointing stick for use in Iceland

---

**Table 4-5**  
**Sequential Part Number Listing (*Continued*)**

<b>Spare Part Number</b>	<b>Description</b>
383509-001	Base enclosure
383510-001	6-cell battery pack
383511-001	Button board (includes button board cable)
383512-001	Infrared board (includes cable)
383515-001	System board
383516-001	Miscellaneous Cable Kit
383519-001	Keyboard cover
383520-001	Base enclosure cover
383522-001	Rear keyboard cover
383525-001	40-GB hard drive (5400 rpm; includes cover, frame, and connector)
383526-001	60-GB hard drive (5400 rpm; includes cover, frame, and connector)
383527-001	80-GB hard drive (5400 rpm; includes cover, frame, and connector)
383528-001	Fan
383529-001	Hard drive cover
383530-001	Display Hinge Kit
383534-001	Modem board (high-speed 56K, includes modem cable)
383535-001	PC23200 1024-MB memory module
383536-001	PC24200 1024-MB memory module
383537-001	PC23200 256-MB memory module
383538-001	PC24200 256-MB memory module
383541-001	PC23200 512-MB memory module

---

**Table 4-5**  
**Sequential Part Number Listing (*Continued*)**

---

<b>Spare Part Number</b>	<b>Description</b>
383542-001	PC24200 512-MB memory module
383545-001	TPM security module
383547-001	12.1-inch, XGA, TFT display assembly (includes wireless antenna boards and cables)
383549-001	Miscellaneous Plastics/Hardware Kit
383551-001	Intel Pentium M 1.60-GHz processor (includes thermal paste)
383552-001	Intel Pentium M 1.73-GHz processor (includes thermal paste)
383553-001	Intel Pentium M 1.86-GHz processor (includes thermal paste)
383554-001	Intel Pentium M 2.00-GHz processor (includes thermal paste)
383555-001	Intel Pentium M 2.13-GHz processor (includes thermal paste)
383557-001	Speaker
383559-001	Heat sink
383560-001	Top cover
383562-001	TouchPad (includes cable and bracket)
383625-001	RTC battery
383533-001	Label Kit
383556-001	Screw Kit
384144-001	Intel Celeron M 1.50-GHz processor (includes thermal paste)

---

---

# Removal and Replacement Preliminaries

This chapter provides essential information for proper and safe removal and replacement service.

## 5.1 Tools Required

You will need the following tools to complete the removal and replacement procedures:

- Magnetic screwdriver
- Phillips P0 screwdriver
- Torx T8 screwdriver
- Flat-bladed screwdriver
- Tool kit—includes connector removal tool, loopback plugs, and case utility tool

## 5.2 Service Considerations

The following sections include some of the considerations that you should keep in mind during disassembly and assembly procedures.



As you remove each subassembly from the notebook, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

### Plastic Parts

Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

### Cables and Connectors



**CAUTION:** When servicing the notebook, ensure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the notebook.

---

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Ensure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## 5.3 Preventing Damage to Removable Drives

Removable drives are fragile components that must be handled with care. To prevent damage to the notebook, damage to a removable drive, or loss of information, observe the following precautions:

- Before removing or inserting a hard drive, shut down the notebook. If you are unsure whether the notebook is off or in hibernation, turn the notebook on, and then shut it down through the operating system.
- Before removing a diskette drive or optical drive, ensure that a diskette or disc is not in the drive and ensure that the optical drive tray is closed.
- Before handling a drive, ensure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
- Handle drives on surfaces covered with at least one inch of shock-proof foam.
- Avoid dropping drives from any height onto any surface.
- After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.
- Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.
- Avoid exposing a drive to temperature extremes or liquids.
- If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package “FRAGILE: Handle With Care.”

## **5.4 Preventing Electrostatic Damage**

Many electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

A sudden discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs.

An electronic device exposed to electrostatic discharge may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.



## 5.5 Packaging and Transporting Precautions

Use the following grounding precautions when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe containers, such as tubes, bags, or boxes.
- Protect all electrostatic-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a sensitive component or assembly.
- Store reusable electrostatic-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Ensure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## 5.6 Workstation Precautions

Use the following grounding precautions at workstations:

- Cover the workstation with approved static-shielding material (refer to [Table 5-2, “Static-Shielding Materials”](#)).
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools such as cutters, drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials such as ordinary plastic assembly aids and Styrofoam.
- Handle electrostatic-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## 5.7 Grounding Equipment and Methods

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

Other grounding equipment recommended for use in preventing electrostatic damage includes:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

Table 5-1 shows how humidity affects the electrostatic voltage levels generated by different activities.

**Table 5-1**  
**Typical Electrostatic Voltage Levels**


Event	Relative Humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V
 A product can be degraded by as little as 700 V.			

Table 5-2 lists the shielding protection provided by antistatic bags and floor mats.

**Table 5-2**  
**Static-Shielding Materials**

Material	Use	Voltage Protection Level
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


---

# Removal and Replacement Procedures

This chapter provides removal and replacement procedures. There are 56 screws, in 10 different sizes, that may have to be removed, replaced, or loosened when servicing the notebook. Make special note of each screw and screw lock size and location during removal and replacement. Refer to [Appendix C, “Screw Listing,”](#) for detailed information on screw and screw lock sizes, locations, and usage.

## 6.1 Serial Number

Report the notebook serial number to HP when requesting information or ordering spare parts. The serial number is located on the bottom of the notebook.

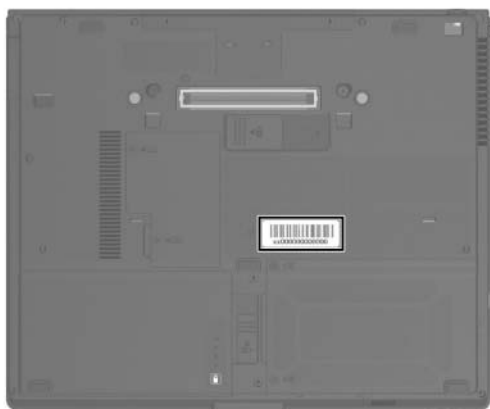


*Serial Number Location*

## 6.2 Disassembly Sequence Chart

Use the chart below to determine the section number to be referenced when removing notebook components.

Disassembly Sequence Chart		
Section	Description	# of Screws Removed
6.3	Preparing the notebook for disassembly Battery pack	0
6.4	Hard drive	2 loosened to remove the hard drive cover 1 loosened to remove the hard drive 4 to disassemble the hard drive
6.5	Notebook feet	0
6.6	Bluetooth module	2 loosened to remove the Bluetooth cover
6.7	External memory module	2 to remove the memory module compartment cover
6.8	TPM security card	1
6.9	Keyboard cover	2
6.10	Keyboard	4
6.11	Fan	3
6.12	Heat sink	4

### Disassembly Sequence Chart (*Continued*)

Section	Description	# of Screws Removed
6.13	Processor	1 loosened
6.14	Internal memory module	0
6.15	Mini PCI communications card	0
	 To prevent an unresponsive system and the display of a warning message, install only a Mini PCI device authorized for use in your notebook by the governmental agency that regulates wireless devices in your country. If you install a device and then receive a warning message, remove the device to restore notebook functionality. Then contact Customer Care.	
6.16	Display assembly	6
6.17	Button board	2 on rear keyboard cover 1 on button board
6.18	Top cover	8
6.19	TouchPad	4
6.20	Speaker	2
6.21	Infrared board	1
6.22	System board	5
6.23	Modem board	2
6.24	RTC battery	0

## 6.3 Preparing the Notebook for Disassembly

Before you begin any removal or installation procedures:

1. Shut down the notebook. If you are unsure whether the notebook is off or in hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the notebook.
3. Disconnect the power cord.

---

### Battery Pack Spare Part Number Information


---

6-cell battery pack	383510-001
---------------------	------------

---



4. Remove the battery pack by following these steps:
  - c. Turn the notebook upside down with the rear panel toward you.
  - d. Slide the battery release latch **1** toward you. (The left side of the battery pack disengages from the notebook.)
  - e. Lift the left side of the battery pack and swing it to the right **2** to remove it.

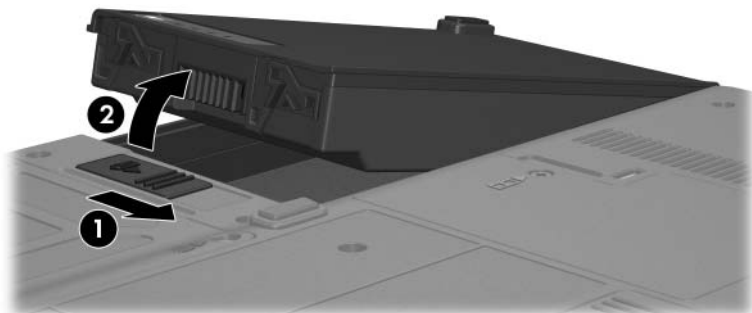

#### *Removing the Battery Pack*

Reverse the above procedure to install the battery pack.

## 6.4 Hard Drive

---

### Hard Drive Spare Part Number Information

---

Hard drives (all 5400 rpm; include cover, frame, and connector)

80-GB	383527-001
60-GB	383526-001
40-GB	383525-001


---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the two PM2.0×5.0 screws ❶ that secure the hard drive cover to the notebook.
3. Lift the right side of the hard drive cover and swing it to the left ❷ to remove it.




The hard drive cover is included in the Miscellaneous Plastics/Hardware Kit, spare part number 383549-001.

---

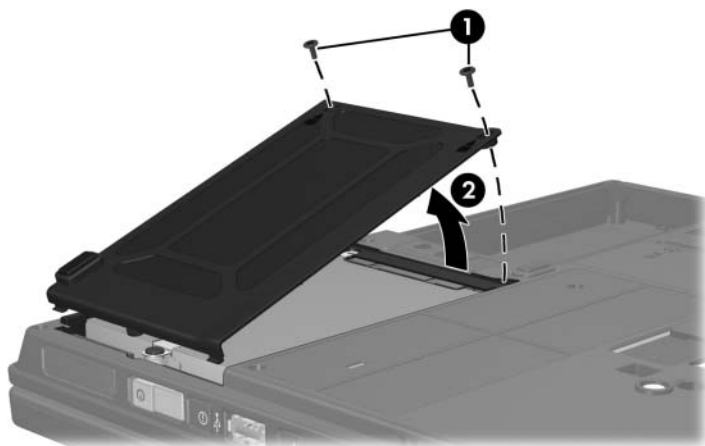


*Removing the Hard Drive Cover*

4. Loosen the PM2.5×13.0 hard drive retention screw ❶.
5. Grasp the mylar tab ❷ on the hard drive and slide the hard drive to the left ❸ to disconnect it from the system board.
6. Remove the hard drive ❹.

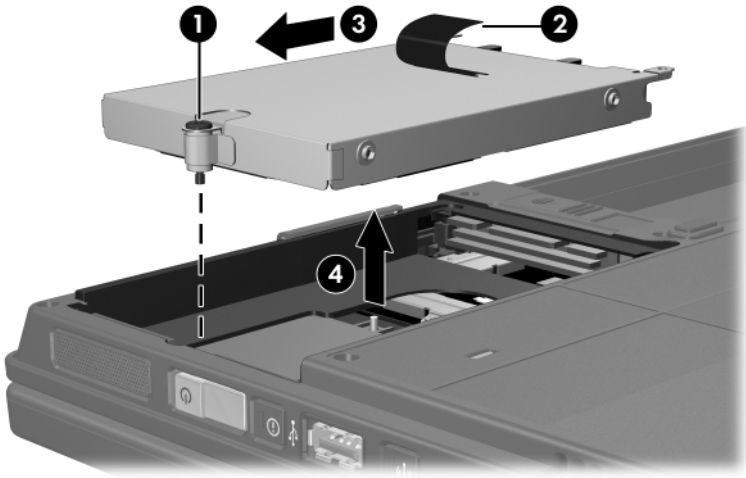

*Removing the Hard Drive*

7. Remove the four PM3.0×4.0 screws **①** that secure the hard drive frame to the hard drive.
8. Lift the frame straight up **②** to remove it from the hard drive.
9. Remove the hard drive connector **③**.

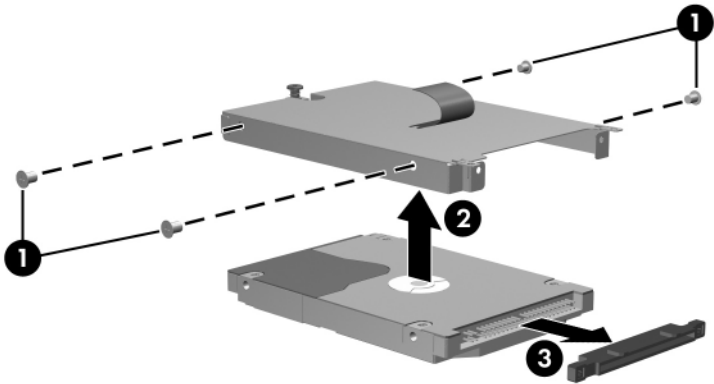


*Removing the Hard Drive Frame*

Reverse the above procedure to reassemble and install the hard drive.

## 6.5 Notebook Feet

The notebook feet are adhesive-backed rubber pads. The feet are included in the Miscellaneous Plastics/Hardware Kit, spare part number 383549-001.

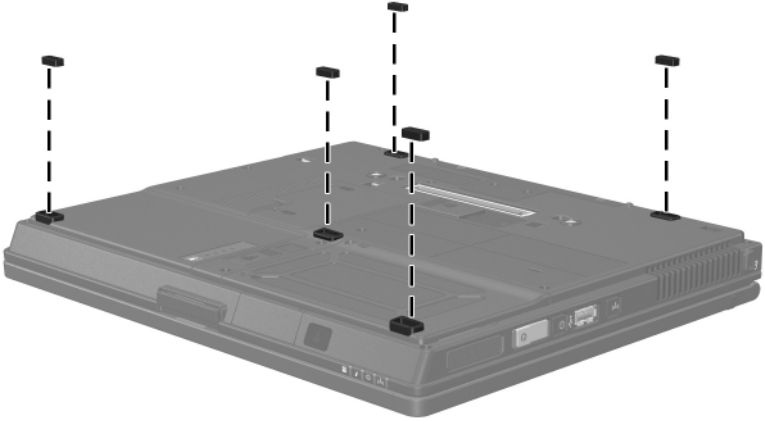

### *Replacing the Notebook Feet*

## 6.6 Bluetooth Module

---

### Bluetooth Module Spare Part Number Information

---

Bluetooth wireless module (includes Bluetooth module cable)	370429-001
---	------------


---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the hard drive ([Section 6.4](#)).
3. Position the notebook with the front toward you.
4. Loosen the two PM2.0×5.0 screws ❶ that secure the Bluetooth cover to the notebook.
5. Remove the Bluetooth cover ❷.




The Bluetooth cover is included in the Miscellaneous Plastics/Hardware Kit, spare part number 383549-001.

---

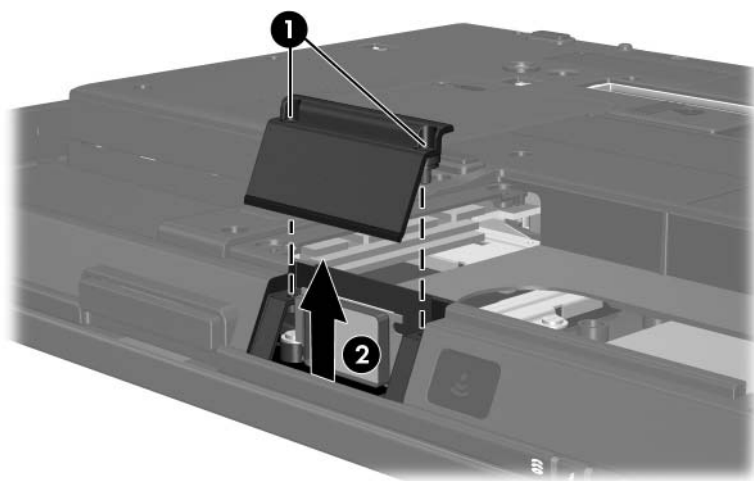

*Removing the Bluetooth Cover*

6. Slide the Bluetooth module out of the notebook ❶.
7. Disconnect the Bluetooth module cable ❷ from the board.

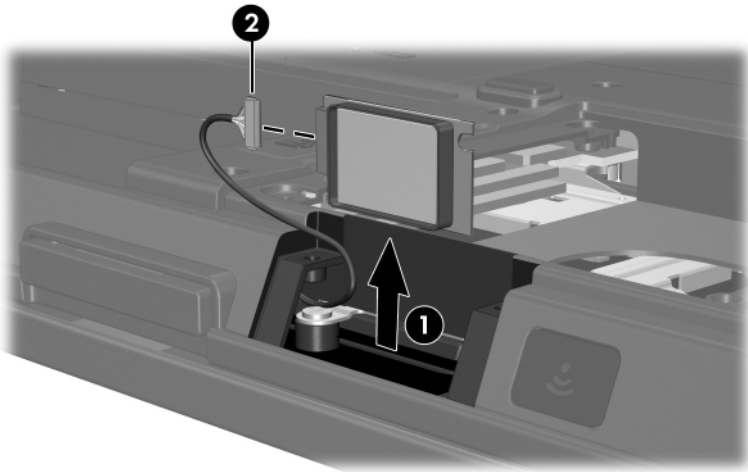

#### *Removing the Bluetooth Module*

Reverse the above procedure to install the Bluetooth module.

# 6.7 External Memory Module

---

## Memory Module Spare Part Number Information

---

PC24200	
1024 MB	383536-001
512 MB	383542-001
256 MB	383538-001
PC23200	
1024 MB	383535-001
512 MB	383541-001
256 MB	383537-001

---

1. Prepare the notebook for disassembly (refer to [Section 6.3](#)).
2. Position the notebook with the front toward you.




3. Remove the two PM2.0×5.0 screws ❶ that secure the memory module compartment cover to the notebook.
4. Lift the left side of the cover and swing it to the right ❷ to remove the memory module compartment cover.



The memory module compartment cover is included in the Miscellaneous Plastics/Hardware Kit, spare part number 383549-001.

---

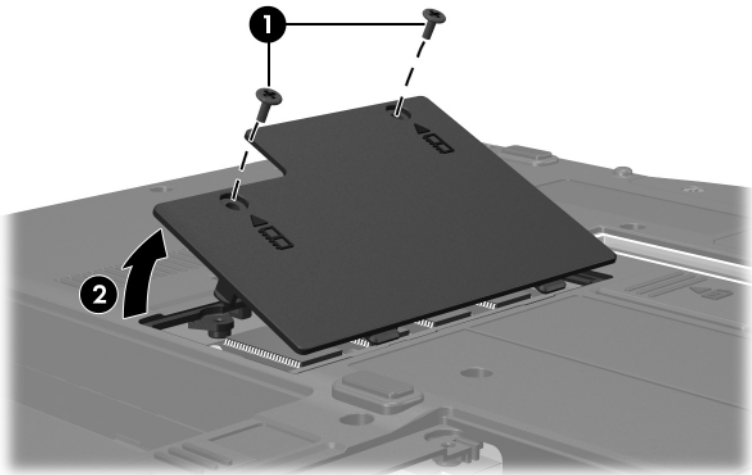


*Removing the Memory Module Compartment Cover*

5. Spread the retaining tabs **①** on each side of the memory module socket to release the memory module. (The side of the module opposite the socket rises away from the notebook.)
6. Slide the module away from the socket at an angle **②**.
7. Remove the memory module.



Memory modules are slotted **③** to prevent incorrect installation into the memory module socket.

---

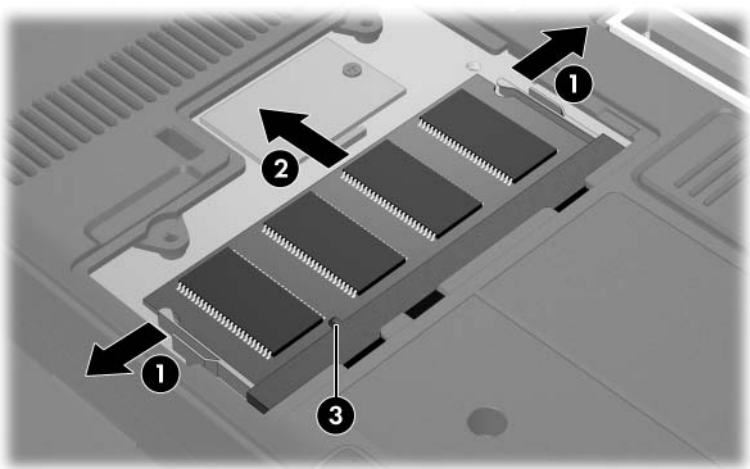

#### *Removing the Memory Module*

Reverse the above procedure to install an external memory module.

## 6.8 TPM Security Card

---

### TPM Security Card Spare Part Number Information


---

TPM security module

383545-001

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the memory module compartment cover ([Section 6.7](#)).
3. Remove the PM1.5×3.5 screw ❶ that secures the TPM security card to the notebook.
4. Lift up on the rear edge of the TPM security card ❷ to disconnect it from the system board.
5. Remove the TPM security card.

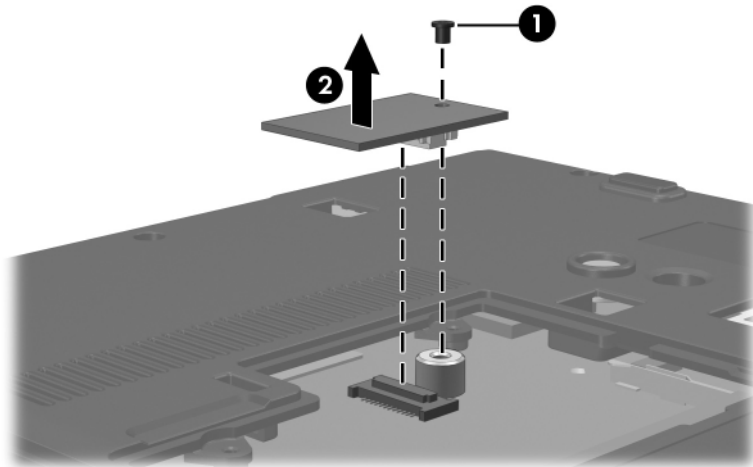

*Removing a TPM Security Card*

Reverse the above procedure to install the TPM security card.

## 6.9 Keyboard Cover

---

### Keyboard Cover Spare Part Number Information


---

Keyboard cover

383519-001

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Position the notebook with the front toward you.
3. Remove the two T8M2.0×18.0 screws that secure the keyboard cover to the notebook.

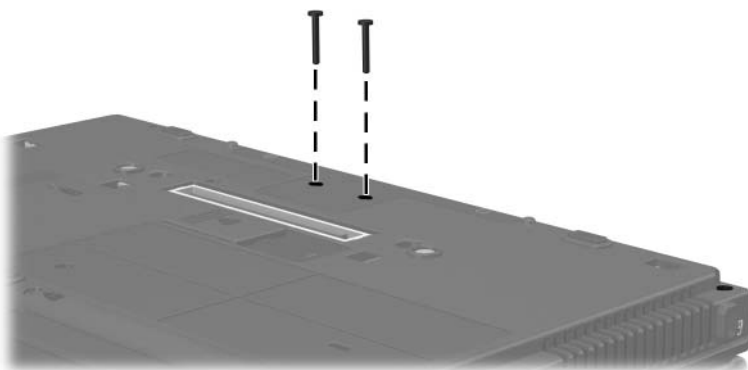

*Removing the Keyboard Cover Screws*

4. Turn the notebook right-side up with the front toward you.
5. Open the notebook as far as possible.
6. Lift the front edge of the keyboard cover until it detaches from the notebook.



*Releasing the Keyboard Cover*

7. Lift the keyboard cover straight up and remove it.



*Removing the Keyboard Cover*

Reverse the above procedure to install the keyboard cover.

## 6.10 Keyboard

---

### Keyboard Spare Part Number Information

---

Keyboards, with pointing stick


Asia Pacific	383458-371	The Netherlands	383458-331
Australia	383458-011	Norway	383458-091
Belgium	383458-181	People's Republic of China	383458-AA1
Czech Republic	383458-221	Poland	383458-241
Denmark	383458-081	Portugal	383458-131
Europe	383458-021	Russia	383458-251
France	383458-051	Saudi Arabia	383458-171
French Canada	383458-121	Spain	383458-071
Germany	383458-041	Slovakia	383458-231
Hong Kong	383458-AC1	Sweden	383458-101
Hungary	383458-211	Switzerland	383458-111
Iceland	383458-DD1	Taiwan	383458-AB1
Israel	383458-BB1	Thailand	383458-281
Italy	383458-061	Turkey	383458-141
Japan	383458-291	United Kingdom	383458-031
Korea	383458-AD1	United States	383458-001
Latin America	383458-161		

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Turn the notebook upside down with the front toward you.

4. Remove the following:


- ❶ Three T8M2.0×9.0 screws
- ❷ One T8M2.0×5.0 screw

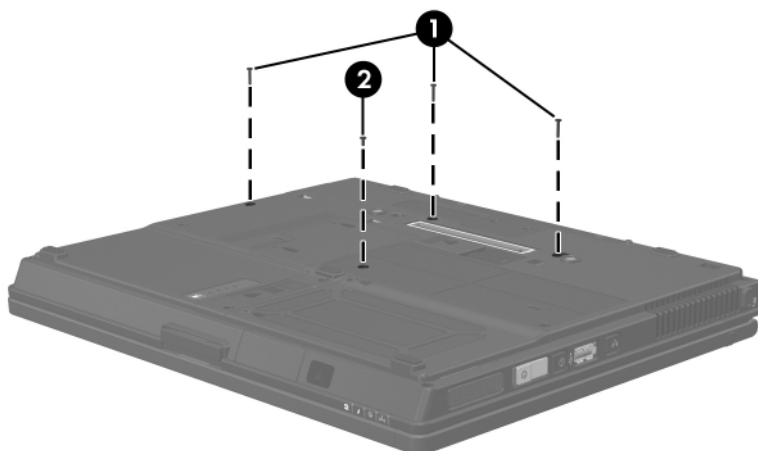

*Removing the Keyboard Screws*




5. Turn the notebook right-side up with the front toward you.
6. Open the notebook as far as possible.
7. Slide the keyboard back ❶ until the pointing stick cable is accessible.
8. Release the zero insertion force (ZIF) connector to which the pointing stick cable is connected and disconnect the pointing stick cable ❷ from the system board.

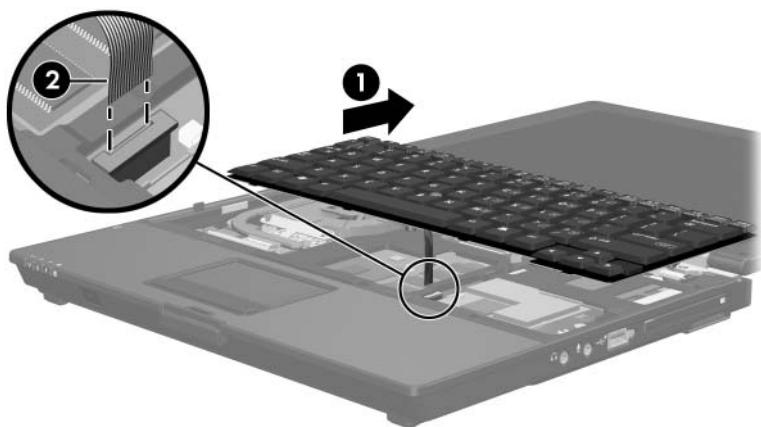

*Disconnecting the Pointing Stick Cable*

9. Lift the rear edge of the keyboard **1** until it disengages from the notebook.
10. Slide the keyboard forward **2** until it rests on the palm rest.
11. Release the ZIF connector to which the keyboard cable is connected and disconnect the keyboard cable **3** from the system board.
12. Remove the keyboard.

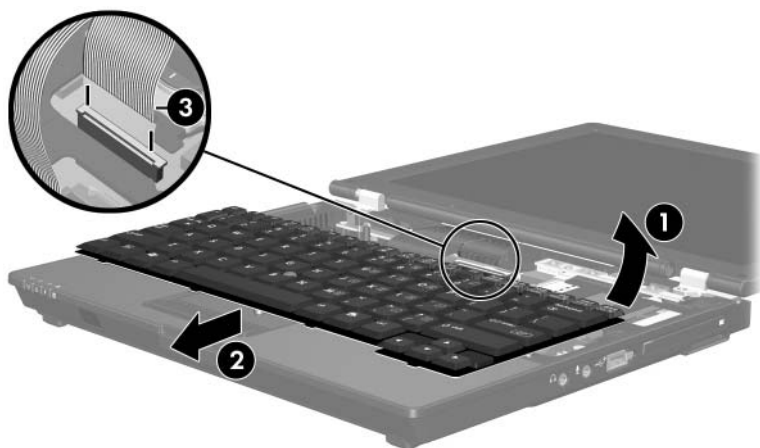

### *Removing the Keyboard*

Reverse the above procedure to install the keyboard.


## 6.11 Fan

### Fan Spare Part Number Information

Fan

383528-001

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Release the keyboard ([Section 6.10](#)).
4. Disconnect the fan cable ❶ from the system board.
5. Remove the three T8M2.0×7.5 screws ❷ that secure the fan to the notebook.
6. Remove the fan ❸.

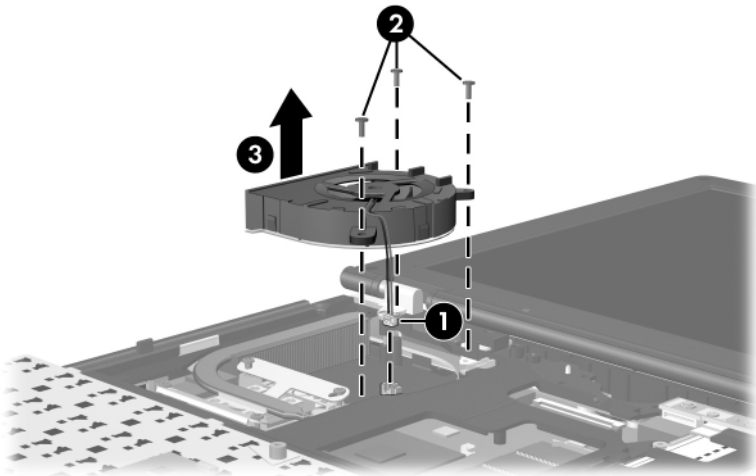

*Removing the Fan*

Reverse the above procedure to install the fan.

# 6.12 Heat Sink

---

## Heat Sink Spare Part Number Information

---


Heat sink (includes thermal paste)

383559-001

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Release the keyboard ([Section 6.10](#)).
4. Remove the fan ([Section 6.11](#)).

5. Remove the four PM2.5×7.0 screws that secure the heat sink to the notebook.

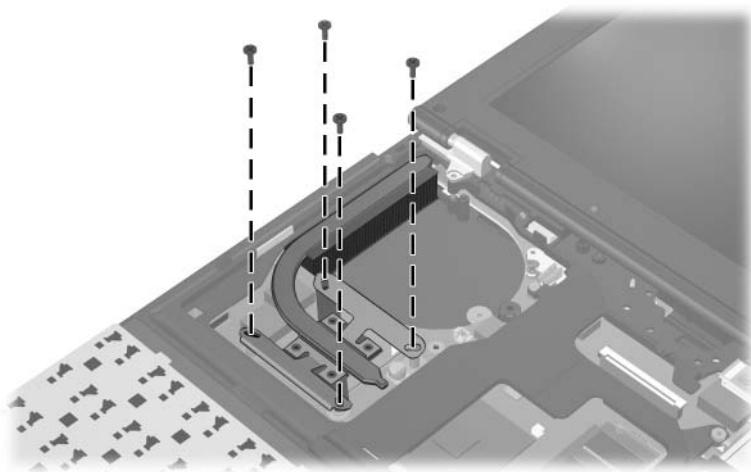

*Removing the Heat Sink Screws*


6. Lift the right side of the heat sink **1** to disengage it from the processor.

7. Slide the heat sink up and to the right **2** to remove it.



Due to the adhesive quality of the thermal paste located between the heat sink and processor, it may be necessary to move the heat sink from side to side to detach the heat sink from the processor.

---

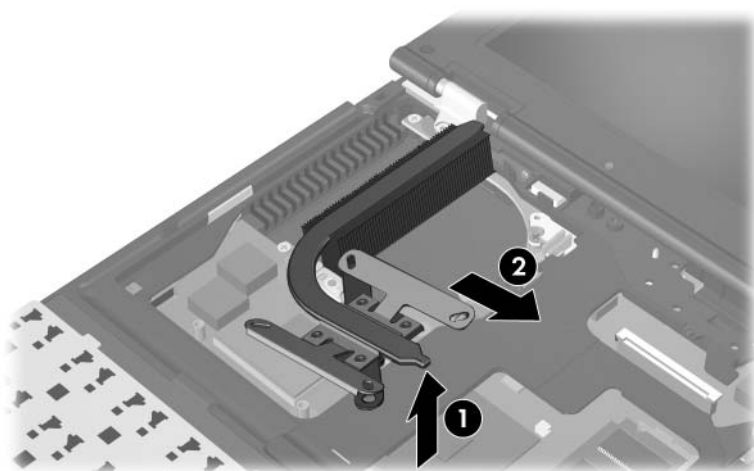


*Removing the Heat Sink*



The thermal paste should be thoroughly cleaned from the surfaces of the heat sink **1** and processor **2** each time the heat sink is removed. Thermal paste is included with all heat sink and processor spare part kits.

---

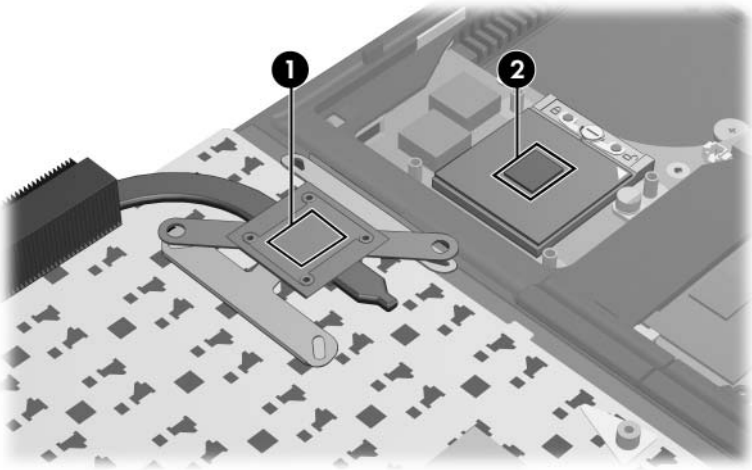

*Thermal Paste Locations*

Reverse the above procedure to install the heat sink.

# 6.13 Processor



All processor spare part kits include thermal paste.

---

---

## Processor Spare Part Number Information

---

Intel Pentium M 2.13-GHz	383555-001
Intel Pentium M 2.00-GHz	383554-001
Intel Pentium M 1.86-GHz	383553-001
Intel Pentium M 1.73-GHz	383552-001
Intel Pentium M 1.60-GHz	383551-001
Intel Celeron M 1.50-GHz	384144-001

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Release the keyboard ([Section 6.10](#)).
4. Remove the fan ([Section 6.11](#)).
5. Remove the heat sink ([Section 6.12](#)).




6. Use a flat-blade screwdriver to turn the processor locking screw one-quarter turn counterclockwise ❶ until you hear a click.
7. Lift the processor straight up and remove it ❷.



The gold triangle ❸ on the processor should be aligned in the rear right corner when you install the processor.

---

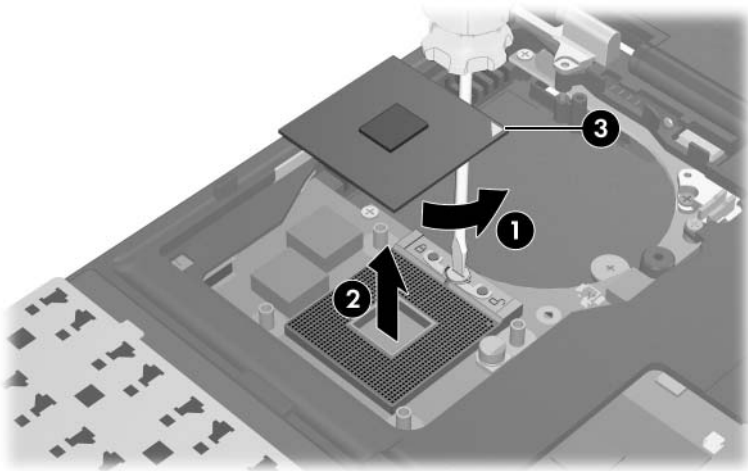

#### *Removing the Processor*

Reverse the above procedure to install the processor.

# 6.14 Internal Memory Module

---

## Memory Module Spare Part Number Information

---

PC24200	
1024 MB	383536-001
512 MB	383542-001
256 MB	383538-001
PC23200	
1024 MB	383535-001
512 MB	383541-001
256 MB	383537-001

---


1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Release the keyboard ([Section 6.10](#)).

4. Spread the retaining tabs ❶ on each side of the memory module socket to release the memory module. (The side of the memory module opposite the socket rises away from the notebook.)
5. Slide the memory module away from the socket at an angle ❷.
6. Remove the memory module.



Memory modules are slotted ❸ to prevent incorrect installation into the memory module socket.

---

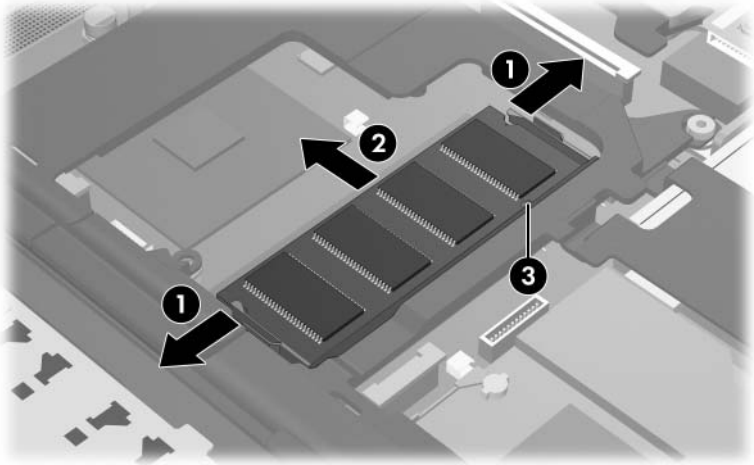

#### *Removing the Internal Memory Module*

Reverse the above procedure to install a memory module.

## 6.15 Mini PCI Communications Card

---

### Mini PCI Communications Card Spare Part Number Information

---

802.11b/g Silverton wireless local access network (WLAN) card, for use in most of the world	359106-001
802.11b/g Silverton WLAN card, for use in the rest of the world	359107-001
802.11a/b/g FRLN WLAN card, for use in Europe	377792-001
802.11a/b/g FRLN WLAN card, for use in Japan	373888-291
802.11a/b/g FRLN WLAN card, for use in most of the world	373888-001
802.11a/b/g FRLN WLAN card, for use in the rest of the world	373889-001
802.11a/b/g DynaStar WLAN card, for use in Japan	337407-291
802.11a/b/g DynaStar WLAN card, for use in most of the world	337407-001
802.11a/b/g DynaStar WLAN card, for use in the rest of the world	337407-002
802.11a/b/g ATMC WLAN card, for use in Japan	377408-291
802.11a/b/g ATMC WLAN card, for use in most of the world	377408-001
802.11a/b/g ATMC WLAN card, for use in the rest of the world	377408-002

---

1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Release the keyboard ([Section 6.10](#)).



Make note of which antenna cable is attached to which antenna clip on the Mini PCI communications card before disconnecting the cables.


---

4. Disconnect the auxiliary and main antenna cables ❶ from the Mini PCI communications card.
  5. Spread the two retaining tabs ❷ on each side of the Mini PCI socket to release the Mini PCI communications card. (The edge of the card opposite the socket rises away from the notebook.)
  6. Remove the Mini PCI communications card by pulling the card away from the socket at a 45-degree angle ❸.
- 



The Mini PCI communications card is slotted ❹ to prevent incorrect installation.

---

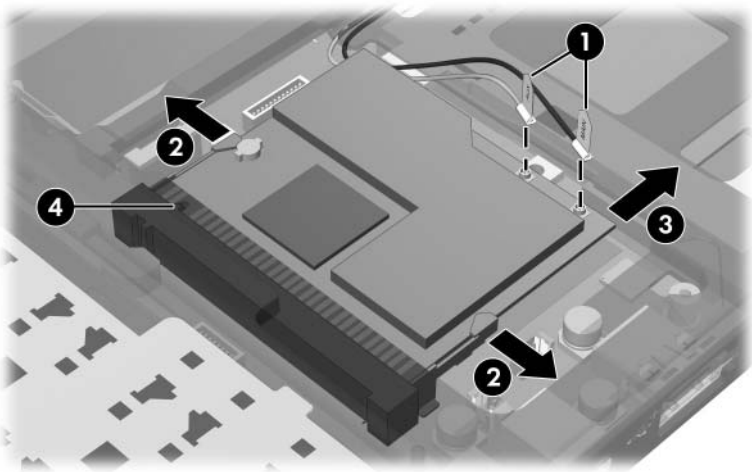

*Removing a Mini PCI Communications Card*

Reverse the above procedure to install a Mini PCI communications card.

# 6.16 Display Assembly

---

## Display Assembly Spare Part Number Information


---

12.1-inch, XGA, TFT display assembly (includes wireless antenna boards and cables)	383547-001
Display Hinge Kit	383530-001

---


1. Prepare the notebook for disassembly ([Section 6.3](#)).
2. Remove the keyboard cover ([Section 6.9](#)).
3. Remove the keyboard ([Section 6.10](#)).
4. Close the notebook.
5. Turn the notebook upside down with the rear panel toward you.

6. Remove the two T8M2.0×18.0 screws ❶ that secure the display cable cover to the notebook.
7. Remove the two T8M2.0×9.0 screws ❷ that secure the display assembly to the notebook.

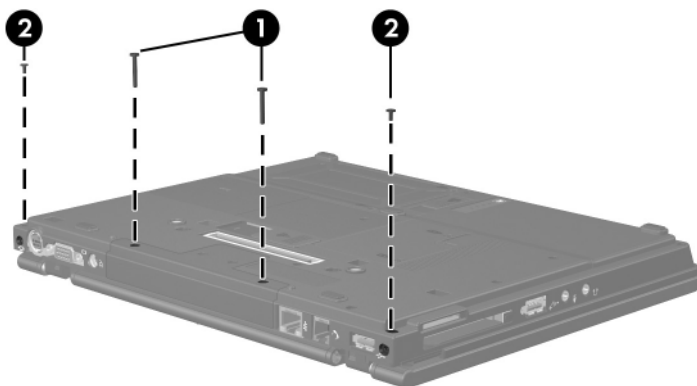

*Removing the Display Assembly Screws*


8. Remove the base enclosure cover.

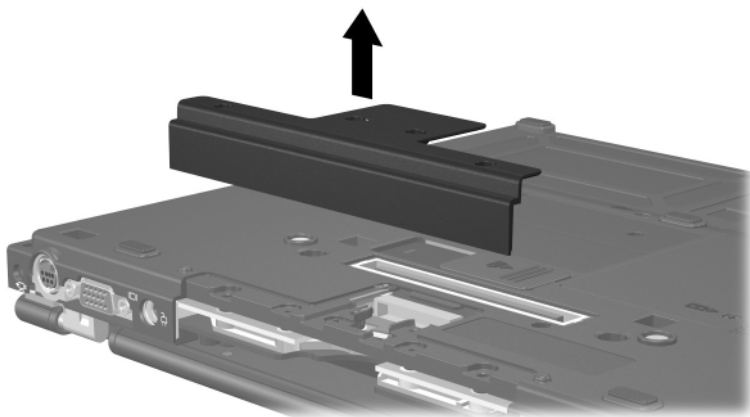

*Removing the Base Enclosure Cover*




9. Disconnect the display cable from the system board.

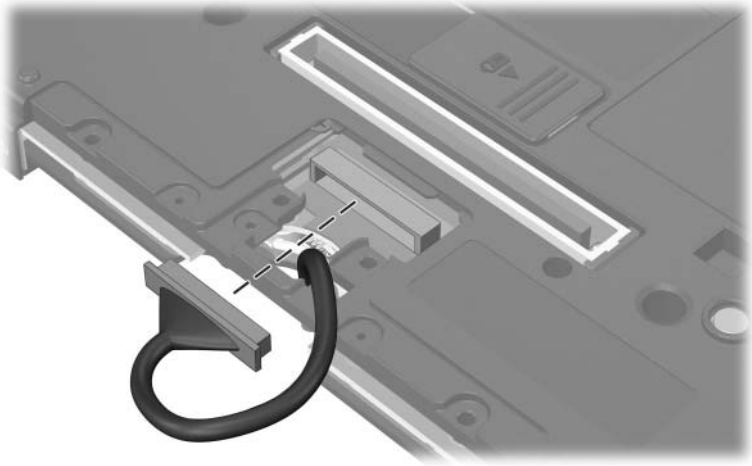


*Disconnecting the Display Cable*

10. Route the display cable through the opening between the base enclosure and the top cover.

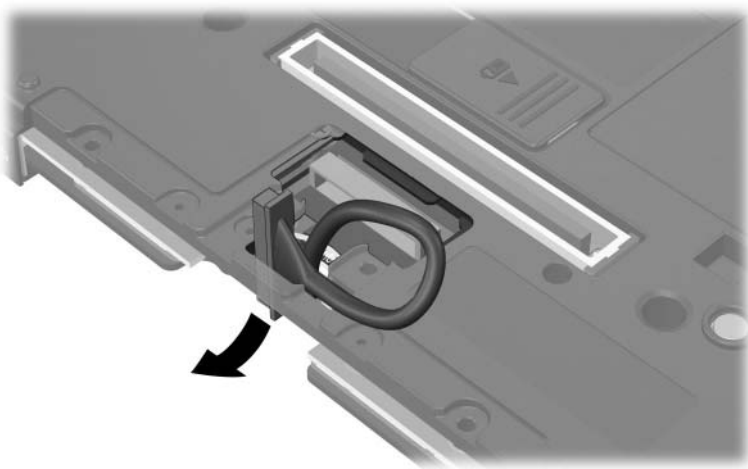


*Releasing the Display Cable*

11. Turn the notebook right-side up with the front toward you.
12. Open the notebook as far as possible.
13. Disconnect the wireless antenna cables from the Mini PCI communications card ❶.
14. Disconnect the microphone cable ❷ from the system board.
15. Remove the wireless antenna cables and the microphone cable from the routing channel ❸ and clips ❹ through which the cables are routed.

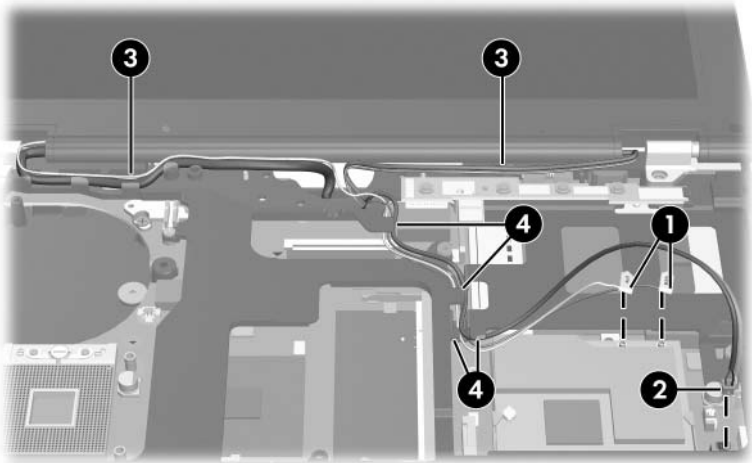

*Disconnecting the Display Cables*

16. Route the display cable through the opening in the notebook ❶.
17. Remove the two PM2.0×18.0 screws ❷ that secure the display assembly to the notebook.
18. Remove the display assembly ❸.

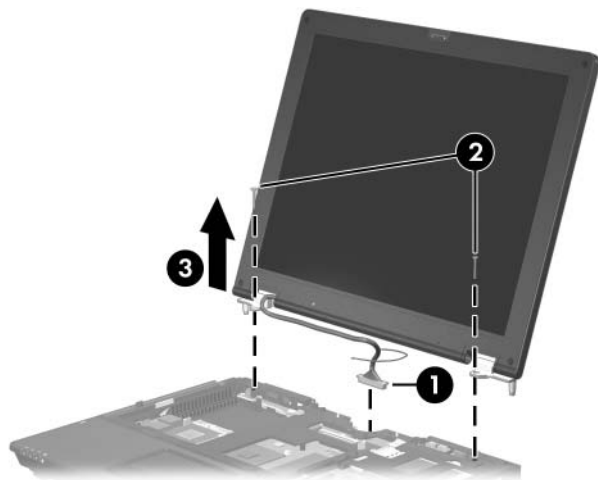

*Removing the Display Assembly*

Reverse the above procedure to install the display assembly.

## 6.17 Button Board

---

### Button Board Spare Part Number Information


---

Rear keyboard cover	383522-001
Button board (includes button board cable)	383511-001

---


1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Keyboard cover ([Section 6.9](#))
  - b. Keyboard ([Section 6.10](#))
  - c. Display assembly ([Section 6.16](#))

2. Remove the two T8M2.0×18.0 screws ❶ that secure the rear keyboard cover to the notebook.
3. Remove the rear keyboard cover ❷.

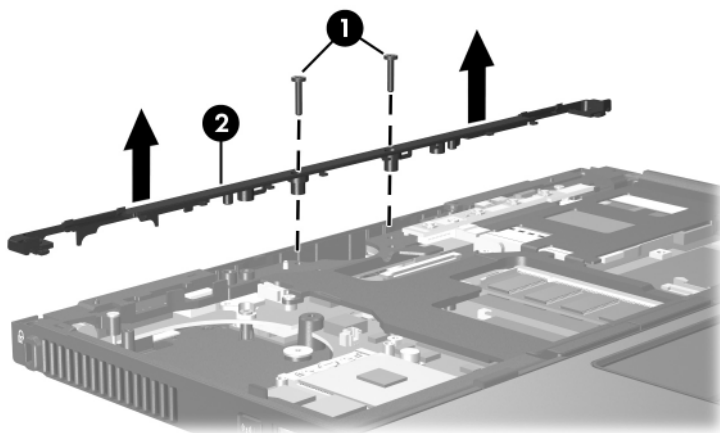


*Removing the Rear Keyboard Cover*

4. Disconnect the button board cable ❶ from the system board.
5. Remove the silver PM2.0×4.0 screw ❷ that secures the button board to the top cover.

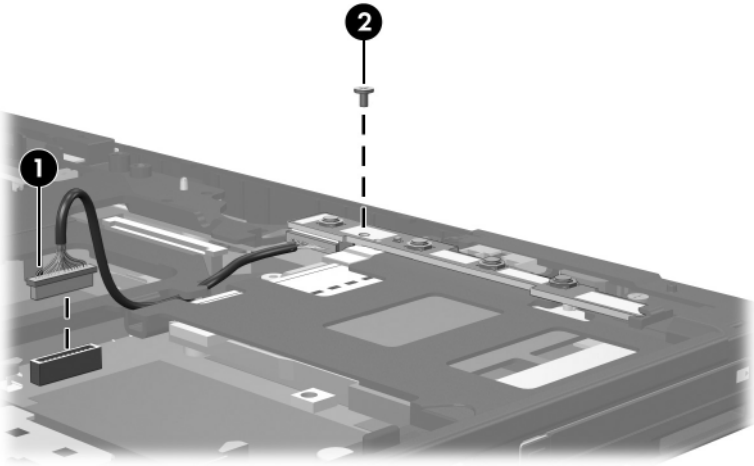

*Removing the Button Board Screw*

6. Lift the left side of the button board ❶.
7. Slide the button board to the left ❷ and remove it.

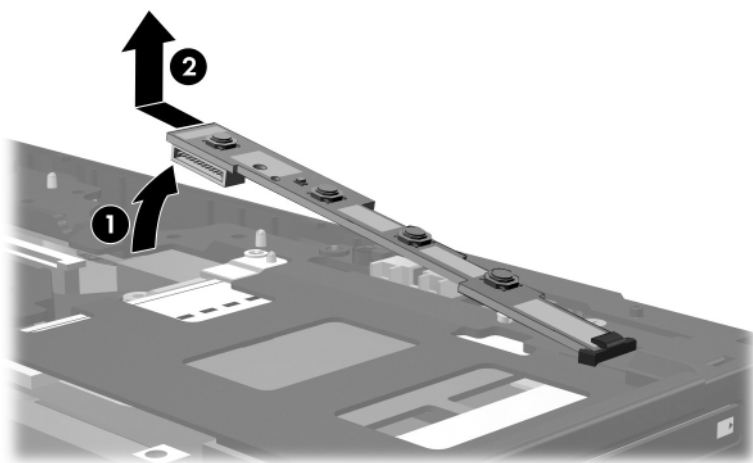

*Removing the Button Board*

Reverse the above procedure to install the button board.



## 6.18 Top Cover

---

### Top Cover Spare Part Number Information


---

Top cover	383560-001
-----------	------------

---


1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Keyboard cover ([Section 6.9](#))
  - c. Keyboard ([Section 6.10](#))
  - d. Display assembly ([Section 6.16](#))
  - e. Button board ([Section 6.17](#))
2. Turn the notebook upside down with the front toward you.

3. Remove the seven T8M2.0×9.0 screws that secure the top cover to the notebook.

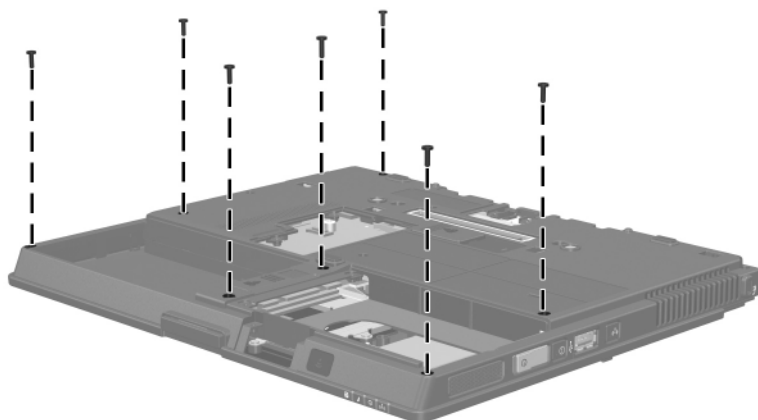


*Removing the Top Cover Screws, Part 1*

4. Turn the notebook right-side up with the front toward you.
5. Remove the silver PM2.0×4.0 screw that secures the top cover to the notebook.

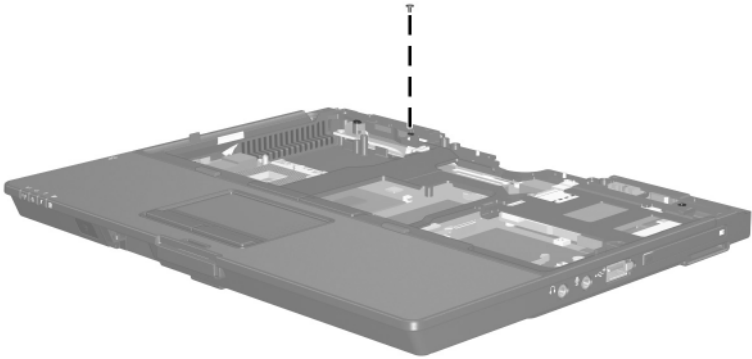

*Removing the Top Cover Screw, Part 2*

6. Disconnect the TouchPad cable from the system board ❶.
7. Lift the rear edge of the top cover ❷ until it disengages from the base enclosure.
8. Lift the top cover straight up ❸ and remove it.

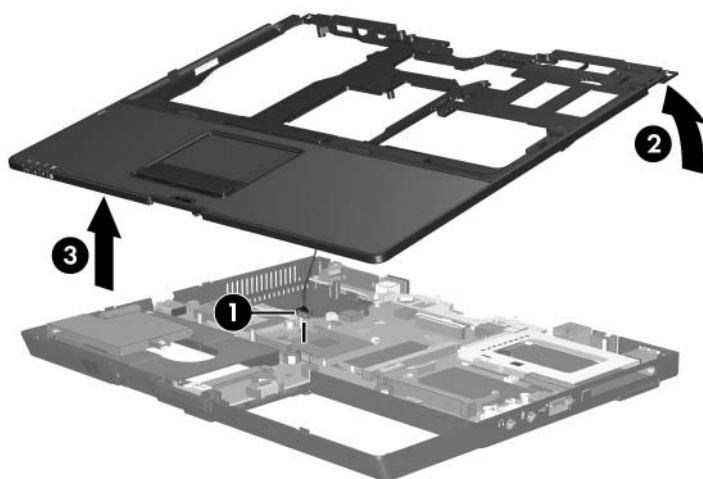

### *Removing the Top Cover*

Reverse the above procedure to install the top cover.

## 6.19 TouchPad

---

### TouchPad Spare Part Number Information


---

TouchPad (includes cable and bracket)	383562-001
---------------------------------------	------------

---


1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Keyboard cover ([Section 6.9](#))
  - c. Keyboard ([Section 6.10](#))
  - d. Display assembly ([Section 6.16](#))
  - e. Button board ([Section 6.17](#))
  - f. Top cover ([Section 6.18](#))
2. Turn the top cover upside down with the front toward you.

3. Remove the four PM2.0×4.0 screws that secure the TouchPad bracket to the top cover.

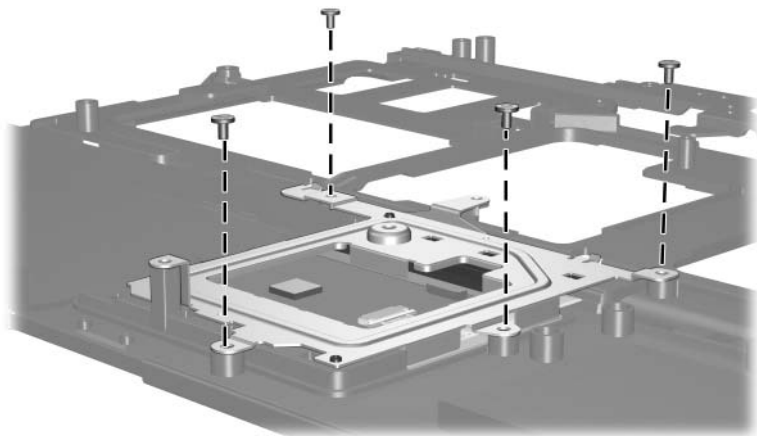


*Removing the TouchPad Bracket Screws*

4. Lift the right side of the TouchPad bracket ❶ until it rests at an angle.
5. Slide the TouchPad bracket to the right ❷ and remove it.

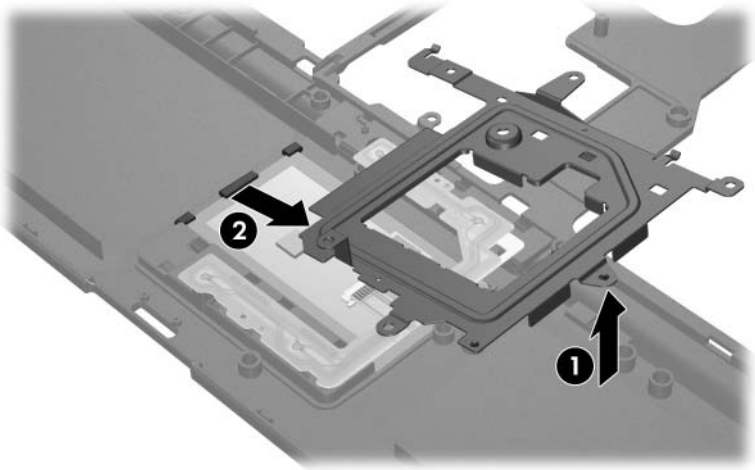

*Removing the TouchPad Bracket*

6. Lift the right side of the TouchPad ❶ until it rests at an angle.
7. Slide the TouchPad to the right and remove it ❷.

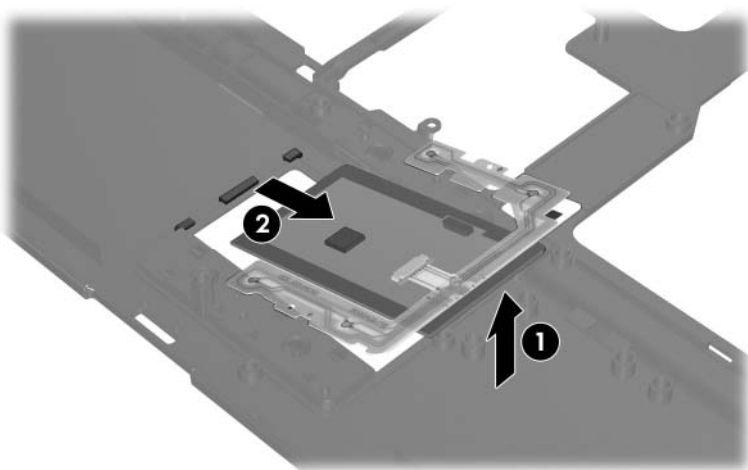

#### *Removing the TouchPad*

Reverse the above procedure to install the TouchPad.



## 6.20 Speaker

---

### Speaker Spare Part Number Information

---


Speaker

383557-00

---

1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Keyboard cover ([Section 6.9](#))
  - c. Keyboard ([Section 6.10](#))
  - d. Display assembly ([Section 6.16](#))
  - e. Button board ([Section 6.17](#))
  - f. Top cover ([Section 6.18](#))

- 
2. Disconnect the speaker cable ❶ from the system board and route the cable under the infrared board cable ❷.
3. Remove the two T8M2.0×5.0 screws ❸ that secure the speaker to the notebook.
4. Remove the speaker ❹.

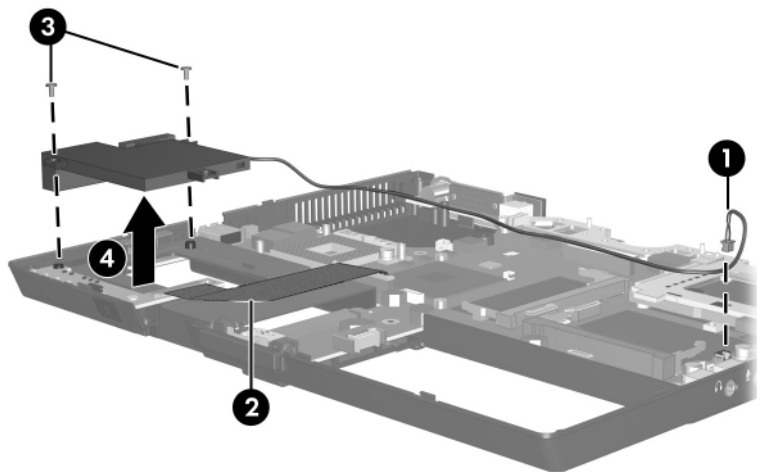

### *Removing the Speaker*

Reverse the above procedure to install the speaker.

## 6.21 Infrared Board

---

### Infrared Board Spare Part Number Information


---

Infrared board (includes cable)	383512-001
---------------------------------	------------

---

1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Keyboard cover ([Section 6.9](#))
  - c. Keyboard ([Section 6.10](#))
  - d. Display assembly ([Section 6.16](#))
  - e. Button board ([Section 6.17](#))
  - f. Top cover ([Section 6.18](#))
  - g. Speaker ([Section 6.20](#))

2. Release the ZIF connector to which the infrared board cable is connected and disconnect the cable ❶ from the system board.
3. Remove the T8M2.0×5.0 screw ❷ that secures the infrared board to the system board.
4. Remove the infrared board ❸.

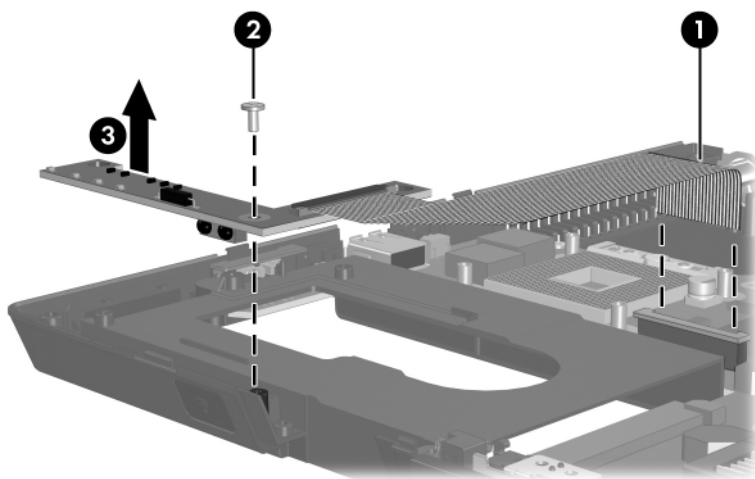

### *Removing the Infrared Board*

Reverse the above procedure to install the infrared board .

## 6.22 System Board

---

### System Board Spare Part Number Information

---

System board	383515-001
--------------	------------

---




When replacing the system board, ensure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory modules ([Section 6.7](#) and [Section 6.14](#))
  - TPM security card ([Section 6.8](#))
  - Processor ([Section 6.13](#))
  - Mini PCI communications card ([Section 6.15](#))
  - Modem board ([Section 6.23](#))
  - RTC battery ([Section 6.24](#))
-


1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Bluetooth module ([Section 6.6](#))
  - c. Keyboard cover ([Section 6.9](#))
  - d. Keyboard ([Section 6.10](#))
  - e. Fan ([Section 6.11](#))
  - f. Heat sink ([Section 6.12](#))
  - g. Display assembly ([Section 6.16](#))
  - h. Button board ([Section 6.17](#))
  - i. Top cover ([Section 6.18](#))
  - j. Speaker ([Section 6.20](#))
  - k. Infrared board ([Section 6.21](#))

2. Remove the four T8M2.0×5.0 screws ❶ that secure the system board to the notebook.
3. Remove the T8M2.0×7.5 screw ❷ that secures the system board spacer to the notebook.
4. Remove the system board spacer ❸.

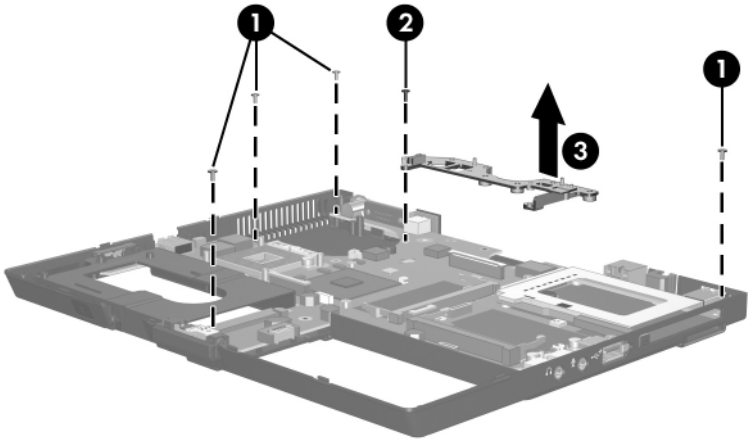

*Removing the System Board Screws*

5. Lift the left side of the system board **1** until the hard drive connector **2** is clear of the base enclosure.
6. Slide the system board to the left **3** to remove it.

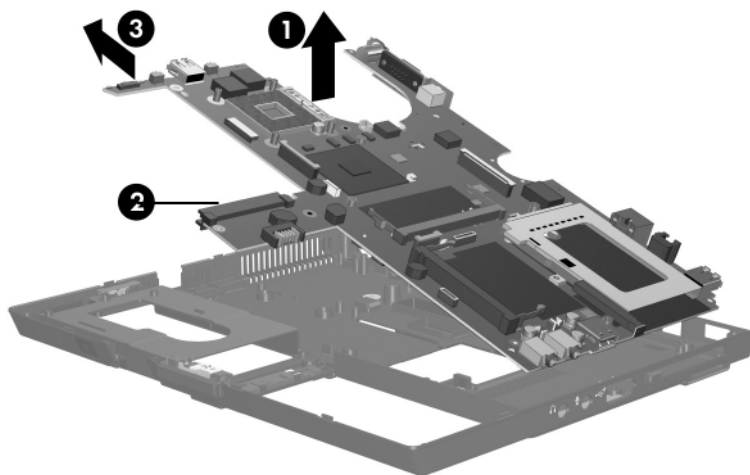

### *Removing the System Board*

Reverse the above procedure to install the system board.



## 6.23 Modem Board

---

### Modem Board Spare Part Number Information


---

Modem board (high-speed 56K, includes modem cable)	383534-001
--	------------

---

1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Bluetooth module ([Section 6.6](#))
  - c. Keyboard cover ([Section 6.9](#))
  - d. Keyboard ([Section 6.10](#))
  - e. Fan ([Section 6.11](#))
  - f. Heat sink ([Section 6.12](#))
  - g. Display assembly ([Section 6.16](#))
  - h. Button board ([Section 6.17](#))
  - i. Top cover ([Section 6.18](#))
  - j. Speaker ([Section 6.20](#))
  - k. Infrared board ([Section 6.21](#))
  - l. System board ([Section 6.22](#))
2. Turn the system board upside down with the front toward you.

3. Disconnect the modem cable from the two connectors **1** on the system board.
4. Remove the two PM2.0×4.0 screws **2** that secure the modem board to the system board.
5. Lift the right side of the modem board **3** to disconnect it from the system board.
6. Remove the modem board.

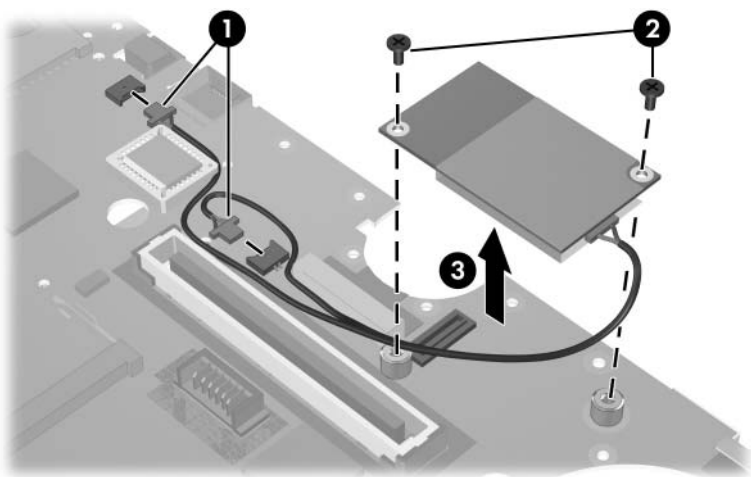

*Removing the Modem Board*

Reverse the above procedure to install the modem board.

## 6.24 RTC Battery

---

### RTC Battery Spare Part Number Information


---

RTC battery	383625-001
-------------	------------

---

1. Prepare the notebook for disassembly ([Section 6.3](#)) and remove the following components:
  - a. Hard drive ([Section 6.4](#))
  - b. Bluetooth module ([Section 6.6](#))
  - c. Keyboard cover ([Section 6.9](#))
  - d. Keyboard ([Section 6.10](#))
  - e. Fan ([Section 6.11](#))
  - f. Heat sink ([Section 6.12](#))
  - g. Display assembly ([Section 6.16](#))
  - h. Button board ([Section 6.17](#))
  - i. Top cover ([Section 6.18](#))
  - j. Speaker ([Section 6.20](#))
  - k. Infrared board ([Section 6.21](#))
  - l. System board ([Section 6.22](#))
2. Turn the system board upside down with the left side toward you.

3. Remove the RTC battery from the system board socket.

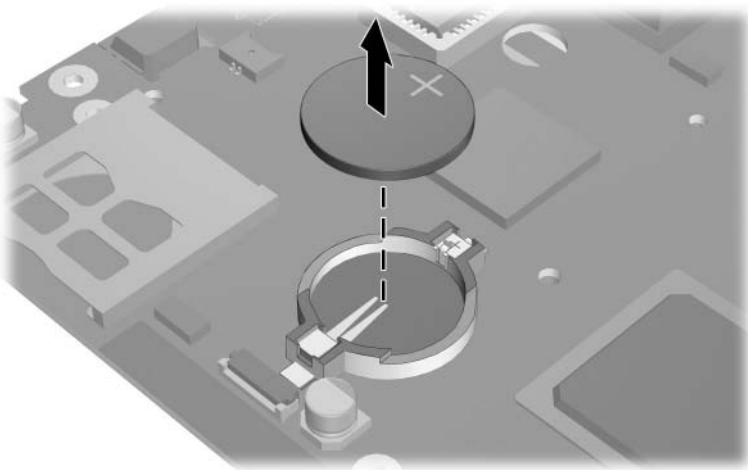

*Removing the RTC Battery*

Reverse the above procedure to install the RTC battery.

---

## Specifications

This chapter provides physical and performance specifications.

---

**Table 7-1**

**Notebook**

Dimensions	Metric	U.S.
Height (front to back)	30.2 to 31.5 mm	1.19 to 1.24 in
Width	285 mm	11.22 in
Depth	235 mm	9 in
Weight	1.81 kg	3.99 lbs
Input Power		
Operating voltage	18.5 V dc @ 3.5 A - 65 W	
Operating current	3.5 A	
Temperature		
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F

---

**Table 7-1**  
**Notebook (Continued)**

---

**Relative humidity** (noncondensing)

Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%

---

**Maximum altitude** (unpressurized)

Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft

---

**Shock**

Operating	125 g, 2 ms, half-sine
Nonoperating	200 g, 2 ms, half-sine

---

**Random Vibration**

Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate



Applicable product safety standards specify thermal limits for plastic surfaces. The notebook operates well within this range of temperatures.

---

**Table 7-2**  
**12.1-inch, XGA, TFT Display**

Dimensions		
Height	20.7 cm	8.1 in
Width	33.1 cm	13.0 in
Diagonal	39.1 cm	15.4 in
Number of colors		Up to 16.8 million
Contrast ratio		150:1
Brightness		150 nits typical
Pixel resolution		
Pitch	0.300 × 0.300 mm	
Format	1024 × 768	
Configuration	RGB vertical stripe	
Backlight		Edge lit
Character display		80 × 25
Total power consumption		3.5 W
Viewing angle		+/-65° horizontal, +/-50° vertical typical

**Table 7-3**  
**Hard Drives**

	80-GB*	60-GB*	40-GB*
<b>Dimensions</b>			
Height	9.5 mm	9.5 mm	9.5 mm
Width	70 mm	70 mm	70 mm
Weight	99 g	102 g	99 g
<b>Interface type</b>	ATA-5	ATA-5	ATA-5
<b>Transfer rate</b>			
Synchronous (maximum)	100 MB/sec	100 MB/sec	100 MB/sec
Security	ATA security	ATA security	ATA security
<b>Seek times</b> (typical read, including setting)			
Single track	3 ms	3 ms	3 ms
Average	13 ms	13 ms	13 ms
Maximum	24 ms	24 ms	24 ms
<b>Logical blocks</b> <sup>†</sup>	156,301,488	117,210,240	78,140,160
<b>Disk rotational speed</b>	5400 rpm	5400 rpm	5400 rpm
<b>Operating temperature</b>	5°C to 55°C (41°F to 131°F)		



Certain restrictions and exclusions apply. Consult Customer Care for details.

\*1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less.

<sup>†</sup>Actual drive specifications may differ slightly.



---

**Table 7-4**  
**Primary 6-cell, Li-Ion Battery Pack**

---

**Dimensions**

Height	2.00 cm	0.79 in
Width	9.40 cm	3.70 in
Depth	13.40 cm	5.28 in
Weight	0.34 kg	0.75 lb

---

**Energy**

Voltage	10.8 V
Amp-hour capacity	4.8 Ah
Watt-hour capacity	52 Wh

---

**Temperature**

Operating	5°C to 45°C	41°F to 113°F
Nonoperating	0°C to 60°C	32°F to 140°F

---

---

**Table 7-5**  
**System DMA**

Hardware DMA	System Function
DMA0	Not applicable
DMA1*	Not applicable
DMA2*	Not applicable
DMA3	Not applicable
DMA4	Direct memory access controller
DMA5*	Available for PC Card
DMA6	Not assigned
DMA7	Not assigned
*PC Card controller can use DMA 1, 2, or 5.	

---

**Table 7-6**  
**System Interrupts**

<b>Hardware IRQ</b>	<b>System Function</b>
IRQ0	System timer
IRQ1	Standard 101-/102-Key or Microsoft Natural Keyboard
IRQ2	Cascaded
IRQ3	Intel 82801DB/DBM USB2 Enhanced Host Controller—24CD
IRQ4	COM1
IRQ5*	Conexant AC—Link Audio Intel 82801DB/DBM SMBus Controller—24C3 Data Fax Modem with SmartCP
IRQ6	Diskette drive
IRQ7*	Parallel port
IRQ8	System CMOS/real-time clock
IRQ9*	Microsoft ACPI-compliant system
IRQ10*	Intel USB UHCI controller—24C2 Intel 82852/82855 GM/GME Graphic Controller Realtek RTL8139 Family PCI fast Ethernet Controller

---

**Table 7-6**  
**System Interrupts (*Continued*)**

IRQ11	Intel USB EHCI controller—24CD Intel USB UHCI controller—24C4 Intel USB UHCI controller—24C7 Intel Pro/Wireless 2200BG TI OHCI 1394 host controller TI PCI1410 CardBus controller
IRQ12	Synaptics PS/2 TouchPad
IRQ13	Numeric data processor
IRQ14	Primary IDE channel
IRQ15	Secondary IDE channel

\*Default configuration; audio possible configurations are IRQ5, IRQ7, IRQ9, IRQ10, or none.



PC Cards may assert IRQ3, IRQ4, IRQ5, IRQ7, IRQ9, IRQ10, IRQ11, or IRQ15. Either the infrared or the serial port may assert IRQ3 or IRQ4.

---

**Table 7-7**  
**System I/O Addresses**

<b>I/O Address (hex)</b>	<b>System Function (shipping configuration)</b>
000 - 00F	DMA controller no. 1
010 - 01F	Unused
020 - 021	Interrupt controller no. 1
022 - 024	Opti chipset configuration registers
025 - 03F	Unused
02E - 02F	87334 "Super I/O" configuration for CPU
040 - 05F	Counter/timer registers
044 - 05F	Unused
060	Keyboard controller
061	Port B
062 - 063	Unused
064	Keyboard controller
065 - 06F	Unused
070 - 071	NMI enable/RTC
072 - 07F	Unused
080 - 08F	DMA page registers
090 - 091	Unused
092	Port A
093 - 09F	Unused
0A0 - 0A1	Interrupt controller no. 2

---

**Table 7-7**  
**System I/O Addresses (*Continued*)**

<b>I/O Address (hex)</b>	<b>System Function (shipping configuration)</b>
0A2 - 0BF	Unused
0C0 - 0DF	DMA controller no. 2
0E0 - 0EF	Unused
0F0 - 0F1	Coprocessor busy clear/reset
0F2 - 0FF	Unused
100 - 16F	Unused
170 - 177	Secondary fixed disk controller
178 - 1EF	Unused
1F0 - 1F7	Primary fixed disk controller
1F8 - 200	Unused
201	Joystick (decoded in ESS1688)
202 - 21F	Unused
220 - 22F	Entertainment audio
230 - 26D	Unused
26E - 26	Unused
278 - 27F	Unused
280 - 2AB	Unused
2A0 - 2A7	Unused
2A8 - 2E7	Unused
2E8 - 2EF	Reserved serial port

---

**Table 7-7**  
**System I/O Addresses (*Continued*)**

<b>I/O Address (hex)</b>	<b>System Function (shipping configuration)</b>
2F0 - 2F7	Unused
2F8 - 2FF	Infrared port
300 - 31F	Unused
320 - 36F	Unused
370 - 377	Secondary diskette drive controller
378 - 37F	Parallel port (LPT1/default)
380 - 387	Unused
388 - 38B	FM synthesizer—OPL3
38C - 3AF	Unused
3B0 - 3BB	VGA
3BC - 3BF	Reserved (parallel port/no EPP support)
3C0 - 3DF	VGA
3E0 - 3E1	PC Card controller in CPU
3E2 - 3E3	Unused
3E8 - 3EF	Internal modem
3F0 - 3F7	“A” diskette controller
3F8 - 3FF	Serial port (COM1/default)
CF8 - CFB	PCI configuration index register (PCIDIVO-1)
CFC - CFF	PCI configuration data register (PCIDIVO-1)

---

**Table 7-8**  
**System Memory Map**

<b>Size</b>	<b>Memory Address</b>	<b>System Function</b>
640 KB	00000000-0009FFFF	Base memory
128 KB	000A0000-000BFFFF	Video memory
48 KB	000C0000-000CBFFF	Video BIOS
160 KB	000C8000-000E7FFF	Unused
64 KB	000E8000-000FFFFF	System BIOS
15 MB	00100000-00FFFFFF	Extended memory
58 MB	01000000-047FFFFFFF	Super extended memory
58 MB	04800000-07FFFFFFF	Unused
2 MB	08000000-080FFFFFFF	Video memory (direct access)
4 GB	08200000-FFFEFFFF	Unused
64 KB	FFFF0000-FFFFFFFF	System BIOS

---




---

## Connector Pin Assignments


---

**Table A-1**  
**Audio-Out (Headphone)**

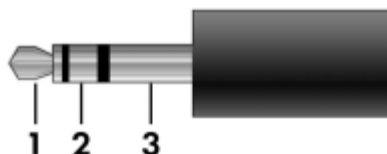


Pin	Signal	Pin	Signal
1	Audio out, left channel	3	Ground
2	Audio out, right channel		

**Table A-2**  
**Audio-In (Microphone)**

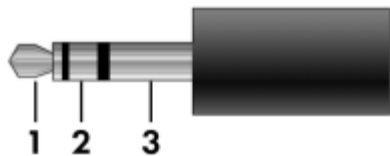


Pin	Signal	Pin	Signal
1	Audio signal in	3	Ground
2	Audio signal in		

**Table A-3**  
**Universal Serial Bus**

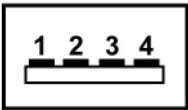

Pin	Signal	Pin	Signal
1	+5 VDC	3	Data +
2	Data –	4	Ground


**Table A-4**  
**External Monitor**

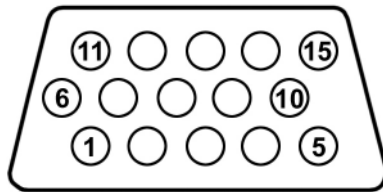

Pin	Signal	Pin	Signal
1	Red analog	9	+5 VDC
2	Green analog	10	Ground
3	Blue analog	11	Monitor detect
4	Not connected	12	DDC 2B data
5	Ground	13	Horizontal sync
6	Ground analog	14	Vertical sync
7	Ground analog	15	DDC 2B clock
8	Ground analog		


---

**Table A-5**  
**RJ-11 (Modem)**

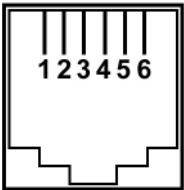

Pin	Signal	Pin	Signal
1	Unused	4	Unused
2	Tip	5	Unused
3	Ring	6	Unused


**Table A-6**  
**RJ-45 (Network)**

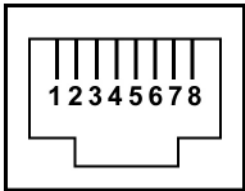

Pin	Signal	Pin	Signal
1	Transmit +	5	Unused
2	Transmit –	6	Receive –
3	Receive +	7	Unused
4	Unused	8	Unused

---

**Table A-7**  
**S-Video-Out**

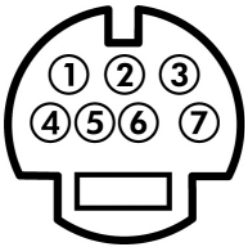

Pin	Signal	Pin	Signal
1	S-VHS color (C) signal	5	TV-CD
2	Composite video signal	6	S-VHS intensity ground
3	S-VHS intensity (Y) signal	7	Composite video ground
4	S-VHS color ground		

---

## Power Cord Set Requirements

### 3-Conductor Power Cord Set

The wide range input feature of the notebook permits it to operate from any line voltage from 100 to 120 or 220 to 240 volts AC.

The power cord set included with the notebook meets the requirements for use in the country where the equipment is purchased.

Power cord sets for use in other countries must meet the requirements of the country where the notebook is used.

## General Requirements

The requirements listed below are applicable to all countries.

- The length of the power cord set must be at least 1.5 m (5.0 ft) and a maximum of 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by each country's power system.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the notebook.



# Country-Specific Requirements

## 3-Conductor Power Cord Set Requirements

Country	Accredited Agency	Applicable Note Number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3



### NOTES:

1. The flexible cord must be <HAR> Type HO5VV-F, 3-conductor, 1.0 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00 mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.

### 3-Conductor Power Cord Set Requirements (*Continued*)

Country	Accredited Agency	Applicable Note Number
The Netherlands	KEMA	1
Norway	NEMKO	1
Sweden	SEMKO	1
Switzerland	SEV	1
United Kingdom	BSI	1
United States	UL	2



#### NOTES:


1. The flexible cord must be <HAR> Type HO5VV-F, 3-conductor, 1.0 mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00 mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.

---

## Screw Listing


This appendix provides specification and reference information for the screws and screw locks used in the notebook. All screws and screw locks listed in this appendix are available in the Screw Kit, spare part number 383556-001.

Table C-1  
Phillips PM2.0x5.0 Screw

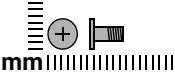	Color	Qty.	Length	Thread	Head Width
	Black	6	5.0 mm	2.0 mm	4.5 mm


Where used:

- ❶ Two screws that secure the hard drive cover to the notebook (documented in [Section 6.5](#))
- ❷ Two screws that secure the memory module compartment drive cover to the notebook (documented in [Section 6.7](#))

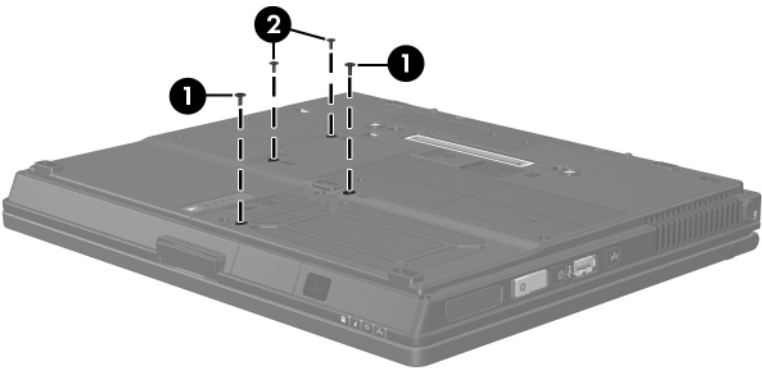


Phillips M2.0x5.0 Screw Locations

**Table C-1**  
**Phillips PM2.0×5.0 Screw (*Continued*)**

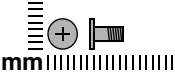 mm	Color	Qty.	Length	Thread	Head Width
	Black	6	5.0 mm	2.0 mm	4.5 mm


**Where used:**

2 screws that secure the Bluetooth cover to the notebook (screws are captured on the cover by C clips; documented in [Section 6.6](#))

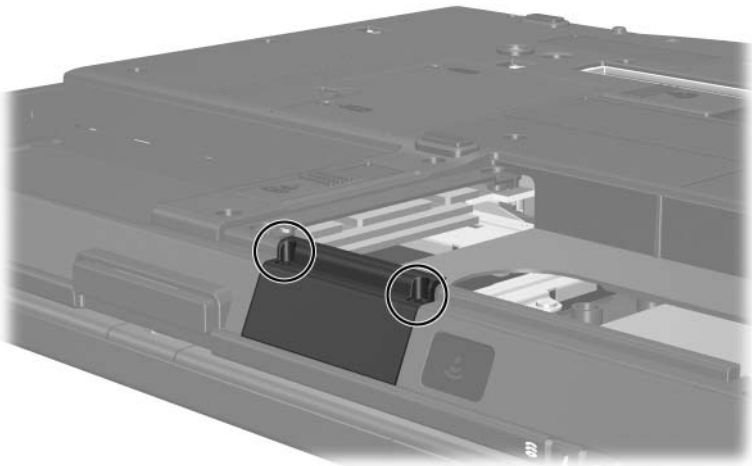

*Phillips M2.0×5.0 Screw Locations*

**Table C-2**  
**Phillips PM2.5×13.0 Spring-Loaded Hard Drive Retention**  
**Screw**

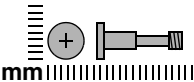	Color	Qty.	Length	Thread	Head Width
	Black	1	13.0 mm	2.5 mm	5.5 mm

**Where used:**


- ① One screw that secures the hard drive frame to the hard drive (documented in [Section 6.4](#))

**Table C-3**  
**Phillips PM3.0×4.0 Screw**

	Color	Qty.	Length	Thread	Head Width
	Silver	4	4.0 mm	3.0 mm	5.0 mm


**Where used:**

- ② Four screws that secure the hard drive frame to the hard drive (documented in [Section 6.4](#))

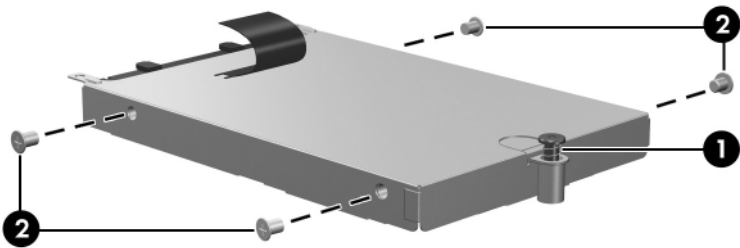


*Phillips M2.5×13.0 and Phillips M3.0×4.0 Screw Locations*

**Table C-4**  
**Phillips PM1.5×3.5 Screw**

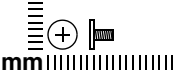 mm	Color	Qty.	Length	Thread	Head Width
	Silver	1	3.5 mm	1.5 mm	4.5 mm

**Where used:**

One screw that secures the TPM security card to the notebook (documented in [Section 6.8](#))

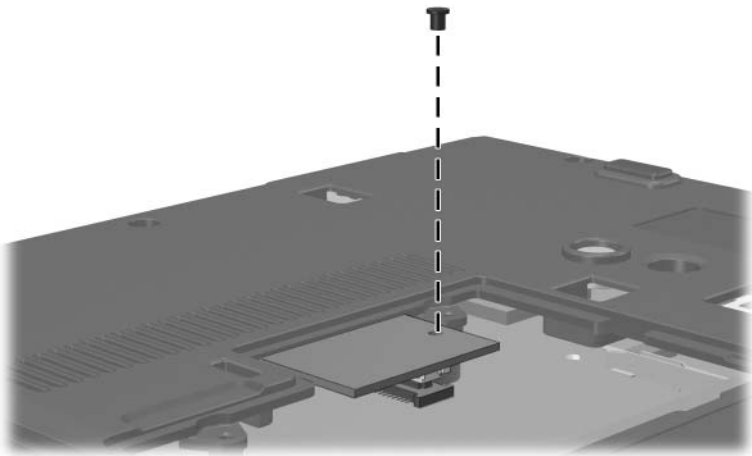


*Phillips M1.5×3.5 Screw Location*

Table C-5  
Torx T8M2.0×18.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Black	8	18.0 mm	2.0 mm	4.5 mm

Where used:


2 screws that secure the keyboard cover to the notebook (documented in [Section 6.9](#))

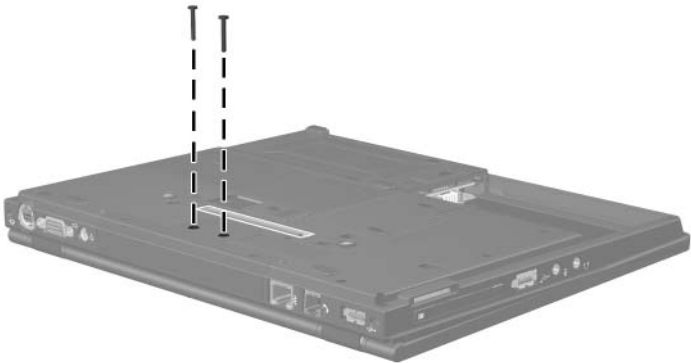


Torx T8M2.0×18.0 Screw Locations




**Table C-5**  
**Torx T8M2.0×18.0 Screw (*Continued*)**

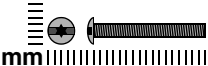
 mm	Color	Qty.	Length	Thread	Head Width
	Black	8	18.0 mm	2.0 mm	4.5 mm
<b>Where used:</b> 2 screws that secure the base enclosure cover to the notebook (documented in <a href="#">Section 6.16</a> )					

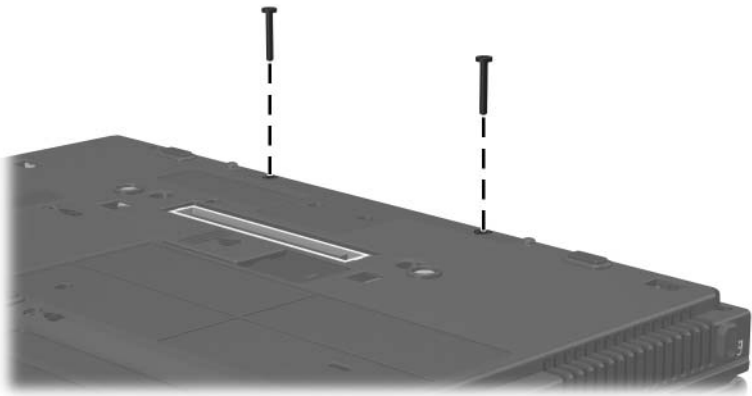

*Torx T8M2.0×18.0 Screw Locations*


Table C-5  
Torx T8M2.0×18.0 Screw (Continued)

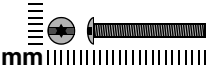
 mm	Color	Qty.	Length	Thread	Head Width
	Black	8	18.0 mm	2.0 mm	4.5 mm
<b>Where used:</b> 2 screws that secure the display assembly to the notebook (documented in <a href="#">Section 6.16</a> )					

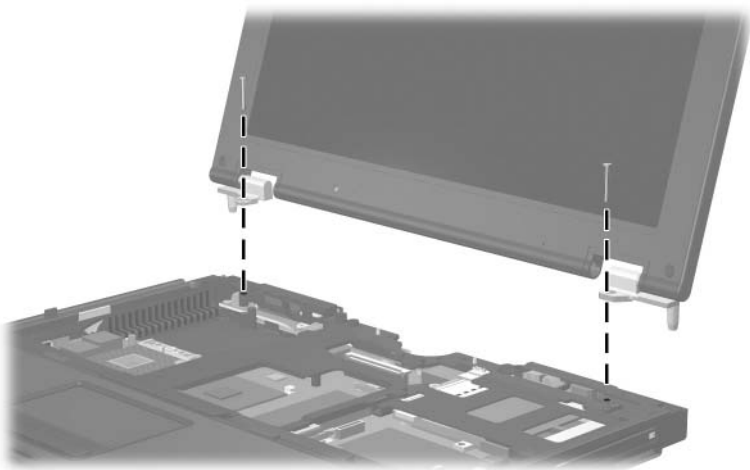

Torx T8M2.0×18.0 Screw Locations


**Table C-5**  
**Torx T8M2.0×18.0 Screw (*Continued*)**

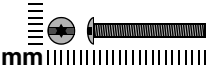 mm	Color	Qty.	Length	Thread	Head Width
	Black	8	18.0 mm	2.0 mm	4.5 mm
<b>Where used:</b> 2 screws that secure the rear keyboard cover to the notebook (documented in <a href="#">Section 6.17</a> )					

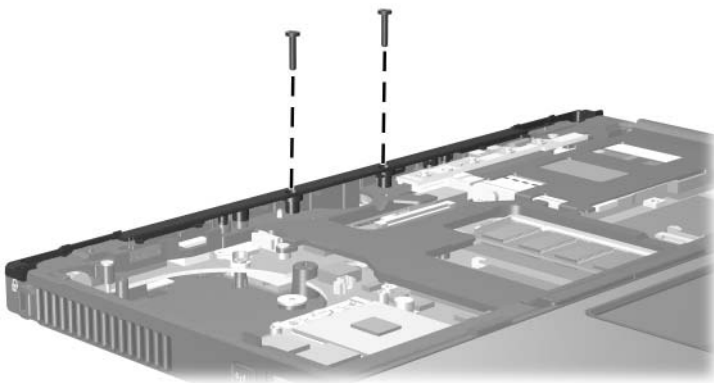


*Torx T8M2.0×18.0 Screw Locations*

Table C-6  
Torx T8M2.0×9.0 Screw

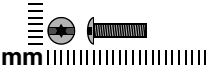 mm	Color	Qty.	Length	Thread	Head Width
	Black	12	9.0 mm	2.0 mm	4.5 mm


Where used:


- ① Three screws that secure the keyboard to the notebook (documented in [Section 6.10](#))
- ② Two screws that secure the display assembly to the notebook (documented in [Section 6.16](#))

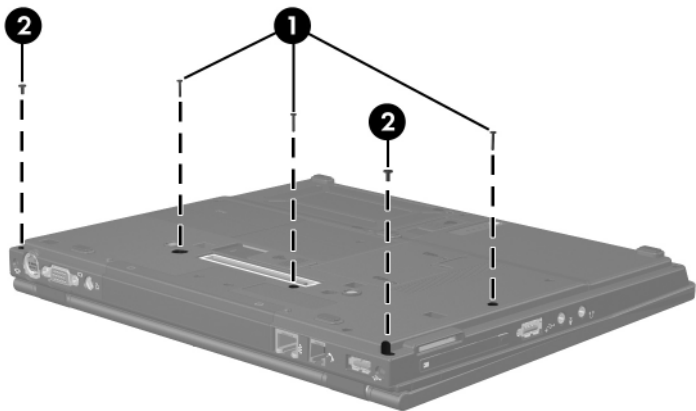

Torx T8M2.0×9.0 Screw Locations

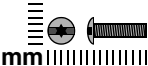

**Table C-6**  
**Torx T8M2.0×9.0 Screw (*Continued*)**

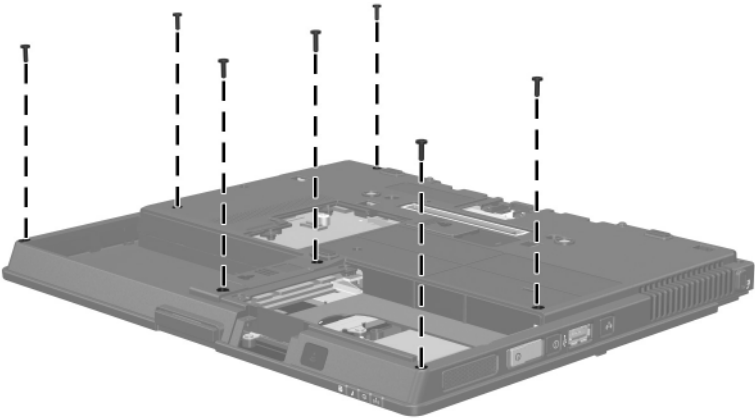 mm	Color	Qty.	Length	Thread	Head Width
	Black	12	9.0 mm	2.0 mm	4.5 mm
<b>Where used:</b> 7 screws that secure the top cover to the notebook (documented in <a href="#">Section 6.18</a> )					



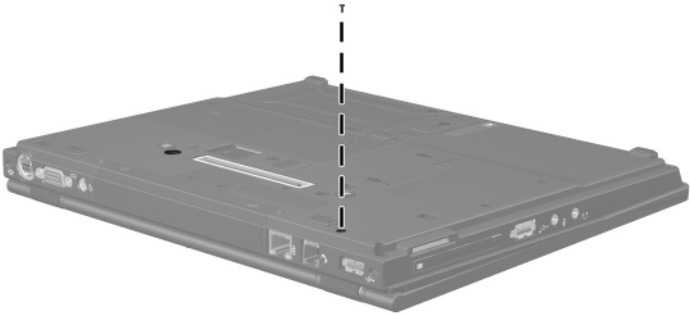
*Torx T8M2.0×9.0 Screw Locations*

Table C-7  
Torx T8M2.0×5.0 Screw

 mm 	Color	Qty.	Length	Thread	Head Width
	Black	8	5.0 mm	2.0 mm	4.5 mm



**Where used:**


One screw that secures the keyboard to the notebook (documented in [Section 6.10](#))



*Torx T8M2.0×5.0 Screw Location*



**Table C-7**  
**Torx T8M2.0×5.0 Screw (*Continued*)**

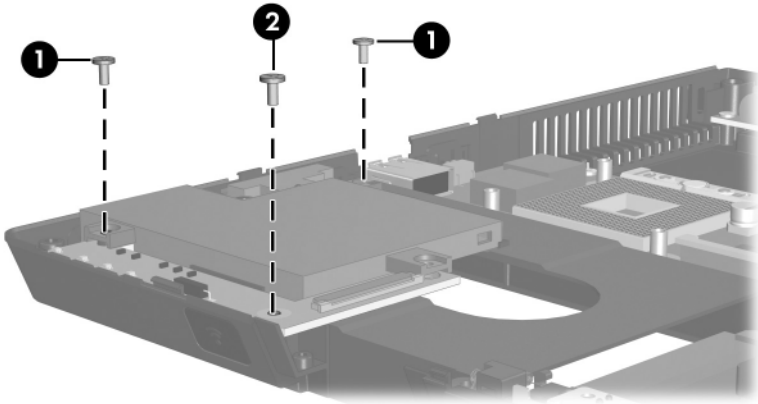 mm 	Color	Qty.	Length	Thread	Head Width
	Black	8	5.0 mm	2.0 mm	4.5 mm
<b>Where used:</b>					
❶ Two screws that secure the speaker to the notebook (documented in <a href="#">Section 6.20</a> )					
❷ One screw that secures the infrared board to the notebook (documented in <a href="#">Section 6.21</a> )					




*Torx T8M2.0×5.0 Screw Locations*

Table C-7  
Torx T8M2.0×5.0 Screw (Continued)

 mm 	Color	Qty.	Length	Thread	Head Width
	Black	8	5.0 mm	2.0 mm	4.5 mm

**Where used:**



4 screws that secure the system board to the notebook (documented in [Section 6.22](#))

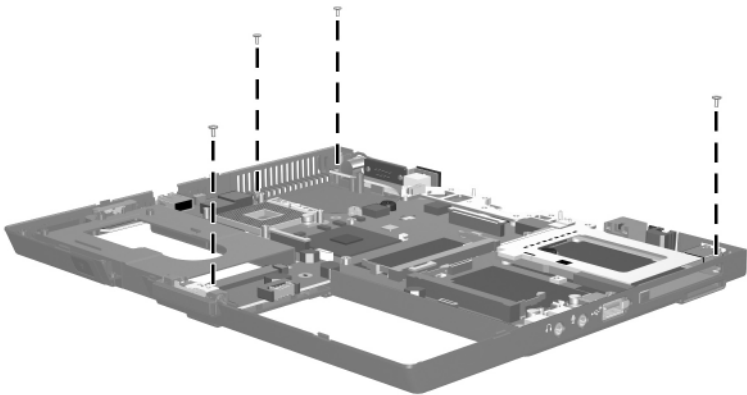

*Torx T8M2.0×5.0 Screw Locations*




**Table C-8**  
**Torx T8M2.0×7.5 Screw**

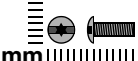 mm 	Color	Qty.	Length	Thread	Head Width
	Silver	4	7.5 mm	2.0 mm	4.5 mm


**Where used:**

3 screws that secure the fan to the notebook (documented in [Section 6.11](#))

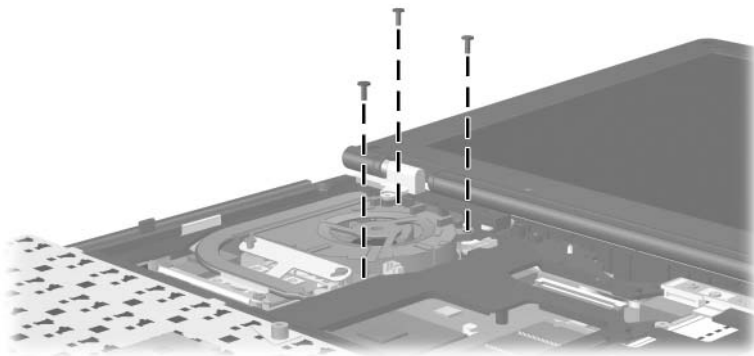


*Torx T8M2.0×7.5 Screw Locations*

Table C-8  
Torx T8M2.0×7.5 Screw (Continued)

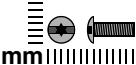 mm	Color	Qty.	Length	Thread	Head Width
	Silver	4	7.5 mm	2.0 mm	4.5 mm


Where used:

One screw that secures the system board and system board spacer to the notebook (documented in [Section 6.22](#))

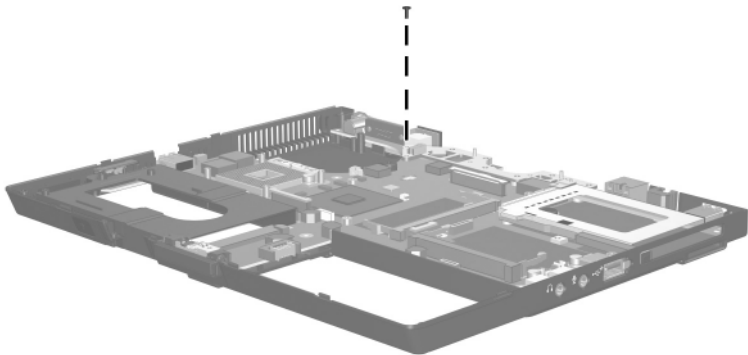


Torx T8M2.0×7.5 Screw Location

**Table C-9**  
**Phillips PM2.5×7.0 Screw**

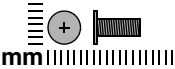 mm	Color	Qty.	Length	Thread	Head Width
	Black	4	7.0 mm	2.5 mm	5.0 mm


**Where used:**

4 screws that secure the heat sink to the notebook (documented in [Section 6.12](#))

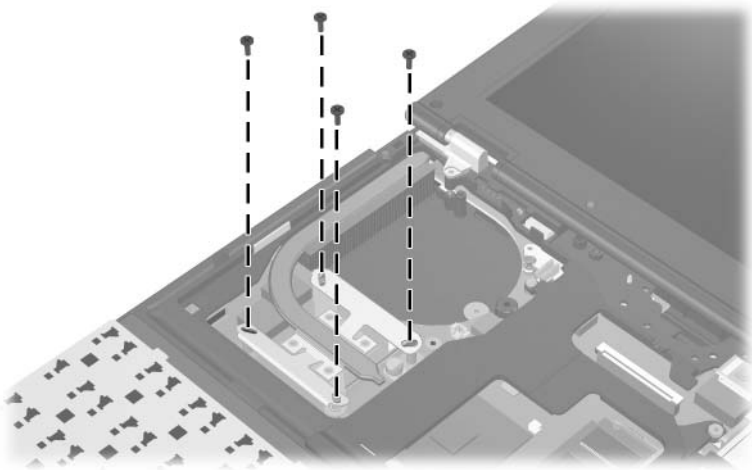


*Phillips M2.5×7.0 Screw Locations*

Table C-10  
Phillips PM2.0×4.0 Screw

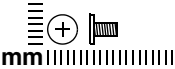 mm	Color	Qty.	Length	Thread	Head Width
	Silver	8	2.0 mm	4.0 mm	4.0 mm


Where used:

- ❶ One screw that secures the button board to the notebook (documented in [Section 6.17](#))
- ❷ One screw that secures the top cover to the notebook (documented in [Section 6.18](#))

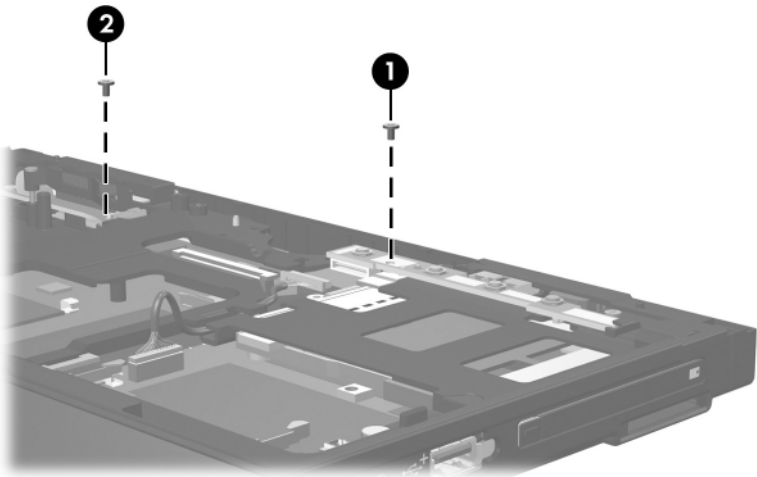


Phillips M2.0×4.0 Screw Locations

**Table C-10**  
**Phillips PM2.0×4.0 Screw (*Continued*)**

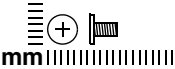 mm	Color	Qty.	Length	Thread	Head Width
	Silver	8	2.0 mm	4.0 mm	4.0 mm


**Where used:**

4 screws that secure the TouchPad bracket to the top cover (documented in [Section 6.19](#))

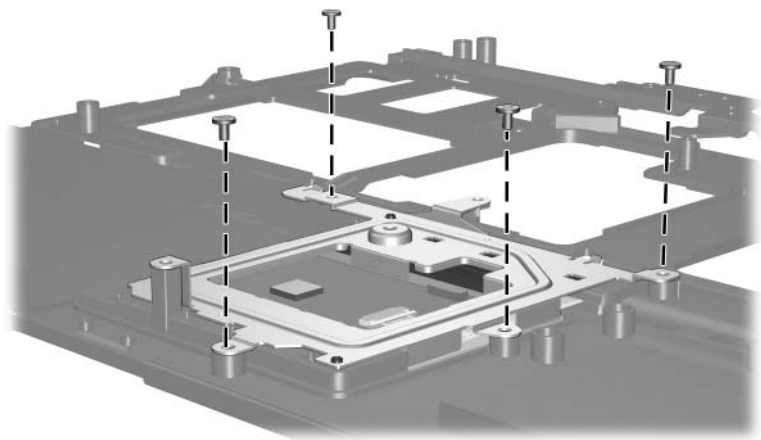


*Phillips M2.0×4.0 Screw Locations*

Table C-10  
Phillips PM2.0×4.0 Screw (*Continued*)

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	8	2.0 mm	4.0 mm	4.0 mm

**Where used:**

2 screws that secure the modem board to the system board (documented in [Section 6.23](#))

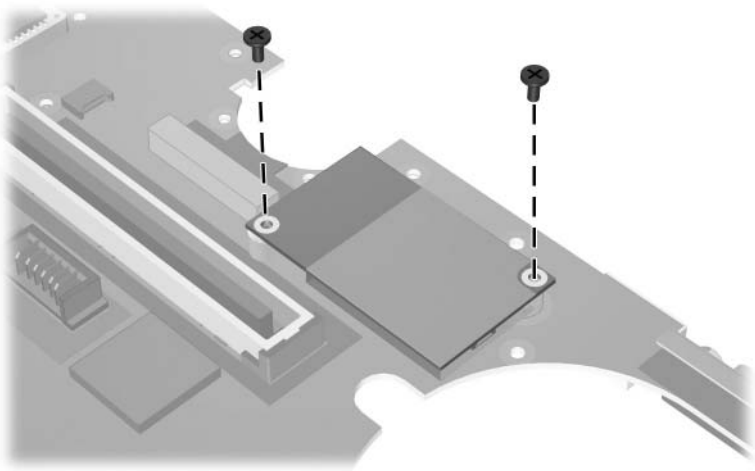

*Phillips M2.0×4.0 Screw Locations*

---

# Index

## A

- adjustable notebook stand,  
spare part number 4-12,  
4-15
- Advanced Docking Station,  
HP, spare part number 4-12,  
4-15
- arrow keys 1-15
- audio troubleshooting 2-23
- audio-in jack
  - location 1-9
  - pin assignments A-2
- audio-out jack
  - location 1-9
  - pin assignments A-1

## B

- base enclosure cover
  - location 1-19
  - spare part number 4-17
- base enclosure, spare part  
number 4-9, 4-17
- battery bay 1-19
- battery light 1-7
- battery pack
  - removal 6-5
  - spare part number 4-9,  
4-17, 6-4
  - specifications 7-5

- battery release latch 1-19
- Bluetooth cable 4-11
- Bluetooth cover
  - illustrated 4-10
  - removal 6-10
- Bluetooth module
  - location 1-7
  - removal 6-10
  - spare part number 4-9,  
4-14, 6-10
- bottom components 1-18
- button board
  - removal 6-41
  - spare part number 4-5,  
4-17, 6-41

## C

- cables, service considerations  
5-2
- caps lock** key 1-15
- components
  - bottom 1-18
  - front 1-6
  - keyboard 1-14
  - left-side 1-10, 1-12
  - rear 1-10, 1-12
  - right-side 1-8
  - top 1-16

- Computer Setup
  - Advanced Menu 2–6
  - File Menu 2–3
  - overview 2–1
  - Security Menu 2–4
  - Tools Menu 2–5
- Computer Setup defaults 2–2
- connector pin assignments
  - audio-in A–2
  - audio-out A–1
  - external monitor A–3
  - monitor A–3
  - RJ-11 A–4
  - RJ-45 A–5
  - S-Video-out A–6
  - Universal Serial Bus (USB) A–2
- connectors, service considerations 5–2
- D**
- design overview 1–20
- disassembly sequence chart 6–2
- diskette drive
  - OS loading problems 2–21
  - precautions 5–3
- display assembly
  - removal 6–34
  - spare part number 4–3, 4–18, 6–34
  - specifications 7–3
- Display Hinge Kit, spare part number 4–3, 4–17, 6–34
- display release button 1–7
- docking connector 1–19
- docking device,
  - troubleshooting 2–16
- Docking Station, HP, spare part number 4–12, 4–15
- drives, preventing damage 5–3
- E**
- electrostatic discharge 5–4, 5–8
- external monitor port, pin assignments A–3
- F**
- fan
  - removal 6–23
  - spare part number 4–5, 4–17, 6–23
- features 1–2
- feet
  - illustrated 4–10
  - locations 6–9
- flowcharts, troubleshooting
  - no audio 2–23, 2–24
  - no network/modem connection 2–28
  - no OS loading 2–17
  - no OS loading from diskette drive 2–21
  - no OS loading from hard drive 2–18, 2–19, 2–20
  - no OS loading from optical drive 2–22
  - no power 2–10, 2–12, 2–13
  - no video 2–14, 2–15
  - nonfunctioning device 2–25
  - nonfunctioning docking device 2–16



- nonfunctioning keyboard
  - 2–26
- nonfunctioning pointing device 2–27
- fn** key 1–15
- front components 1–6
- function keys 1–15
- G**
- grounding equipment and methods 5–7
- H**
- hard drive
  - OS loading problems 2–18
  - precautions 5–3
  - removal 6–6
  - spare part numbers 4–9, 4–17, 6–6
  - specifications 7–4
- hard drive cover
  - illustrated 4–10
  - location 1–19
  - removal 6–6
  - spare part number 4–9, 4–17
- hard drive light 1–7
- headphone jack, pin assignments A–1
- heat sink
  - removal 6–24
  - spare part number 4–7, 4–18, 6–24
- HP Advanced Docking Station, spare part number 4–12, 4–15
- HP Docking Station, spare part number 4–12, 4–15

- I**
- I/O address specifications 7–9
- Info Center button 1–11
- infrared board
  - removal 6–55
  - spare part number 4–17, 6–55
- infrared lens 1–7
- interrupt specifications 7–7
- K**
- keyboard
  - removal 6–19
  - spare part numbers 4–3, 4–15, 4–16, 6–19
  - troubleshooting 2–26
- keyboard components 1–14
- keyboard cover
  - removal 6–16
  - spare part number 4–3, 4–17, 6–16
- keypad keys 1–15
- L**
- Label Kit, spare part number 4–12, 4–18
- LED board cable 4–11
- left-side components 1–10, 1–12
- M**
- memory map specifications 7–12
- memory module
  - removal 6–12, 6–30
  - spare part numbers 4–5, 4–17, 4–18, 6–12, 6–30

- memory module compartment
  - 1–19
- memory module compartment cover
  - illustrated 4–10
  - removal 6–13
- microphone jack, pin
  - assignments A–2
- Mini PCI communications card
  - removal 6–32
  - spare part numbers 4–5, 4–7, 4–13, 4–14, 4–15
- Miscellaneous Cable Kit
  - components 4–11
  - spare part number 4–11, 4–17
- Miscellaneous Plastics Kit (for use with Docking Station),
  - spare part number 4–12, 4–15
- Miscellaneous Plastics/Hardware Kit
  - components 4–10
  - spare part number 4–9, 4–10, 4–18
- modem board
  - removal 6–61
  - spare part number 4–9, 4–17, 6–61
- modem cable 4–11
- modem jack, pin assignments
  - A–4
- modem, troubleshooting 2–28
- monitor port
  - location 1–13
  - pin assignments A–3

**N**

- network jack, pin assignments
  - A–5
- network, troubleshooting 2–28
- nonfunctioning device,
  - troubleshooting 2–16, 2–25
- notebook feet
  - illustrated 4–10
  - locations 6–9
- notebook specifications 7–1
- num lock** key 1–15

**O**

- optical drive
  - OS loading problems 2–22
  - precautions 5–3

**P**

- packing precautions 5–5
- PC Card slot 1–9
- PC Card slot eject button 1–9
- PC Card slot space saver 4–10
- plastic parts 5–2
- pointing device,
  - troubleshooting 2–27
- pointing stick 1–17
- pointing stick buttons 1–17
- power connector 1–13
- power cord
  - set requirements B–2
  - spare part numbers 4–12, 4–14
- power management features
  - 1–5
- power supply, spare part
  - number 4–12, 4–13
- power switch 1–11
- power, troubleshooting 2–10

- power/standby light 1–6
- Presentation Mode button 1–17
- primary battery release latch 1–19
- processor
  - removal 6–28
  - spare part numbers 4–7, 4–18, 6–28

## **R**

- rear components 1–10, 1–12
- rear keyboard cover
  - removal 6–41
  - spare part number 4–5, 4–17, 6–41
- removal/replacement
  - preliminaries 5–1
  - procedures 6–1
- right-side components 1–8
- RJ-11 cable 4–11
- RJ-11 jack
  - location 1–13
  - pin assignments A–4
- RJ-45 jack
  - location 1–13
  - pin assignments A–5
- RTC battery
  - removal 6–63
  - spare part number 4–9, 4–18, 6–63

## **S**

- Screw Kit
  - contents C–1
  - spare part number 4–13, 4–18, C–1

- screw listing C–1
- SD Card slot 1–9
- security cable slot 1–10
- serial number 4–1, 6–1
- service considerations 5–2
- speaker
  - location 1–11
  - removal 6–53
  - spare part number 4–9, 4–18, 6–53
- specifications
  - battery pack 7–5
  - display 7–3
  - hard drive 7–4
  - I/O addresses 7–9
  - interrupts 7–7
  - memory map 7–12
  - notebook 7–1
  - system DMA 7–6
- static shielding materials 5–8
- S-Video-out jack
  - location 1–13
  - pin assignments A–6
- system board
  - removal 6–57
  - spare part number 4–7, 4–17, 6–57
- system DMA 7–6
- system memory map 7–12

## **T**

- tools required 5–1
- top components 1–16
- top cover
  - removal 6–45
  - spare part number 4–5, 4–18, 6–45

- TouchPad
  - location 1–17
  - removal 6–49
  - spare part number 4–5, 4–18, 6–49
- TouchPad buttons 1–17
- TouchPad cable 4–11
- TouchPad scroll zone 1–17
- TPM security module
  - removal 6–15
  - spare part number 4–9, 4–18, 6–15
- transporting precautions 5–5
- travel battery connector 1–19
- troubleshooting
  - audio 2–23
  - Computer Setup 2–2
  - docking device 2–16
  - flowcharts 2–7
  - keyboard 2–26
  - modem 2–28
  - network 2–28
  - nonfunctioning device 2–16, 2–25
  - OS loading 2–17
  - overview 2–1
  - pointing device 2–27
  - power 2–10
  - video 2–14

## U

- Universal Serial Bus (USB)
  - port
    - location 1–9, 1–11, 1–13
    - pin assignments A–2

## V

- vents 1–10, 1–17, 1–19
- video troubleshooting 2–14
- volume buttons 1–17

## W

- Windows applications key 1–15
- Windows logo key 1–15
- wireless button 1–11
- wireless light 1–6
- workstation precautions 5–6